


OilTector[®]

Quick Start
1 Phase Simplex Auto-Valve

Liberty Pumps[®]

Use the (Installation Example) diagram **1** on the bottom right of this page as a reference to match up each component included in this system to the correct terminal blocks inside the control panel **A** shown in diagram **2**

Follow steps **3** through **11** on this page and in order. Note for step **8** on bottom.

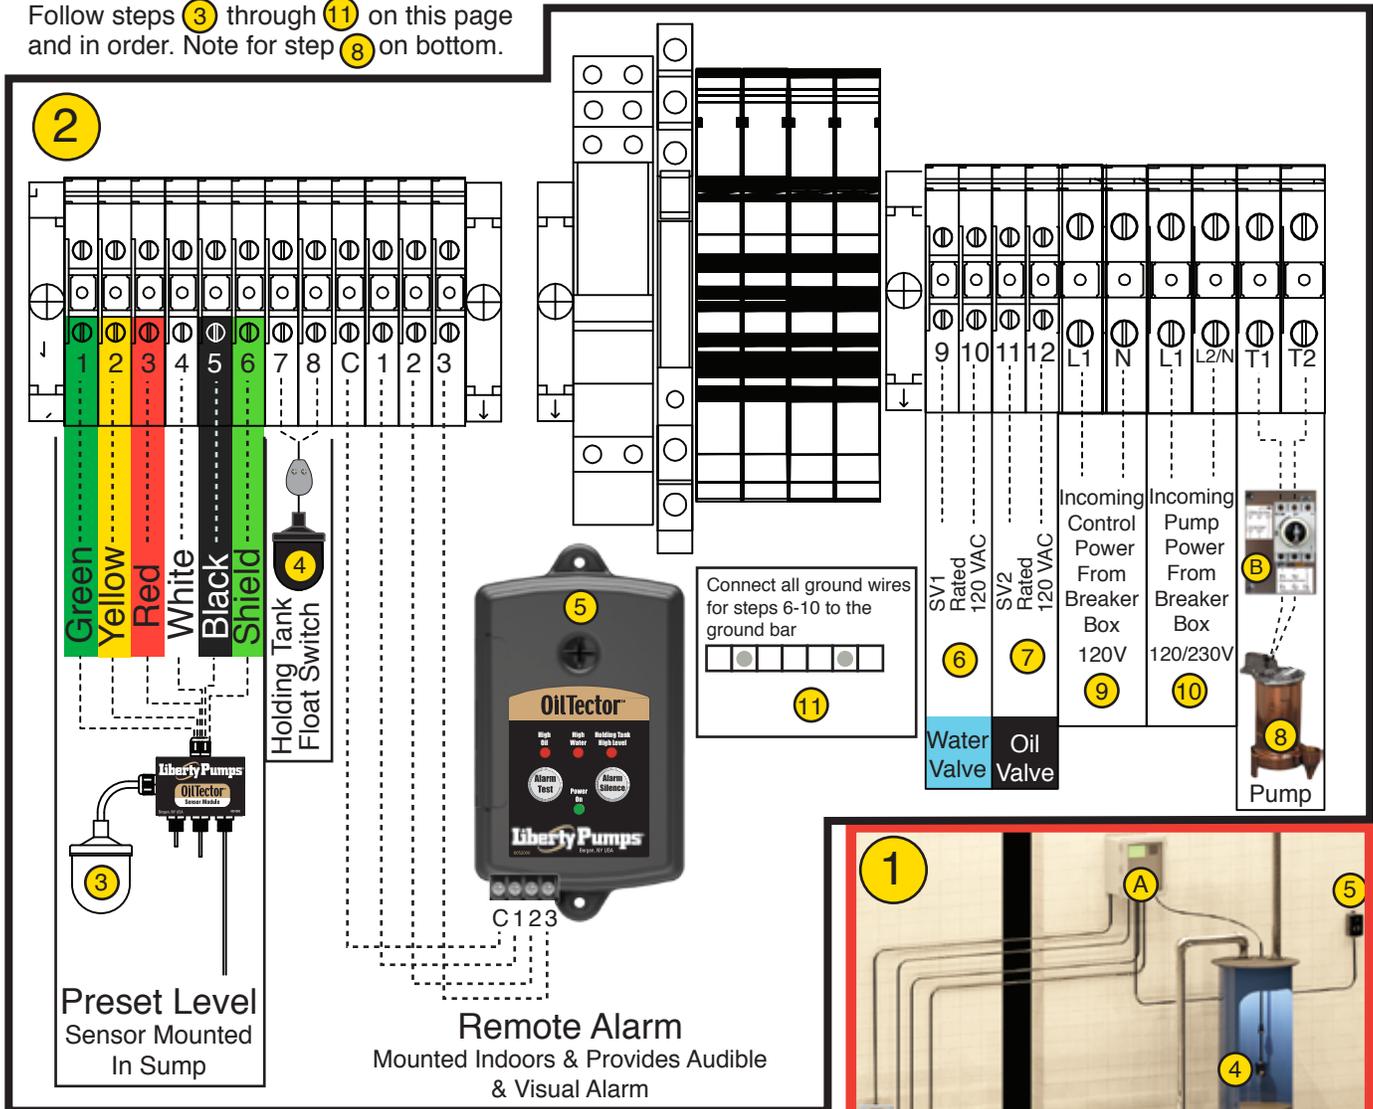

Note: The pump **8** is wired to the bottom of the disconnect switch in the junction box **B** then the top of the disconnect switch in the junction box is wired to the control panel **A** Terminals T1 & T2.

Liberty Pumps[®]


QUICK START

USE PAGE 2 FOR ROUND SHAPED HOLDING TANKS (Follow Steps A-0)


USE PAGE 3 FOR RECTANGLE OR SQUARE SHAPED HOLDING TANKS (Follow Steps A-0)

A. Turn On Power To The Control Panel


B. Press (Configure Oil Tank)

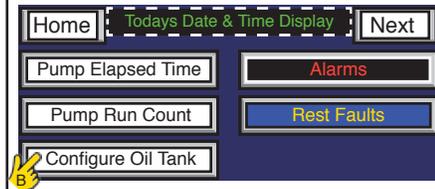


C. Press (Enter Pump GPM)

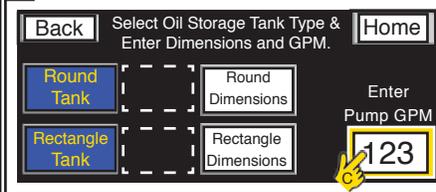


D1. Enter Pump Gallons Per Minute From Pump Nameplate.
D2. Press ENT

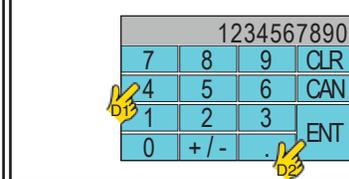

E1. Press (Round Tank)
E2. Press (Round Dimensions)

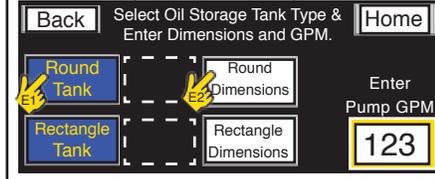


F1. Press (Diameter Inches) Button. **F2.** Enter Oil Tank Diameter. Press ENT. Repeat For Depth.

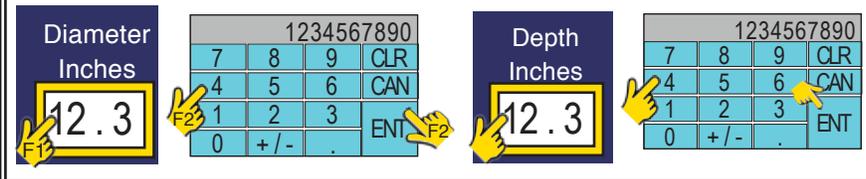


G1. Press (Back) Button On Round Tank Screen




G2. Press (Back) On Select Oil Storage Tank Screen

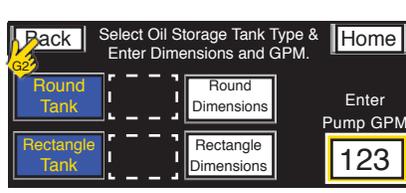

G3. Press (Next) On Today's Date Screen

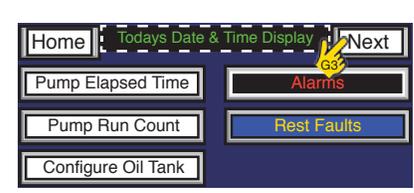


H. Press (Maintenance Menu) Button

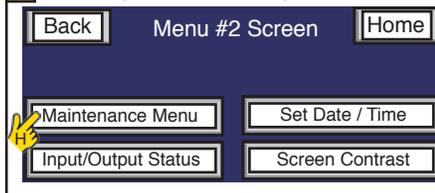


I1. Enter Password (1001) as shown below.

- I2. Press Arrow Keys Until 1 Is Highlighted
- I3. Press ENT (1st * appears)
- I2. Press Arrow Keys Until 0 Is Highlighted
- I3. Press ENT (2nd * appears)
- I2. Press Arrow Keys Until 0 Is Highlighted
- I3. Press ENT (3rd * appears)
- I2. Press Arrow Keys Until 1 Is Highlighted
- I3. Press ENT (4th * appears)
- I2. Press Arrow Keys Until OK Is Highlighted
- I3. Press ENT (You Will Be On Screen)

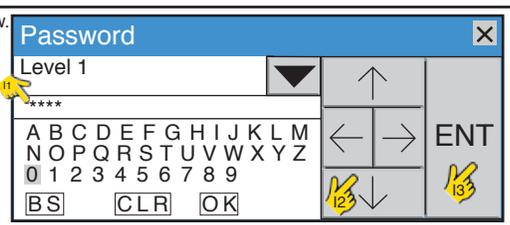


J. Press Pump / Valve To Verify Position Of Switches.
Note: Off Delay Is Preset To 10 Seconds.

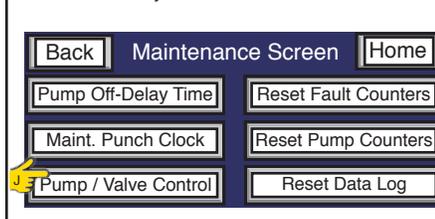

N1. Place All Switches In Auto
N2. Press Home Button



O. Place Pump HOA'S into Auto Mode And Do The Bucket Test (See Page 20 Of Main Manual)

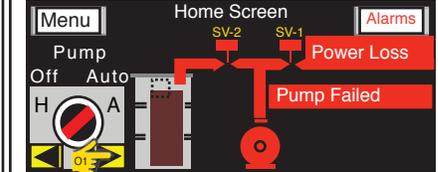

After completing step **O** you have finished the quick start and are on the Home Screen

- Back** Will Always Take You To The Previous Screen
- Home** Will Always Take You To The Home Screen

OilTector[®]

Quick Start

1 Phase Simplex Auto-Valve



QUICK START - FOLLOW STEPS A-O IF USING A SQUARE OR RECTANGLE TANK

A. Turn On Power To The Control Panel

B. Press (Configure Oil Tank)

C. Press (Enter Pump RPM)

D. D1. Enter Pump Gallons Per Minute From Pump Nameplate. D2. Press ENT

E. E1. Press (Rectangle Tank) E2. Press (Rectangle Dimensions)

F. F1. Press (Length Inches) Button. F2. Enter Length. Press ENT. Repeat For Width & Depth.

G1. Press (Back) Button On Square/Rectangle Screen

G2. Press (Back) On Select Oil Storage Tank Screen

G3. Press (Next) On Today's Date Screen

H. Press (Maintenance Menu) Button

I. I1. Enter Password (1001) as shown below. I2. Press Arrow Keys Until 1 Is Highlighted I3. Press ENT (1st * appears) I2. Press Arrow Keys Until 0 Is Highlighted I3. Press ENT (2nd * appears) I2. Press Arrow Keys Until 0 Is Highlighted I3. Press ENT (3rd * appears) I2. Press Arrow Keys Until 1 Is Highlighted I3. Press ENT (4th * appears) I2. Press Arrow Keys Until OK Is Highlighted I3. Press ENT (You Will Be On Screen)

J. Press Pump / Valve To Verify Position Of Switches. Note: Off Delay Is Preset To 10 Seconds.

N. N1. Place All Switches In Auto N2. Press Home Button

O. Place Pump HOA'S into Auto Mode And Do The Bucket Test (See Main Manual)

After completing step **O** you have finished the quick start and are on the Home Screen

Back Will Always Take You To The Previous Screen

Home Will Always Take You To The Home Screen