




# Whole House Pre-filter Replacement

Replace the pre-filter if there is a noticeable reduction of flow through the filter system, or if the pre-filter cartridge becomes heavily discolored.

(Every 1-3 months depending on sediment levels)

## How to change the pre-filter:

- Shut filter system off at the shut off valve (A). Relieve pressure in the water line by running water for 2-3 minutes at the nearest faucet.
- Press the pressure release button (B).
- Place a bucket under the pre-filter to catch water. Remove the clear container by turning clockwise to loosen, using the wrench supplied with your filter system. Remove the used filter.
- If necessary, clean the inside with mild soapy water, rinse and dry.
- Clean the housing o-ring and relubricate it with petroleum jelly or silicone grease. Seat the o-ring into the proper groove and reattach the sump (C).
- After reassembly, turn the system back on at the shut off valve.
- Run water, with the bucket still under the pre-filter. Check for leaks.

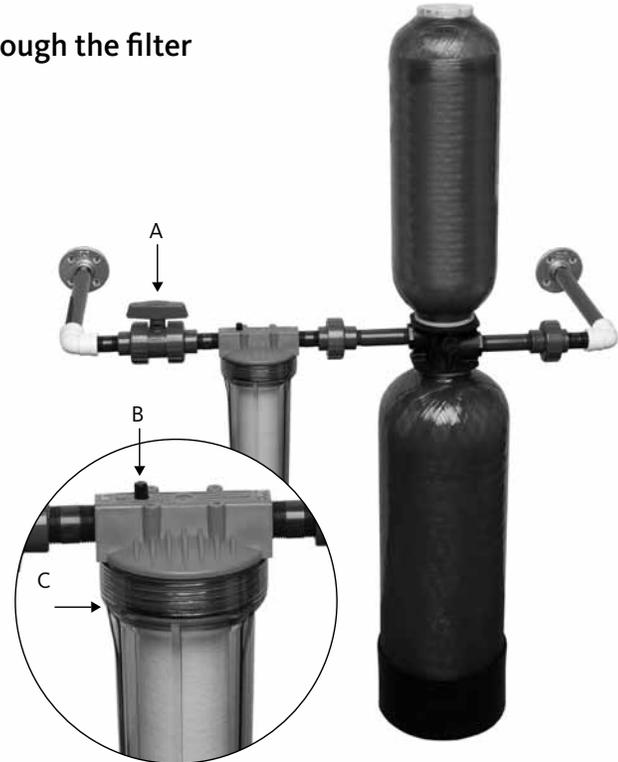

## Performance data

Rated service flow: 7 gpm (26.25 l p/min)

Capacity: 300,000 gal (1,136,000 l) or 3 years

Operating pressure range: 20-100 psi (1.4 - 6.0 bar)

Operating temperature range: 40° - 100°F (4° - 38°C)