



Parts List for DCS310S1 Type 1

Item Number	Part Number	Description	Qty Required
1	N127602	HOUSING ASSEMBLY	1
2	N127571	HANDLE HOUSING	1
4	N131523	SHAFT/BRG.ASSY	1
5	N131525	SWITCH,VAR.SPD.	1
6	N096581	SHOE ASSEMBLY	1
7	N098006	LEVER ASSEMBLY	1
8	N101648	SUPPORT BRACKET	1
9	N114801	LED,COATED	1
10	N131526	LOCK,PIVOT	1
14	N098461	LOCK BAR	1
15	N116071	RUBBER SEAL	1
16	N116072	RUBBER SEAL	1
17	N116073	SEAL	2
18	N015397	PLUG	2
19	330065-31	SCREW	2
20	N086775	SCREW	2
21	682211-00	SCREW,TORX	14
22	N131521	DRIVE BEARING	1
23	N031603	RUBBER PLUG	2
24	N108470	RETAINER RING	1
31	N131518	MOTOR ASSEMBLY	1
32	N131520	GEAR CASE ASSY	1
33	N131522	SHAFT & CLAMP ASSY	1
34	N131519	GEAR ASSEMBLY	1
35	098091-10	SCREW	3
36	330045-43	SCREW,TAPTITE	2
40	N143836	NAMEPLATE	1

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenet.com for current parts information.

Parts List for DCS310S1 Type 1

Item Number	Part Number	Description	Qty Required
41	N143837	WARNING LABEL	1
42	N143839	ID LABEL	1
43	N143838	LABEL	1
856	N065013-32	RECIP. BLADE	1
856	DW4810	4IN 18TPI STRAIG BK BLADE	1
862	N131926	TOOL BAG	1
866	DCB120	BATTERY PACK	1
871	DCB100	CHARGER	1

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenet.com for current parts information.