


www.ferguson.com

SPARE PARTS

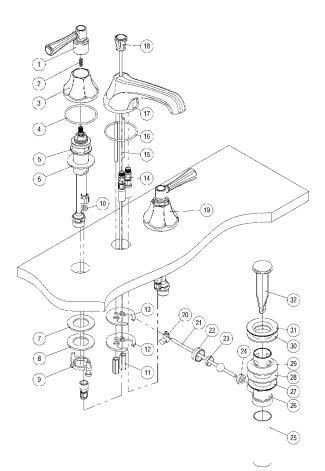

1	LEVER
	SPRING
3	escutcheon
4	'O' RING
5	SIDE VALVE
6	RUBBER WASHER
7	RUBBER WASHER
8	STEEL WASHER
9	MOUNTING NUT
10	RUBBER WASHER
11	THREADED NUT
12	CRESCENT STEEL WASHER
13	CRESCENT RUBBER WASHER
14	M10-M15 HOSE
15	MOUNTING STUDS X 2
16	'O' RING

17	LAVATORY DECK MOUNTED SPOUT
18	POP-UP WASTE ROD
19	handle assembly
20	BRASS CONNECTOR
21	JUMPER POLE
22	KNURLED CAP NUT
23	BREARING WASHER
24	BREARING WASHER
25	TAIL TUBE
26	POP-UP WASTE BODY
27	MOUNTING NUT
28	PLASTIC FRICTION WASHER
29	CONE WASHER
30	UPPER RUBBER WASHER
31	POP-UP ESCUTCHEON
32	JUMPER