

B



**JAY R. SMITH MFG. CO.®**

MEMBER OF MORRIS GROUP INTERNATIONAL™  
POST OFFICE BOX 3237  
MONTGOMERY, ALABAMA 36109-0237 (USA)  
TEL: 334-277-8520 FAX: 334-272-7396 www.jrsmith.com



MEMBER OF:

LOCATION

DRAWING NUMBER  
S5618SIZE  
ASCALE:  
NONEDATE:  
08/06/09APPROVED BY:  
CLCHECKED BY:  
CLDRAWN BY:  
JJ


WE CAN ASSUME NO RESPONSIBILITY FOR USE OF SUPERSEDED OR VOID DATA

DIMENSIONS ARE SUBJECT TO MANUFACTURERS TOLERANCE AND CHANGE WITHOUT NOTICE

# NARROW WALL WARM CLIMATE HYDRANT


## EXPOSED HOSE CONNECTION WITH INTEGRAL VACUUM BREAKER

**FUNCTION:** For installation in interior or exterior walls of building where an exposed hose connection is acceptable and there is no danger of freezing. Hydrant features an integral type vacuum breaker. Removable key prevents unauthorized use.

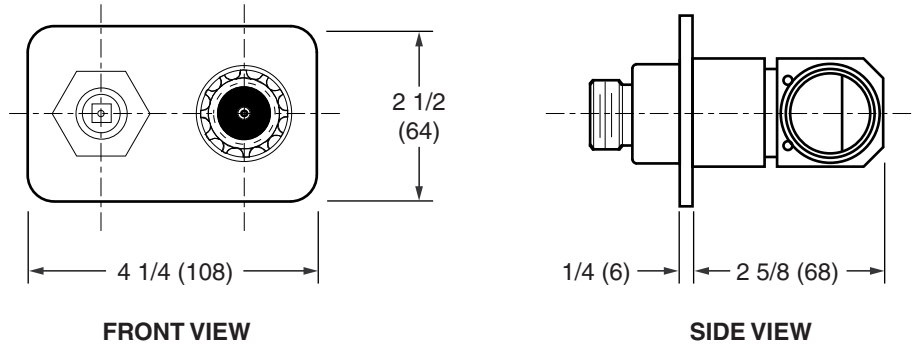

### NOTES:

1. Recommended wall opening:  
2 (51) x 3 3/4 (95).
2. All Jay R. Smith Hydrants are manufactured with "NO LEAD" brazing rings and USDA approved lubricants.
3. The AB1953, California Lead Law, and NSF/ANSI Standard 61-2008 - Drinking Water System Components are not applicable to Jay R. Smith hydrants as they do not convey/dispense water for human consumption through drinking or cooking.
4. Dimensions shown in parentheses are in millimeters.
5. **FOR IRRIGATION PURPOSES ONLY.**

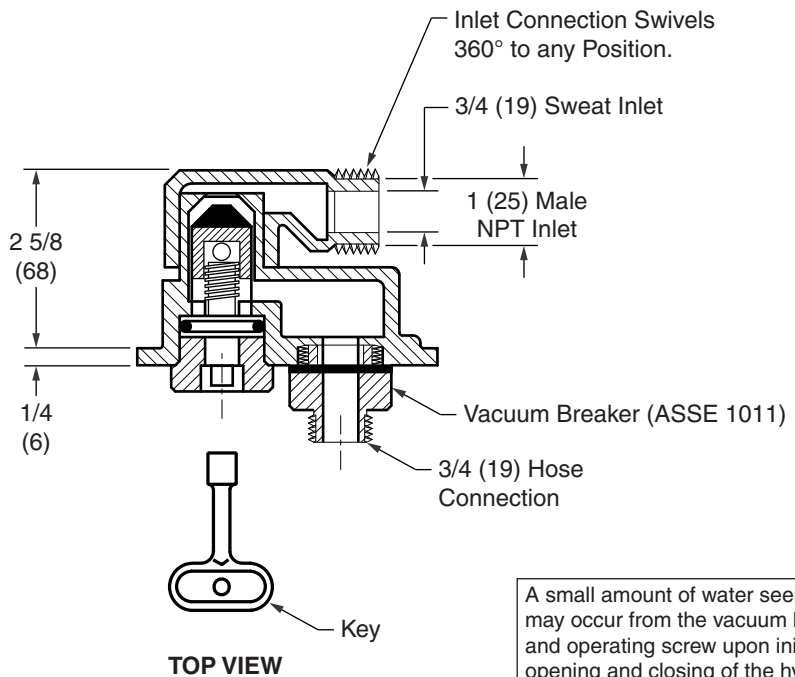

A small amount of water seepage may occur from the vacuum breaker and operating screw upon initial opening and closing of the hydrant. This is normal operation.

### REGULARLY FURNISHED:

All Bronze Warm Climate Hydrant with Chrome Plated Face, Hose Connection and Integral ASSE 1011 Vacuum Breaker, 360° Swivel Inlet Connection and "T" Handle Key.

5618

FIGURE NUMBER

B  
A2-4-13  
10-7-09Revised Notes  
Revised NotesTBW  
RNCL  
CLWEIGHT  
POUNDSVOLUME  
CUBIC FEET

FIGURE NUMBER

5618

REV.

DATE

DESCRIPTION

BY


CKD. BY




MEMBER OF:

LOCATION

# PARTS LIST WITH MAINTENANCE INSTRUCTIONS

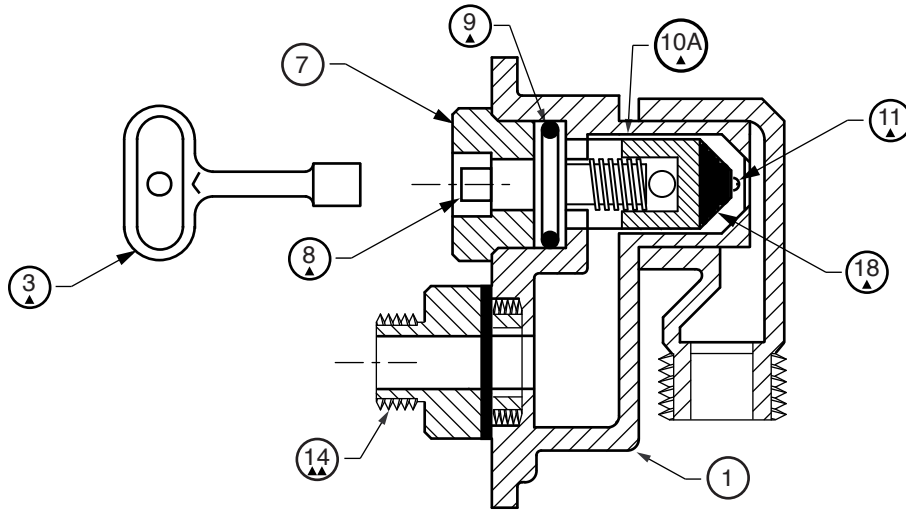

▲▲ THESE REPLACEMENT PARTS AVAILABLE IN HPRK-18VB

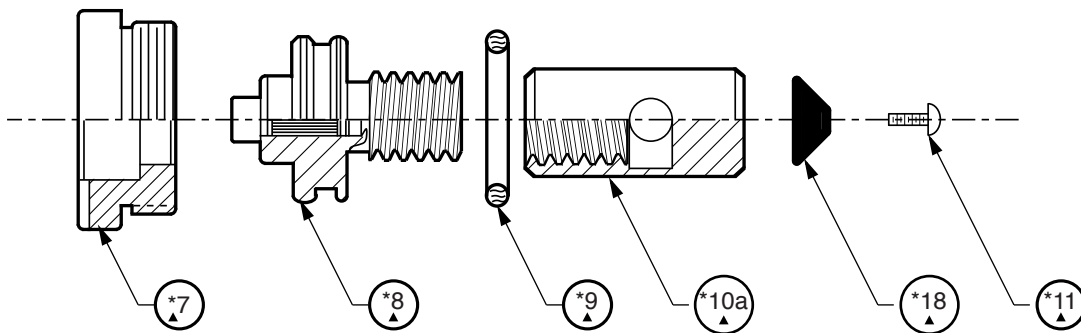

▲ THESE REPLACEMENT PARTS AVAILABLE IN HPRK-18

**MAINTENANCE INSTRUCTIONS:**

1. Shut off water supply.
2. Remove face nut.
3. Pull stem out for complete access to all working parts.
4. Check all working parts for replacement.
5. Replace complete stem assembly and face nut.

\* These Parts are accessible from face of hydrant by removing face nut.

HYDRANT PARTS LIST			
No.	Description	No.	Description
1	Head/Casing Assembly	10a	Coupling
3	Key	11	Washer Screw
7	Face Nut	14	Vacuum Breaker
8	Operating Screw	18	Plunger Washer
9	Operating Screw "O" Ring		

DRAWING NUMBER  
S5618BS

SIZE  
A

SCALE:  
NONE

DATE:  
08/26/09

APPROVED BY:  
CL

CHECKED BY:  
CL

DRAWN BY:  
JJ

5618BS

WE CAN ASSUME NO RESPONSIBILITY FOR USE OF SUPERSEDED OR VOID DATA

DIMENSIONS ARE SUBJECT TO MANUFACTURERS TOLERANCE AND CHANGE WITHOUT NOTICE

A	12-3-12	Rev. Replacement Parts	TBW	CL	WEIGHT POUNDS	VOLUME CUBIC FEET	FIGURE NUMBER
REV.	DATE	DESCRIPTION	BY	CKD. BY			<b>5618BS</b>