
## OMNI R<sup>2</sup>: 1 1/2" and 2"

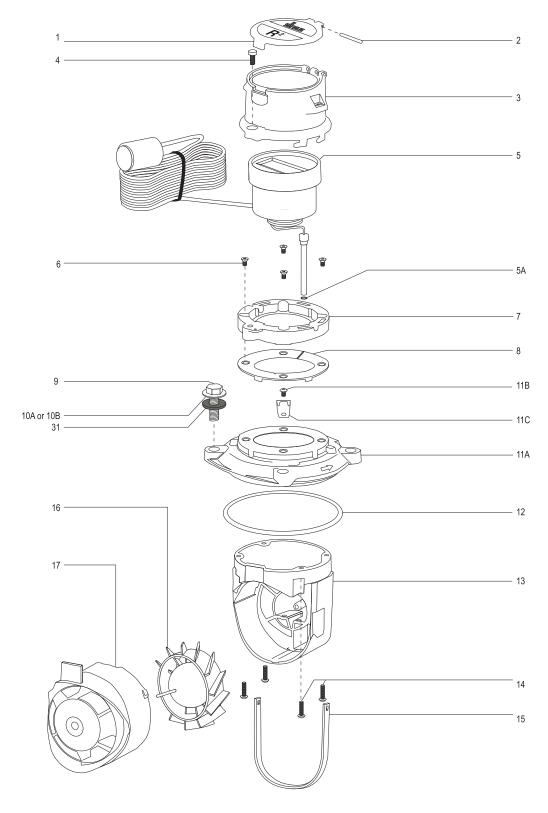




## OMNI R2: 1-1/2" and 2"





OMNI R2: 1-1/2" and 2"

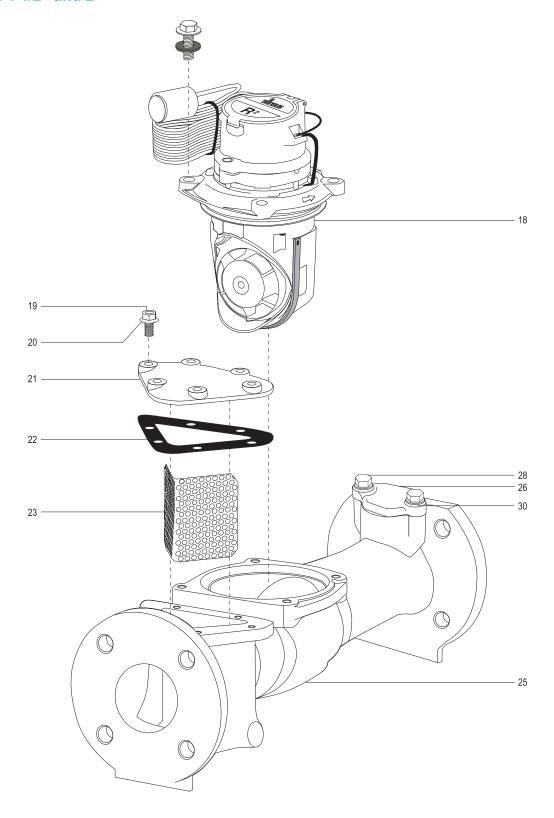



## OMNI R2: 1-1/2" and 2"

ILL. No.	Name of Part
1	R2 Bonnet Lid
2	Hinge Pin
3	Bonnet
4	Bonnet Seal Screw
5	Register w/ AMR and Pulse Wire
5A	Register Probe O-Ring
6	Locking Ring Screw
7	Locking Ring
8	Fixing Ring
9	Chamber Cover Bolt
10A	Chamber Cover Bolt Washer
10B	Chamber Cover Bolt Washer 316SS
11A	Chamber Cover
11B	Screw — Spring Hold Down
11C	Spring
12	Chamber Cover O-Ring
13	Measuring Insert with Brg and Thrust Assy
14	Measuring Chamber Screw
15	Chamber Seal Gasket
16	R2 Rotor and Shaft Assy
17	OMNI Balance Plate w/brg and thrust assy
18	Measuring Chamber Assy
19	Strainer Cover Cap Screw
20	Strainer Cover Bolt Washer
21	Strainer Cover
22	Strainer Cover Gasket
23	Strainer Screen
24	Test Plug — Stainless Steel (not shown)
25	R2 Maincase
26	Test Port Cover
27	Test Port Adapter (not shown)
28	Test Port Cap Screws
29	Test Port O-ring (not shown)
30	Test Port Washer
31	Chamber Cover and Strainer Cover Washer — Black Nylon

© All products purchased and services performed are subject to Sensus' terms of sale, available at either; http://na.sensus.com/TC/TermsConditions.pdf or 1-800-METER-IT. Sensus reserves the right to modify these terms and conditions in its own discretion without notice to the customer.

This document is for informational purposes only, and SENSUS MAKES NO EXPRESS WARRANTIES IN THIS DOCUMENT. FURTHERMORE, THERE ARE NO IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION, WARRANTIES AS TO FITNESS FOR A PARTICULAR PURPOSE AND MERCHANTABILITY. ANY USE OF THE PRODUCTS THAT IS NOT SPECIFICALLY PERMITTED HEREIN IS PROHIBITED.

