

WALK-IN BATHTUB SERIES

INSTALLATION AND OPERATION INSTRUCTIONS

Jacuzzi® Luxury Bath 14525 Monte Vista Avenue Chino, CA 91710 1-800-288-4002 www.jacuzzi.com



Contents	
Contents.	.2
Product Information.	. 2
mportant Safety Instructions	. 3
Inspection and Testing	
Framing and Support	. 5
Subfloor	
Electrical Connections	. 6
Prior to Installation	
Installation Procedures 3137/5229/5230/5433/6030/6036 Models	
Leveling Feet Adjustment	. 7
Optional Extension Kit Installation 5229/5433	. 7
Back Panel Shelf Installation 5229/5433	. 8
3-Wall Alcove Installation 5230/6030/6036	
Final Steps	
Installation Clean Up	
Door Operation	
Faucetry Installation.	
General Operation Information	
Controls	
Controlling Whirlpool Direction and Flow	
Light Instructions	
Operations	
Aromatherapy Use	
Removable Skirt Instructions	
Adjustable Skirt Height Option	
Heater	
Cleaning.	
PrO ³ Ozone Sanitation System.	
Shower Information.	
Maintenance	
Troubleshooting Procedures.	
WIT Reference Diagrams.	
Authorized Service.	
Warranty	
Warranty Registration	23

NOTE Save these instructions for future use. Use the form below to record your model and serial number for future reference. Date Purchased Purchased From Installed By Serial Number Model Installer: Leave the manual for the homeowner. Homeowner: Read this manual and keep for future reference.

Dealer/Installer Information



Important Safety Instructions

This is a professional grade product. A working knowledge of construction techniques, plumbing and electrical installation according to codes are required for proper installation and user satisfaction. We recommend that a licensed contractor perform the installation of all Jacuzzi Luxury Bath products. Our warranty does not cover improper installation related problems.

READ AND FOLLOW ALL INSTRUCTIONS. SAVE THESE INSTRUCTIONS.

Use this unit only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer. Never drop or insert any object into any opening.



RISK OF ACCIDENTAL INJURY OR DROWNING! Do not permit children to use this unit unless they are closely supervised at all times. Do not use hydromassage bathtubs unless all suction guards are installed to prevent body and hair entrapment. Never operate the hydromassage bath if the suction cover is broken, damaged or missing. Do not operate this unit without the guard over the intake for the circulation pump (suction cover/strainer).



RISK OF SEVERE INJURY FROM ELECTRIC SHOCK OR DEATH FROM ELECTROCUTION! Product 1 must be connected only to a supply circuit that is protected by two 20 amp ground fault circuit interrupter (GFCI). Product 2 must be connected to a supply circuit that is protected by a 15 amp ground fault circuit interrupter (GFCI). Such a GFCI should be provided by the installer and should be tested on a routine basis. Follow the manufacturer's instructions when testing the GFCI. The GFCI should interrupt power. Push the reset button. Power should be restored. If the GFCI fails to operate in this manner, the GFCI is defective. If the GFCI interrupts power to the bathtub without the test button being pushed, a ground current is flowing, indicating a possibility of an electric shock. Do not use this hydromassage bathtub. Disconnect the hydromassage bathtub and have the problem corrected by a qualified service representative before using.



RISK OF ELECTRIC SHOCK! Do not permit electrical appliances (such as a hair dryer, lamp, telephone, radio or television) within 60" (1524mm) of this hydromassage bathtub. Connect only to a circuit protected by a ground fault circuit interrupter (GFCI). (For permanently connected units) A green colored terminal (or a wire connector) marked "G," "GR," "GROUND," or GROUNDING") is provided within the terminal compartment. To reduce the risk of electric shock, connect the terminal or connector to the grounding terminal of your electric service or supply panel with a conductor equivalent in size to the circuit conductors supplying the equipment.



PROLONGED IMMERSION IN HOT WATER MAY INDUCE

HYPERTHERMIA! Hyperthermia occurs when the internal temperature of the body reaches a level several degrees above the normal body temperature of 98.6°F (37°C). The symptoms of hyperthermia include an increase in the internal temperature of the body, dizziness, lethargy, drowsiness and fainting. The effects of hyperthermia include:

- A. Failure to perceive heat.
- B. Failure to recognize the need to exit the bath.
- C. Unawareness of impending hazard.
- D. Fetal damage in pregnant women.
- E. Physical inability to exit the bath.
- F. Unconsciousness resulting in danger of drowning.



This equipment is intended for indoor use only. Install the equipment in accordance with these instructions. Use supply wires that are suitable for 167°F (75°C), including the temperature rating of the supply conductors to be used. This unit should be electrically grounded and installed by a licensed contractor, electrician, and plumber. Building materials and wiring should be routed away from the motor/pump or blower or other heat producing components of this unit. A pressure wire connector is provided on the exterior of the motor/pump and heater to permit connection of an No. 8 AWG solid copper bonding conductor between this unit and all other electric equipment and exposed metal in the vicinity, as needed to comply with local requirements.



Risk of fetal injury. Pregnant or possibly pregnant women should consult a physician before using a hydromassage bathtub equipped with a heater.



Important Safety Instructions (Continued)



Keep body and hair a minimum of 6" (152mm) away from the suction fitting at all times when the hydromassage system is in operation. Hair longer than shoulder length should be secured close to the head.

CAUTION

Do not immerse the controls by overfilling the bath.

⚠ CAUTION

To avoid injury, use care when entering and exiting the hydromassage bathtub.

⚠ CAUTION

Do not use drugs or alcohol before or during the use of a hydromassage bathtub equipped with a heater. Possible drowning may occur.

A CAUTION

Do not use a hydromassage bathtub equipped with a heater immediately following strenuous exercise.

⚠ CAUTION

Use this unit only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturers. Do not tamper with user-operated controls or such devices.

CAUTION

Water temperature in excess of 104°F (40°C) may be injurious to your health. Check and adjust water temperature before use.

SAVE THESE INSTRUCTIONS.

The Company has obtained applicable code (standards) listings generally available on a national basis for products of this type. It is the responsibility of the installer/owner to determine specific local code compliance prior to installation of the product. Proper installation of the units is the responsibility of the installer. Jacuzzi Luxury Bath is not responsible for water damage due to improper installation. Product specifications are subject to change without notice.

Inspection and Testing

Visual Inspection

- Remove the bathtub from the shipping carton. Be careful not to scratch the surface of the bathtub on exposed staples. Remove the staples or fold them into the carton. Retain the carton until satisfactory inspection of the product has been made. Do not lift the bathtub by the plumbing at any time; handle by the frame only.
- Inspect the shell and bathtub components. Should inspection reveal any damage or defect in the finish or visible damage to any components, do not install the bathtub. Damage or defect to the finish claimed after the bathtub is installed is excluded from the warranty. Jacuzzi Luxury Bath responsibility for shipping damage ceases upon delivery of the products in good order to the carrier.
- Refer any claims for damage to the carrier. For definitions of warranty coverage and limitations, refer to the published warranty information packed with the product or in the back of this manual.

Bathtub Water and Operational Test

All bathtub units are factory tested for proper operation and watertight connections prior to shipping. However, the unit must be retested by the installer prior to installation. Jacuzzi Luxury Bath is not responsible for any defect that could have been discovered, repaired, or avoided by following this inspection and testing procedure:

- Place the bathtub on a level surface, near appropriate electrical supply, water supply, and water drainage. A driveway is a suitable choice.
- 2 Cover the drain and overflow hole with tape or a stopper and fill the bathtub to the bottom of the overflow hole.
- 3 Allow bathtub to stand for 5 minutes.
- Plug in motor/pump and turn unit on. Confirm that all features function as described in the Operation section of this manual. Do not install the bathtub if bathtub fails to operate as described.
- 5 Visually inspect all joints for leaks. Do not install the bathtub if leaks are detected.
- 6 Return bathtub to box or otherwise protect from damage until time of installation.



Framing and Support

READ ALL INSTALLATION INSTRUCTIONS COMPLETELY. IMPROPER INSTALLATION WILL VOID THE WARRANTY.

IMPORTANT

Make sure that walls and floors meet fire safety requirements of local building code and/or FHA/HUD Minimum Property Standards.

Observe all governing codes and ordinances.

- Proper installation is your responsibility.
 Have a qualified technician install this bath.
- Installation using a ground-fault circuitinterrupter (GFCI) is required.
- It is the installer's responsibility:
 - To contact a qualified electrical installer.
 - To assure that electrical installation is adequate and in conformance with National Electrical Code (NEC).
 - To assure that plumbing installation is adequate and in conformance with the Uniform Plumbing Code (UPC).


A Technical Specification has been included with your bathtub. The Technical Specification will contain pertinent information regarding your Jacuzzi Luxury Bath product. Locate the Technical Specification at this time.

Dry Wall (Green board) Wall Stud Silicone Optional Sheet Metal Tile Flange Kit (Part # TFK1) (Factory Installed) Sheet Metal Rivet


NOTES

Finished alcove must have correct interior dimensions, as shown in the rough-in diagrams in the Technical Specification, to properly install unit. For three wall alcove installations, use an integral molded three-sided tiling flanged bathtub. Jacuzzi Luxury Bath does not recommend utilizing bathtubs without an integral tiling flange in an alcove installation where a shower head would be installed above the unit and utilized as a shower.

- In remodeling, if necessary, add studs at each end to provide a vertical nailing surface for the side nailing flanges of bath fixture product.
- To avoid obstructions during installation make sure that supply lines, spout pipe and valve plumbing do not project into alcove.
- Bathtub requires a 4" x 14" (102mm x 356mm) recommended floor opening for the 1 ½" (38mm) drain, waste and overflow (DWO) kit.
- Be sure floor opening location matches bathtub fixture drain location.
- The unit must be supported from the bottom of the bathtub and not solely from the bathtub rim.
- Per UPC code, access must be provided to the pump/motor for your specific model (Figure 1). It is the responsibility of the installer, building contractor, or owner to provide access for service. Jacuzzi Luxury Bath is not responsible for any costs relating to obtaining access for repair. The owner shall bear such costs and, if appropriate, must seek recovery from the installer. Primary and secondary service access locations are shown in the rough-in diagrams contained in the Technical Specification.
- Provide adequate ventilation for cooling and supply sufficient air for the pump/motor. Do not insulate around the equipment.

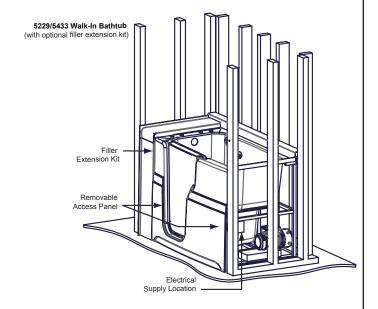



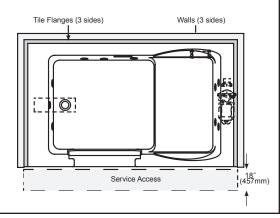



Subfloor

- Prepare the subfloor for the drain and ensure that the area is level. The drain/overflow of the bathtub extends below the bottom of the bathtub. Identify the drawing in the Technical Specification that corresponds with your bathtub.
- The bathtub must remain level in order for it to drain properly and must make contact with the leveling feet.
- Floor must support seventy five pounds (75 lbs) per square foot load.

Electrical Connections




DANGER

Risk of electric shock. Connect only to a circuit protected by a GFCI.



CAUTION

- Electrical outlet must be mounted 4" (101mm) above the floor line and 12" max (305mm) inside from the edge of the bathtub, or in accordance with local building and electrical codes.
- Risk of component overheat. Do not use electric extension cord to power this unit.
 Operating the pump without enough water in the bathtub can cause permanent damage to the pump/motor.
- If the GFCI unit indicates a malfunction, per manufacturer's instructions, turn OFF power and do not attempt to use the bathtub until the source of the problem has been identified and corrected.

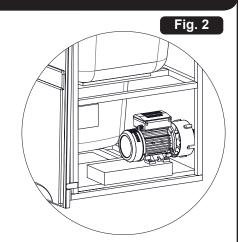

NOTES

When using electrical products, basic precautions should always be followed:

- Always follow local building and electrical codes. Grounding is required. The unit should be installed and grounded by a qualified electrician.
- Combination Models: Two separate dedicated 120VAC GFCI protected circuits are required to supply the pre-installed plug box.
- Whirlpool/Pure Air Models: A dedicated 120VAC GFCI protected is required for pump/motor. A separate 120VAC GFCI protected circuit is required for the heater.

Prior to Installation



Before you begin your installation, please read the following:


- Proper installation of the spout plumbing and compliance with local codes are the responsibility of the installer. Jacuzzi Luxury
 Bath does not warrant connections of water supply fittings and piping, fill systems, or drain/overflow systems. Nor is it
 responsible for damage to the bathtub which may occur during installation.
- Provide adequate ventilation around the equipment to ensure sufficient air flow and cooling. Do not block blower intake for any reason. Do not insulate the blower for any reason. Keep blower clear of all debris.
- It may be necessary to level the 3137/5229/5433 Walk-in Bathtub. Use the leveling feet to adjust the levelness of the bathtub. The leveling feet operate in a similar manner as those for an appliance.
- It is important to check the level prior to water testing. The unit must be level for water testing, as this helps with the door seal alignment. The adjustment nut allows you to adjust the height of the base. The locking nut allows you to lock in the desired height by tightening the nut. Under no circumstances will it be necessary to remove the leveling feet.
- 50 Gallon water heater recommended. Consult with your installer/plumber for your household's specific requirements.

Installation Procedures 5229/5433/3137 Models

- Make sure framed-in alcove is of proper size per Jacuzzi Luxury Bath dimensions, square, and plumb; check floor for levelness (Figure 3). Rough-in should be kept to a minimum until the unit is on the job site. Measurements may vary +0 or -3%" from original specifications.
- Sufficient clearance must be provided for access to service connections (pump/motor, controls, heater plumbing and electrical hook ups).

Height "H" Dimensions

- 5229: 37.5"
- 5433: 37.5"
- 3137: 36.5"

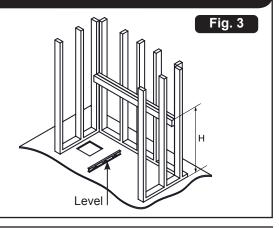

Jacuzzi.

Installation Procedures 5229/5433/3137 Models (Continued)

NOTES


Place the tub in the alcove with the front skirt firmly on the floor. The bathtub must be set level. To check, use a level on top of the ledges on both ends of tub and on top of dam (Figure 4).

All adjustable feet must come in contact with the floor.

All plumbing hardware (drain/waste overflow, water supply) must be installed prior to setting the bathtub in place.

IMPORTANT

Tile flange unit is required in a 3-wall alcove installation setting.

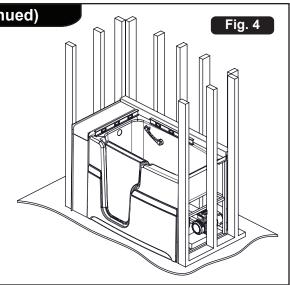


Leveling Feet Adjustment

NOTES

The 3137/5229//5433 comes factory pre-leveled; however, it may be necessary to make adjustments to the leveling feet. The leveling feet operate in a similar manner as those for an appliance.

It is important to check the level prior to water testing.

- The adjustment nut allows you to adjust the height of the base. The locking nut allows you to lock in the desired height by tightening the nut.
- 2 If it is necessary to level the bathtub, start by leveling the (1) center back wall leg, then move to the (4) corner legs, then finish at the front center leg.
- Check the bathtub for levelness. If the bathtub is level, tighten the locking nut (Figure 5).
- 4 If the bathtub is not level, repeat the above steps.
- For optional reverse plumbing installations 5229/5433 only: Raise leveling feet to 3" as shown (**Z**) and install per local uniform plumbing code (UPC) requirements.

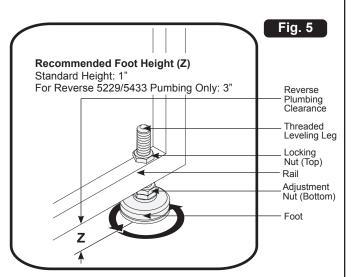


- Rotate the leveling foot clockwise to lower the unit.
- Rotate the leveling foot counter-clockwise to raise the unit.

Optional Extension Kit Installation 5229/5433

NOTES

Pre-drilling flanges is recommended to avoid cracking of the acrylic unit. The front extension panel must be installed prior to installing the top extension panel.

The illustration (Figure 6) is shown from the inside of the unit for clarity purposes. All work shown may be accessed from the top of the unit or through the access panel cutouts.

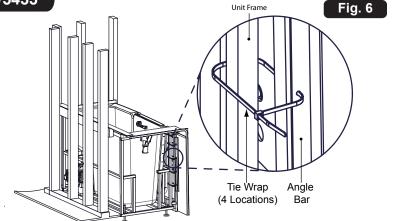





Optional Extension Kit Installation 5229/5433 (Continued)

Front Panel Installation -


- Use cable ties to attach the front extension panel to the frame of the unit.
- Route the cable tie around the frame and through the pre-drilled angle bar (Figure 6 page 7). Repeat in four (4) locations.
- Insert the tip of the cable tie into the receiving end of the cable tie.
- Once the tip has been inserted, pull the cable tie tight until the front extension panel is resting completely against the unit (Figure 6 page 7).
- Complete the fastening through vertical side flange, approximately 8" (205mm) on center (Figure 8).

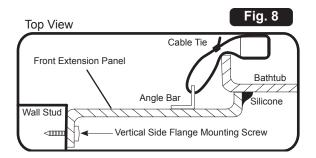

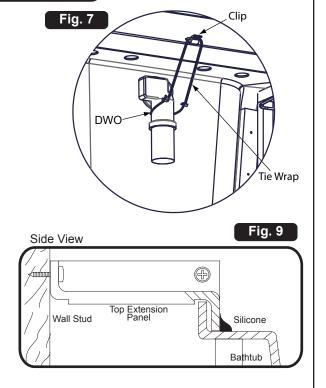

Top Panel Installation -

- Route the cable tie around drain waste overflow (DWO) and through the plastic clip as illustrated (Figure 7).
- Place the top extension panel over the opening and fasten through the topside flanges at each stud 16" (405mm) on center, working from both ends toward back center (Figure 9).
- Once complete, apply a continuous bead of silicone sealant around the entire seam between the top and front extension panels and the bathtub rim. Allow sealant to cure according to manufacturer's instructions.

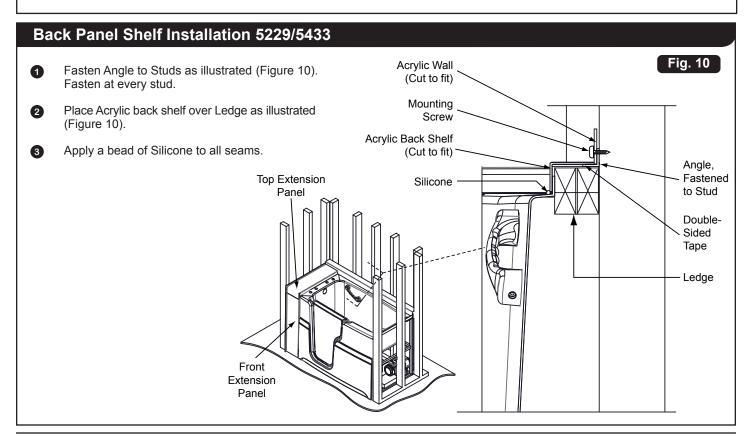

Jacvzzi.

3-Wall Alcove Installation 5230/6030/6036

Install the drain/overflow according to the manufacturer's instructions. Refer also to the Technical Specifications Manual.



Watertight installation of the drain is the installer's responsibility. Drain leakage is excluded from the Jacuzzi Luxury Bath warranty of this product.

- 2 Install the faucet at this time. It is recommended that the faucet be installed by a qualified plumber.
- Install the flange (purchased separately) according to the instructions that are included with the kit. If the bathtub is equipped with an integrated flange, skip this step.
- 4 Turn off the power supply to the GFCI protected circuit.
- Insulation may be placed within the bathtub surround, except around the motor/pump.
- Connect flex water supply lines to faucet and plug power cords into GFCI outlet.
- Place the bathtub into the niche. Screw the flange to the wood stud (Figure 11). It may be necessary to shim the unit to close up any gaps between the wood stud and the flange.
- 8 Align the bathtub and connect the drain.
- Inspect all fittings, plumbing, and control lines after inserting the bathtub to insure the components are not damaged, disconnected, or contacting the finish surface substrate or support members (Figure 11).
- Turn on the power supply to the dedicated GFCI protected circuits and check system operation.
- Complete all finish work around the perimeter of bathtub to seal the space between the rim and the finished deck.
- Turn on the power supply to the dedicated GFCI protected circuits and check system operation.



The Finestra[™] comes factory pre-leveled; however, it may be necessary to make adjustments to the leveling feet. The leveling feet operate in a similar manner as those for a washer/dryer (Figure 11).



It is important to check the level prior to water testing. The unit must be level for water testing, as this helps with the door seal alignment.


If it is necessary to level the bathtub, start by leveling the outside four (4) legs, and then move to the two (2) legs on the door. The unit is pre-leveled prior to shipment and should not be tampered with, if not required.





The adjustment nut allows you to adjust the height of the base. The locking nut allows you to lock in the desired height by tightening the nut.



Under no circumstances will it be necessary to remove the leveling feet.

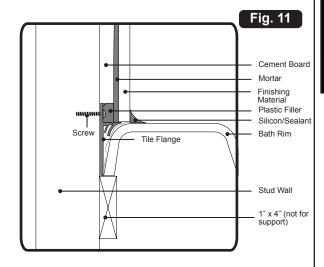

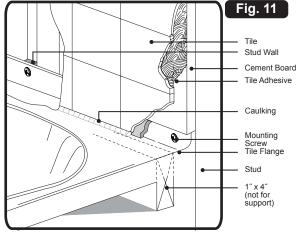


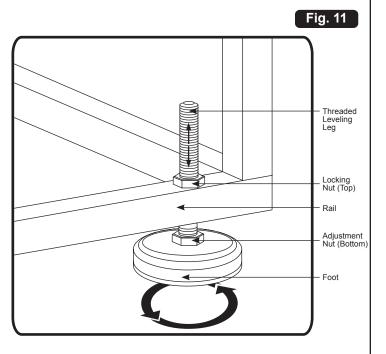



Final Steps

- Finishing of other trades should be done in conformance with applicable codes and generally accepted building practices.
- Inspect all fittings, plumbing, and control lines after inserting to insure the components are not damaged, disconnected, or contacting the finish surface substrate or support members. Note: Tubs are factory pre-drilled for deck mounted tub fittings. Connect flex water supply lines to faucet, connect bathtub drains and plug power cords into GFCI outlets.
- Turn on the power supply to the dedicated GFCI protected circuits and check system operation.
- Water test all fixtures, run pump and test operation. Apply a continuous bead of silicone sealant around the entire seam between the counter and the bathtub rim (Figure 12). Note: Silicone bead represented by dashed lines. Allow sealant to cure according to manufacturer's instructions.
- Finally, apply a bead of silicone along the left, right and top seams of the removable front skirt panel. Wipe off all excess silicone and allow it to cure according to manufacturer's instructions.

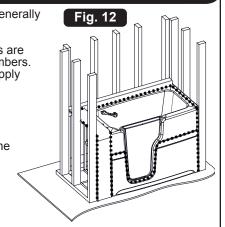

Installation Clean Up

 
To avoid dulling and scratching the surface of the bathtub, never use abrasive cleaners. For most soiled surfaces, a mild liquid detergent and warm water is sufficient. The following is also recommended:


- Remove spilled plaster with a wood or plastic edge. Spots left by plaster or grout can be removed if lightly rubbed with
 detergent on a damp cloth or sponge. Do not use metal scrapers, wire brushes or other metal tools, as they will damage the
 bathtub's surface.
- Paint, tar, or other difficult stains can be removed with Fantastik® or soapy water.
- Minor scratches which do not penetrate the color finish can be removed by lightly sanding with 600-grit wet/dry sandpaper.
 You can restore the glossy finish to the acrylic surface of the bathtub with a special compound, Meguiar's #10 Mirror Glaze. If that is not available, use automotive rubbing compound followed by an application of automotive paste wax.
- Major scratches and gouges which penetrate the acrylic surface will require refinishing. Call Jacuzzi Luxury Bath to find a service agent in your area.

Door Operation

NOTE

- The door opens to the inside of the bathtub. Use the inside door handle to engage the locking mechanism (Figure 13).
- Seal will prevent leakage. Provide a visual check and clean any debris from the seal area before filling the bathtub with water (see illustrations).
- The door opens to the outside of the bathtub.
 Use the handle on top of the door to engage locking mechanism (3137 only).
- Do not open door until all water has been drained from the bathtub.
- Be sure tub door remains in the open position when not in use. Failure to do so could deform door gasket causing the tub door to leak.




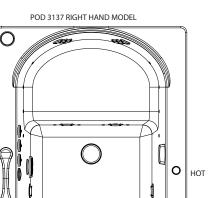

CLOSE

O

RIGHT HAND MODEL

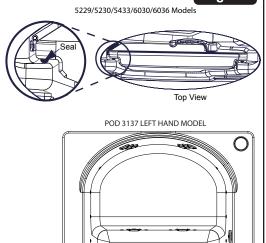

0

HOT O

FAUCET LOCATION

COLD


OPEN



Fig. 14


Faucetry Installation


Install the faucetry and drain/waste overflow trim (DWO) at this time (please see installation instructions that came packaged with these items).

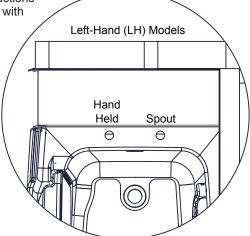


5229/5230/5433

POD 3137 RIGHT HAND MODEL

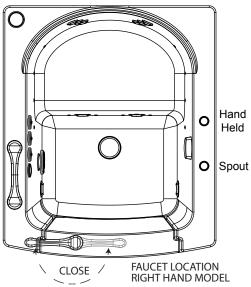

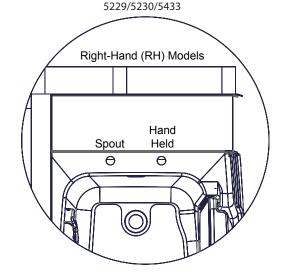


POD 3137 LEFT HAND MODEL

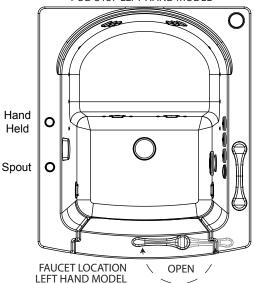

General Operation Information

All bathtubs manufactured by Jacuzzi Luxury Bath are designed for "fill and drain," which means the bathtub should be drained after each use and filled with fresh water by the next bather. This is a health precaution, as these bathtubs are not designed to hold water continuously like pools or spas.

Close the drain and fill the bathtub until water is at least 1" to 2" (25mm to 51mm) above the highest jet (see water line indicated in the illustration - Figure 15). Do not turn on the whirlpool system at any time if the jets are not completely immersed in water. Running the whirlpool system when there is insufficient water in the bathtub could result in water spraying outside the bath area. Running the whirlpool system without water will damage the recirculating pump.

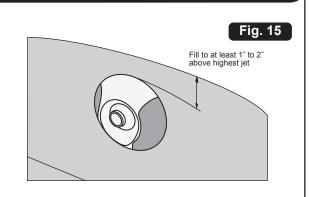




Controls

NOTE

For Combination models, Whirlpool On/Off, Pure Air, Light and Air Control control operations are applicable. For Whirlpool models, only Whirlpool On/Off Air Control operations are applicable.

For Pure Air models, only Air Blower On/Off operation is applicable.

Fig. 16

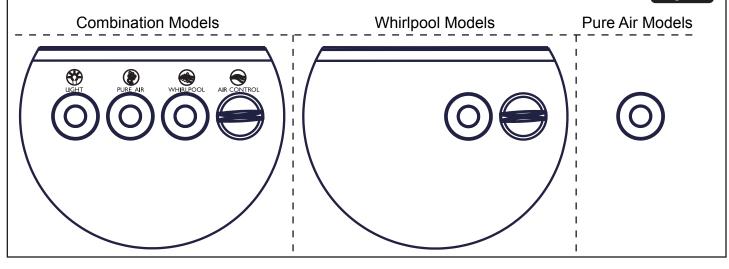

Controlling Whirlpool Direction and Flow

Direction (Figure 17A)


To change the direction of the water flow, swivel the jet nozzle to the desired angle.

Water Force (Figure 17B)

Increase the force of the flow by rotating the jet face to the left (counterclockwise). Decrease the force of the flow by rotating the jet face to the right (clockwise). *Note: Micro Jet face spins 360°. Turn 180° clockwise close and 180° counterclockwise to open.*



Never run the whirlpool system with all the jets closed.

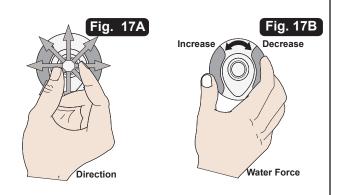

Light Instructions

To change a bulb after installation, follow the instructions engraved on the Hydro Tool. (Center Tool). The outer tool holds the light body from turning (Figure 18). Insert the two tabs into the two notches on the outside diameter of the light body while using the inner tool to turn the front lens of the light assembly (counter-clockwise to remove, clockwise to install).

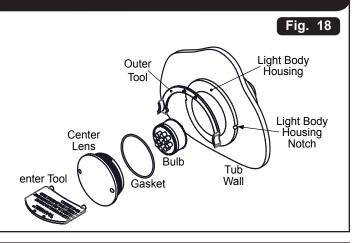


Fig. 19

Light

Fig. 20

Blower

Pump/Motor



Air Control

Operations

Combination Operation:

Pump/Motor Operation:

To turn the Pump/Motor ON, press the Pump/Motor button once. To turn the Pump/Motor OFF, press the Pump/Motor button again (Figure 21).

Blower Operation:

To turn the Blower ON, press the Blower button once. To turn the Blower OFF, press the Blower button again (Figure 20).

Light Operation:

To turn the Light ON, press the Light button once. To turn the Light OFF, press the Light button again (Figure 19). Light will cycle a different color every time you press the Light ON. See below for sequence.

Light Color Sequence: 1. Ocean Blue, 2. Majestic Gold, 3. Shamrock Green, 4. Fiery Red, 5. Chameleon Mode, 6. Party Mode, 7. Bright White, 8. Agua Blue, and 9. Soothing Violet.

Whirlpool Operation: In the closed position (Figure 22), the jets massage with only water. In the open position, air mixes with water to create a deep, wide plume of massaging bubbles.



After use, press the Blower button once to turn the Blower ON, then press the Blower button again to turn OFF. This will purge the lines.

Whirlpool Operation:

ON: Press the button once to turn the whirlpool jets ON.

OFF: Press the button a second time to turn the whirlpool jets OFF (Figure 23).

Whirlpool Control (Figure 24)

In the closed position, the jets massage with only water. In the open position, air mixes with water to create a deep, wide plume of massaging bubbles.

Fig. 23

Pump/Motor

Fig. 24



Pure Air Operation:

Blower Operation:

To turn the Blower ON, press the Blower button once. To turn the Blower OFF, press the Blower button again (Figure 25).

NOTE

After use, press the Blower button once to turn the Blower ON, then press the Blower button again to turn OFF. This will purge the lines.


Fig. 25






Aromatherapy Use


To use the aromatherapy feature:

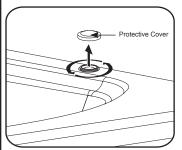

Remove the protective cover from the housing receptacle (located on the deck of the bathtub). An aromatherapy cartridge comes pre-installed in the unit.

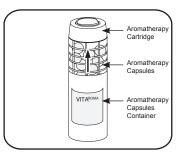

Remove the aromatherapy cartridge from the aromatherapy capsules container.

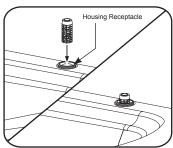

Place the aromatherapy cartridge into the housing receptacle until the aromatherapy cartridge is completely inside the housing.

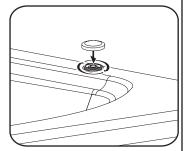


Fig. 26

Reattach the protective cover. The aromatherapy feature is now ready to use.




Do not remove cap while blower is operating.

Removable Skirt Instructions

To remove the front skirt panel, you must release it by carefully cutting through the silicone bead at the left, right and top seams. Then grasp an edge and pull to separate (Figure 27A). Prior to reinstallation, you must clean and remove any old silicone from the removable panel and underlying surface.


Skirt Panel Adjustment (Figure 27B):

To reinstall skirt panel, align the six (6) posts on the panel with the six (6) receptor sockets on the tub and press into place. Insert a flat head screwdriver into each receptor socket. Turn clockwise to tighten and counter-clockwise to loosen. Apply a new bead of silicone at the left, right and top seams to complete panel installation.

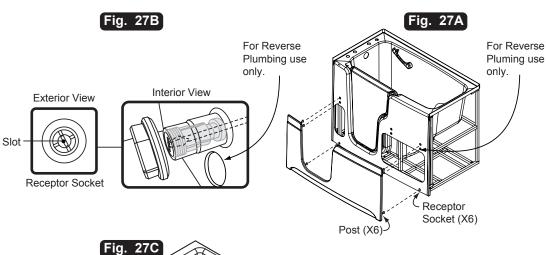

Skirt Panel Removal for Finestra 5230/6030/6036 Models Only (Figure

27C): To remove the front access panels, grasp an edge and pull toward you to separate. The access panels are magnetically secured.

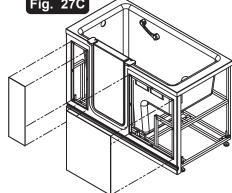

FINESTRA 5230/6030/6036 ONLY

Optional Adjustable Skirt Height Adjustment

For optional reverse plumbing installations only: Remove the top three skirt receptors (Figure 26B) and reinstall them 2" lower into the factory drilled holes.



Adjustable Skirt Height Option 5229/5433

These instructions are intended for use when the factory-standard height of the unit must be raised. This is to allow for proper drainage of rough-in plumbing located away from the unit.


- Remove the skirt access panel and set aside to gain access to the leveling feet. Your unit is factory preset to a height of 37.0 inches. You must raise all leveling feet by 2.0 inches by performing step 6 in the Leveling Feet Adjustment section (Page 7).
- Next, you will need to relocate the top three skirt receptors by removing their nut on the back side. Move each recepter down 2" to the factory-drilled holes, then reinstall each until snug. See Removable Skirt Instructions (Page 13).
- Reattach the skirt. Notice that you will only be using the top three holes to mount it. The lower posts are now located below the unit (this is acceptable). Refer to Removable Skirt Instructions (Page 13) for further adjustments to the panel.
- Silicone the perimeter of the removable skirt to finish installation.
- For reverse plumbing, install per local Uniform Plumbing Code (UPC) requirements.

Heater

The heater turns ON automatically any time whirlpool operation is active. Heater operation is not displayed on the control panel. There is a visible indicator light on the heater itself that signifies the heater is operating. The heater will help maintain the temperature of the water in the bathtub (Figure 28).

Vacuum Switch

The heater is equipped with a preset vacuum switch which will not allow the heater to turn ON if the pump is not running and water is not flowing through the whirlpool system.

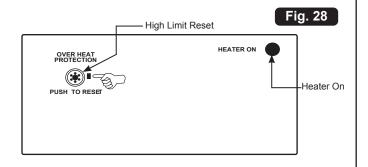

High-Limit Switch

The heater includes an exclusive High-Limit switch. This safety circuit will not false trip from hot tap water. It will only turn OFF the heater if the thermostat fails. To reset, press the button. If the high-limit trips frequently, please contact us at www.jacuzzi.com, or at 1-800-288-4002.

Cleaning



Do not use oil or oil-based bathtub additives. Never use abrasive, or caustic, household cleaners on any Jacuzzi Luxury Bath.

If you want to use any kind of bathtub additive, use only a small amount of low-foaming powder or crystal substance; the whirlpool action intensifies the foaming properties of soaps.

The use of certain bathtub oils, bubble baths, and bathtub additives may increase the level of accumulations of bathtub residue in the whirlpool system and may cause false reading of the water level sensors (applicable only for units equipped with water level sensor). If excess accumulations persist, you should discontinue use of these products.

To remove accumulations of bathtub residue from the whirlpool system, it is recommended that a bathtub be cleaned regularly. For best results, however, we recommend that you clean your bathtub after each use using Systems Clean™, our exclusive two-part plumbing system cleaner made specifically for whirlpool bathtubs. Systems Clean™ is available through an authorized Jacuzzi Luxury Bath Distributor or by calling us direct at 1-800-288-4002 or may be purchased online at www.jacuzzi.com.

PrO³ Ozone Sanitation System

Some units have an PrO³ Sanitation System Installed. Electrical connections and power supply for the PrO³ Ozone Sanitation System are incorporated into the control design of the unit. No additional connections are required for the PrO³ Ozone Sanitation System. *Note: This system only operates while the whirlpool pump is running.*

Installation and Operation



Shower Information

Because of the 3137/5229/5433 Walk-In Bathtub's unique design, a rigid shower door cannot readily be installed. If a shower is desired, we recommend using the hand-held shower supplied with the unit in conjunction with a shower curtain, as this will allow the user to control the direction of the spray.

NOTE

Proper installation of a shower is the responsibility of the installer. Jacuzzi Luxury Bath is not responsible for damage to the unit or for water damage which might occur due to its installation.

Maintenance

To clean your bathtub, simply use a mild, nonabrasive liquid detergent solution. You can protect and restore the gloss to a dulled acrylic surface by applying Meguiar's #10 Mirror Glaze, a product specifically designed for use on acrylic finishes. If Meguiar's is not available, use a fine grade automotive rubbing compound followed by an application of clear automotive paste wax.

Minor scratches which do not penetrate the color finish can be removed by lightly sanding with 600-grit wet/dry sandpaper. Restore the gloss using Meguiar's Mirror Glaze or automotive paste wax. Major scratches and gouges which penetrate the acrylic surface will require refinishing. Call Jacuzzi Luxury Bath to find a service agent in your area.

Suction Cover/Strainer Maintenance

Clean the suction cover/strainer of hair and debris when necessary (Figure 29).


- Remove the center screw and detach the suction cover.
- Clean the cover by back flushing debris from the holes.
- 3 Reinstall the suction cover immediately after cleaning.

⚠ WARNING

Keep hair a minimum of 6 inches (152 mm) away from the suction fitting at all times when the whirlpool system is operating. Hair longer than shoulder length should be secured close to the head, or a bathing cap should be worn.



Do not operate the whirlpool system with the suction cover/strainer removed! It is a safety device and must always be in place on the suction fitting to minimize the potential hazard of hair and body entrapment.

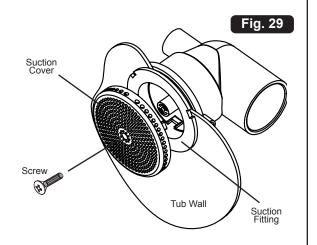


Troubleshooting Procedures


Symptoms	Problems	Solutions
Motor will not start	GFCI or breaker in OFF position Disconnected or defective wiring	Reset GFCI or breaker Check and reconnect if needed
Breaker trips repeatedly	Short between bath and breaker GFCI or breaker defective	Check for short in wiring Replace GFCI or breaker
Motor does not reach full speed	Low voltage Wiring too small	Contact an electrician Contact an electrician
Motor overheats	Low voltage Wiring too small Inadequate ventilation	Contact an electrician Contact an electrician Create ventilation to motor
Leaking around pump	Loose unions O-ring missing	Hand tighten unions Replace O-ring
No pressure from back jets	Jet is closed position	Turn jet face ½-turn counter clockwise
Hot or cold water does not stop running	Debris in line	Flush lines clean and reinstall cartridge faucet. Technical support: 1-800-888-660

NOTES


If the unit is within the warranty period, contact Jacuzzi Luxury Bath Service Support at 1-800-288-4002 with your bath's serial number before work is started. The serial number is located on the Specification/Serial Number Plate (the plate is located behind the equipment area).



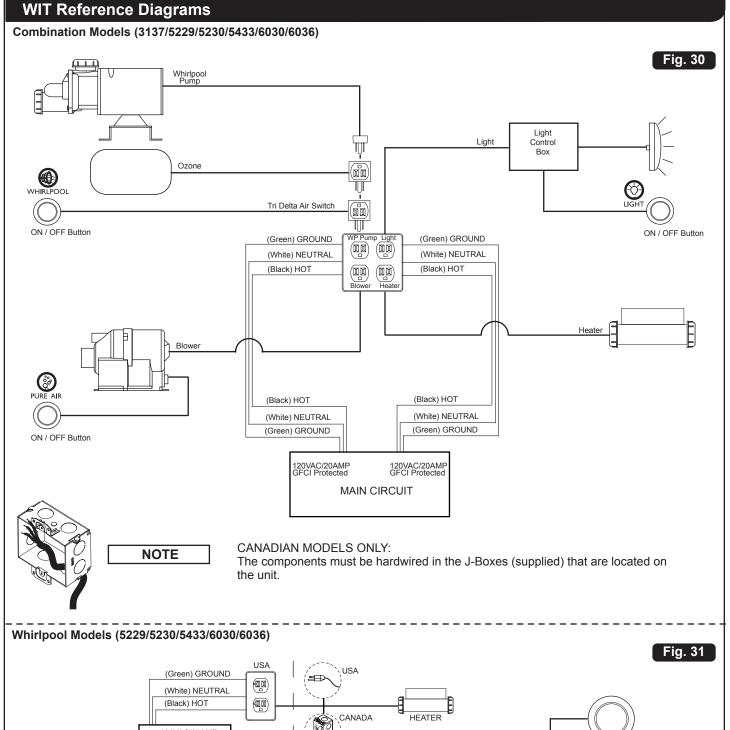

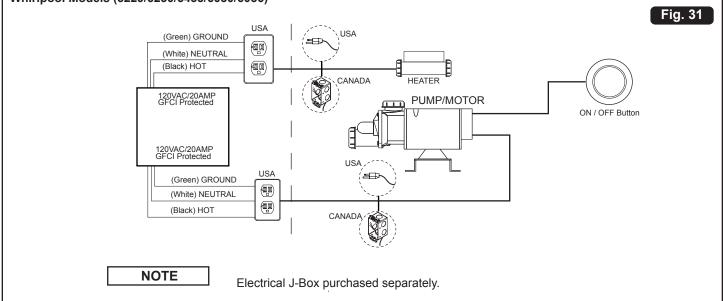



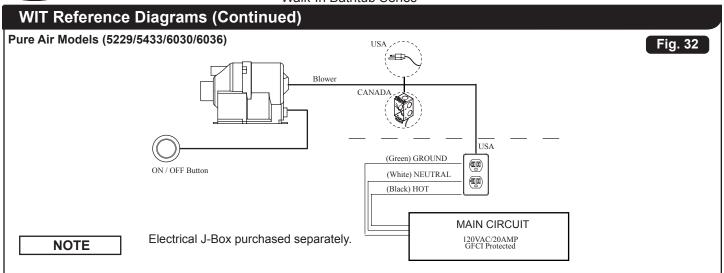




This page was intentioally left blank.

Authorized Service

If you need a referral for a service company near you, or need assistance with operation or maintenance-related questions, please call our Service Support Department at 1-800-288-4002. Visit our web site at http://www.jacuzzi.com/ for products, services, and an online copy of these Installation and Operation Instructions.

When requesting service or technical assistance please have available both the model and serial number of your unit. This information can be obtained from the product registration card provided with your unit. If the card has been misplaced, this information can be obtained from the specification/serial number label on the unit itself. The label is located on the wall of the bathtub near the blower and/or motor.

SPECIFICATION/SERIAL NUMBER LABEL

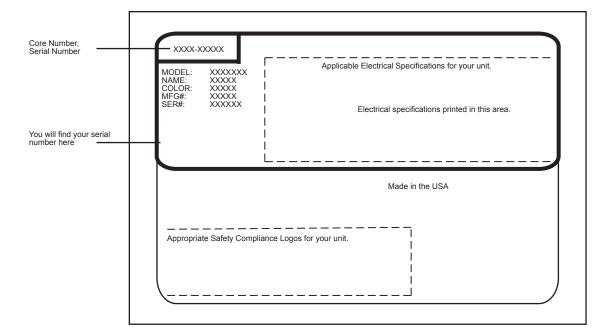

PRODUCT SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE. USE TECHNICAL SPECIFICATIONS MANUAL SUPPLIED WITH PRODUCT.

Jacuzzi Luxury Bath has obtained applicable code (standards) listings generally available on a national basis for products of this type. It is the responsibility of the installer/owner to determine specific local code compliance prior to installation of the product. Jacuzzi Luxury Bath makes no representation or warranty regarding, and will not be responsible for any code compliance.

Jacuzzi® Luxury Bath

Jacuzzi[®] Luxury Bath 14525 Monte Vista Avenue Chino, California, 91710 1-800-288-4002 www.jacuzzi.com

WARRANTY COVERAGE

Jacuzzi Luxury Bath ("Company") offers the following limited warranty to the original purchaser of any Jacuzzi® branded walk-in bathtub ("Bath") and accessories purchased with the Bath, for personal or single family residential use ("user"):

Product	Bathtub shell and factory installed pump, jets, controls, and blower	Labor (for factory installed components)	Options & Accessories
Jacuzzi [®] Walk-In Bathtubs	Limited Lifetime	2 Years	90 Days (no labor)

The above periods are subject to the terms, conditions and limitations set forth below. The Company will repair or replace, at its sole option, the Bath or its equipment in accordance with the following terms, conditions and limitations. Units in commercial use are excluded from any warranty coverage whatsoever. PLEASE READ THIS ENTIRE LIMITED WARRANTY, AS EXCLUSIONS AND CONDITIONS APPLY.

LIMITED WARRANTY ON WALK-IN BATHS

The Company extends to the user of the Bath a non-transferable limited warranty for the applicable period set forth in the chart above that the shell will maintain its structural integrity and configuration and be free of water loss due to a defect in the tub shell. This warranty covers only the tub shell and the manufacturer installed pump, jets, controls, heater, and blower against defects in material or workmanship. This warranty does not apply to any display models or to any options or accessories which are covered under the Company's limited ninety (90) day warranty set forth below. Warranty coverage begins on the date the unit was originally purchased by the user.

LABOR WARRANTY FOR FACTORY INSTALLED COMPONENTS

The Company's limited labor warranty for the applicable period set forth in the chart above commences on the date the unit was originally purchased by the user. All factory installed components (e.g., pump, motor, blower, heater, and plumbing) are covered under our labor warranty against failure due to defects in materials and workmanship. This labor warranty is subject to the limitations set forth below.

90 DAY (PARTS ONLY) LIMITED WARRANTY ON OTHER OPTIONS AND ACCESSORIES

The Company's limited warranty covers options and accessories manufactured for the Company but not installed by the factory (e.g., drains, fill spout kits, trim kits, skirts, etc.) against defects in material or workmanship. Warranty coverage begins on the date the option or accessory was originally purchased by the user. These items may be covered by a manufacturer's warranty which may have a longer duration than this limited warranty. Please confirm with the manufacturer of the option or accessory the duration of their warranty coverage for options and accessories.

EXCLUSION OF IMPLIED WARRANTIES, WARRANTY LIMITATIONS AND EXCLUSIONS

IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED ALTOGETHER OR TO THE FULLEST EXTENT ALLOWED BY LAW. This Limited Warranty takes the place of all other warranties, express or implied, in fact or at law, including implied warranties of merchantability and fitness for a particular purpose. All warranty service must be performed by Company or its designated representative using authorized Jacuzzi® parts. No agent, dealer, distributor, service company or other party is authorized to change, modify or extend the terms of this limited warranty in any manner whatsoever. The limited warranty does not cover defects, damage, or failure caused by common carrier, installer, user, or other persons, pets, or rodents, or resulting from, without limitation, any of the following: careless handling (e.g., improper lifting of the unit by the plumbing, abrading finish, etc.) including negligence of any party; modification of any type for any reason (including modification to meet local codes); improper installation (including installation not in accordance with instructions and specifications provided with the unit); connections supplied by the installer of the equipment; improper voltage supply or unauthorized electrical modification; misuse; abuse; incorrect operation, or lack of proper routine maintenance; operation of the unit without specified minimum amount of water or at inappropriate water temperature; use of abrasive or improper cleaners; or acts of God, such as lightning, floods, earthquakes, etc.

In addition, THE COMPANY WILL NOT BE RESPONSIBLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES or losses arising from any cause (e.g., water damage to carpet, ceiling, tiles, marble, loss of use, etc.) including but not limited to its own negligence; damages to, respecting, or resulting from: plated parts when pool and/or spa chemicals are used in the unit or hard water conditions; optional bath equipment not manufactured by the Company but supplied by a dealer, installer or the Company; the unit's prior usage as an operational display; or defects that should have been discovered before installation. This exclusion applies even if Company was advised in advance of the possibility of such damages. This limited warranty does not include: labor, transportation, or other costs incurred in the removal and/or reinstallation of the original unit and/or installation of a replacement unit; any costs relating to obtaining access for repair; or loss of use damage, including loss of sales, profit or business advantage of any kind under any circumstances. Bath units are excluded from any warranty coverage if any addition, deletion, or modification of any kind whatsoever has been made to the unit (or to any component). Warranty coverage is provided in the United States of America, Canada and Mexico only. The liability of Company under this limited warranty, if any, shall not exceed the original amount paid for the Bath or product claimed to be defective. Dated proof of purchase of Bath or product is required for a warranty claim. These disclaimers shall be equally applicable to any service provided by Company and its designated representatives.

Installation and Operation Page 21

WARRANTY REGISTRATION

To register your product, please go to our website www.Jacuzzi.com/baths, select SUPPORT, then WARRANTY REGISTRATION at the bottom of the page. You will then be prompted to enter your product Serial Number followed by your warranty registration information. You may also register the warranty by completing the registration card provided with your product and mailing it to the Company at the address provided below. The warranty must be registered online or by filling out and returning to the Company the Warranty Registration card within thirty (30) days from the date of purchase in order for this warranty to become effective.

RESPONSIBILITIES OF OTHERS

Inspecting the unit prior to installation is the responsibility of the installer or building contractor who acts on behalf of the user, as well as the user. They are responsible for ensuring the unit is free of defect or damage. Notices are placed on and in the unit and on the shipping carton advising the installer of this responsibility. In the event of a problem, the unit must not be installed. The Company is not responsible for failures or damage that could have been discovered, repaired, or avoided by proper inspection and testing (including proper water testing) prior to installation. Damage occurring in transit is the responsibility of the carrier. The user or installer MUST open the crate and inspect the unit for damage when it is delivered. If damage is discovered, it must be reported immediately to the seller and the carrier in writing, and an inspection requested. Failure of the carrier to respond should be reported to the seller and the carrier. Your freight claims should be filed promptly thereafter. Damage occurring to the unit during installation is the responsibility of the installer and/or building contractor and damage occurring thereafter is the responsibility of the user. Failure of any optional equipment is the sole responsibility of the equiment manufacturer except as provided above and shall not extend to or apply to any replacement parts for the options and accessories. Any replacement parts shall be covered only by the original equipment manufacturer warranty, if any. The distributor or dealer is responsible for knowing local code requirements and notifying the installing contractor and/or user of these requirements at the time of purchase. The Company is not responsible for costs to modify any product to obtain any code approval, such as city, county, or state building codes in U.S.A. or federal, municipal, provincial or other codes in Canada and Mexico.

WARRANTY SERVICE

For the user's benefit, the Company maintains a list of independent service personnel to perform required warranty service repairs. Such firms are not agents or representatives of the Company and cannot bind the Company by words or conduct. The Company will provide the warranty service described above when the following conditions have been met: the failure is of the nature or type covered by the warranty; the user has informed an Authorized Jacuzzi Luxury Bath Service Agent or Warranty Service Department Representative of the nature of the problem during the warranty period; conclusive evidence (e.g., proof of purchase or installation) is provided to the foregoing by the user proving that the failure occurred or was discovered within the warranty period; and, an authorized independent service person or Company representative has been permitted to inspect the unit during regular business hours within a reasonable time after the problem was reported by the user. In order to obtain warranty service, contact Jacuzzi Luxury Bath at:

www.jacuzzi.com or Warranty Service Department 14525 Monte Vista Avenue Chino, California 91710 Call: (800) 288-4002

To obtain warranty replacement for factory installed components or Company supplied options and accessories manufactured and supplied by the Company, call or write the above. Provide a description of the problem and proof of purchase. You will be instructed how to obtain replacements and where to return, at your expense, the failed component(s), option(s), or accessory(ies).

All replacement parts, equipment, and repairs shall assume the remaining warranty period of the part(s) replaced.

The Company's warranty obligation shall be discharged upon tender of replacement or repair. The customer's refusal to accept the tender terminates the Company's warranty obligation.

LEGAL RIGHTS: This Limited Warranty gives you specific legal rights. There are no warranties applicable to Jacuzzi® products except as expressly stated herein or as implied by applicable state and federal laws. You may also have other rights that vary from state to state. Some states do not allow limitations on how long an implied warranty lasts, disclaimer of certain warranties, or the exclusion or limitation of incidental damages, so some of the above limitations may not apply to you. Company will not be responsible for any statements or representations made in any form that go beyond, are broader than or are inconsistent with any authorized literature or specifications furnished by the Company. Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you.

Jacuzzi® Luxury Bath 14525 Monte Vista Avenue Chino, California 91710



WARRANTY REGISTRATION CARD

To complete your registration, visit ou on the other side within thirty (30) da Purchaser's Name	ys trom aa	at www.jacuzzi.com or fill out and mail this card to the of purchase in order for this warranty to be com	ne address printed ne effective.
Purchaser's Address			1
CityState			
Home Phone:	Cell P	hone:	•
Email:			I
Date of Purchase			•
Model Name			I
Serial Number			
Dealer's Name			I
Dealer's Address			
1. How did you first hear about this Jacobia () Advertisement () Article in Mag () Visited Dealer/Plumbing Supplie () Builder/Plumber/Remodeler () () Visited Retailer/Home Center Standard () Other (Please Describe) 2. Who first gave you specific information () Dealer/Plumbing Supplier () But () Decorator/Architect () Already 3. What was the main reason for pure () Styling () Warranty Service () () Brand Name () Price () Hydro () Home Resale () Other () Self () Spouse () Self and Spo () Other Family Member () Desig () Builder/Plumber/Remodeler () Sulider/Plumber/Remodeler () Self/Spouse when remodeling () Other () Already installed () Contractor/Plumber when remodeling () Other () Already installed () Other () American Standard () Other () Lasco () Price Pfister () Kohler () American Standard () Other (Specify) () How long did you shop before pure () 1 day () 2 months-6 () 2-7 days () 6 months-1 () 2 weeks-4 weeks () 1 year-2 () 2 weeks-4 weeks () +2 years () 1 month-2 months () Approximately how long have you shop before proximately how long have you shop before	acuzzi® pi jazine/Never () Yello Decorator tore ive/Acqua ation abou uilder () F r/Home Constalled chase? Product F otherapy you would ouse Toge ner/Archite Already Ind/New Hord deling f this prop household consider? () Aqua Consider? () Sterling chasing ur months year years	vspaper w Pages //Architect intance It this product (specifications, prices, etc.)? Remodeler enter Store features	Ninetv-Dav .
() Very easy () Easy () Difficult	of the pate	ented Jacuzzi® jet system prior to your purchase?	Ninety-Day Parts Only Limited Warranty On Accessory(ies)
			JACUZZI LUXURY BATH LX64000C