


Installation Notes

When installing the balancing valve, it is to be observed that the direction of flow conforms with the arrow on the valve body and that the valve is installed with a minimum of 3 D (3 x nominal pipe diameter) of straight pipe at the valve inlet and of 1 D (1 x nominal pipe diameter) of straight pipe at the valve outlet.

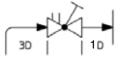

*Contains less than 0.25% lead content by weight on wetted surfaces. IAPMO R&T certified: AB1953; Vermont S152; Maryland House Bill 372 (Statue 12-605). ANSI/NSF-61 Annex G Compliant.

oventrop

"Lead free CS" Manual Balancing Valve ½" - 2"

Recommended flow range

"Low lead CS" Manual Balancing Valve							
Size	Recommended Flow range [GPM]	Connection ends					
1⁄2"	0.7 - 3.0						
3⁄4"	1.3 - 5.9						
1"	3.4 - 15.4	FNPT x FNPT					
1¼"	7.2 - 32.3	Sweat x Sweat					
1½"	11.5 - 51.3						
2"	17.0 - 76.0						

Cv table for various settings

Percent open	1⁄2"	3⁄4"	1"	1 ¼"	1½"	2"
20	-	-	-	1.4	2.0	1.8
30	-	0.6	1.0	3.7	6.9	9
40	0.7	1.4	1.7	7.4	11	17
50	1.2	2.3	4.4	12	18	27
60	1.7	3.2	6.2	17	28	44
70	2.5	4.7	9.2	25	40	64
80	-	-	-	37	61	90
100	5.4	10.5	28	58	90	140

