STANDARD MAINTENANCE AND TROUBLESHOOTING

REPLACING THE CARTRIDGE

- 1. Shut off the cold water supply to the faucet.
- 2. Turn on the faucet briefly to relieve any pressure inside the faucet.
- 3. Move the faucet handle to the "OFF" position.
- 4. Remove pin handle C from the lever handle.
- 5. Remove the pin handle set screw B using an allen key.
- 6. Pull the lever handle A from the faucet body .

7. Use 20 mm socket to unscrew cartridge D from faucet body

and replace with new cartridge, tighten new ceramic cartridge,

DO NOT exceed 177 in-lbs of torque.

- 8. Re-assemble faucet in reverse order.
- 9. Test for leakage.


GENERAL MAINTENANCE

Clean aerator periodically for any buildup. Do not use harsh detergents, solvents, chemical agents, metallic sponges, etc. that could harm the surface and damage the finish. Clean only with a soft sponge and soapy water.

SPARE / REPLACEMENT LIST

| A+B+C+G. | Handle assembly | F5217* |
|----------|-----------------|--------|
| D. | Cartridge | F4315 |
| E. | Aerator | F4316* |
| F. | Escutcheon | F5218* |

*Must specify finish CH chrome SN satin nickel PN polished nickel MB matt black

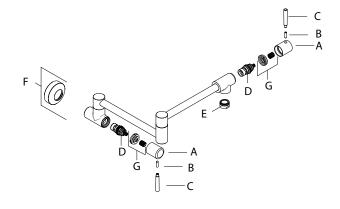

LIMITED LIFETIME WARRANTY

Franke Kitchen Systems,LLC extends the following warranty to the original purchaser of its faucets effective January 1, 2003.

All faucets installed in a private residence will carry a limited lifetime warranty on all mechanical parts to be free of manufacturing defects in material and workmanship under normal usage. All chrome finishes carry a limited lifetime warranty; all other finishes are warranted for five (5) years form the original date of purchase.

Marine and Outdoor Installation: Franke faucets are NOT warranted for Marine and Outdoor installations.

This warranty applies only to the original owner, providing the product has been installed in accordance with our installation instructions. used as recommended and in a normal residential application. In the event of a warranty claim, the owner will be required to provide proof of purchase - save sales receipt. This warranty covers all components which make the product operational. Franke, at its option, may repair or replace the product or components necessary to restore the product to good working condition. Franke reserves the right to inspect the installation prior to the actual replacement of the product or component part. This warranty does not cover misuse or abuse, accidental damages, scuffs or scratches, improper installation, abnormal usage, negligence or damage caused by improper maintenance or cleaning. Normal wear of parts is excluded from the warranty. Damage caused by impurities or acts beyond our control are not covered. Any product or part which has been repaired or altered in any manner outside of Franke's factory, unless previously authorized in writing by Franke, will void warranty. Any replacement excludes transportation and any labor re-installation costs. This warranty does not allow recovery of incidental or consequential damages such as loss of use, delay, property damage or other consequential damage, and Franke accepts no liability for such damages.

The Franke warranty is limited to the above conditions and to the warranty period specified herein and is exclusive. Franke DISCLAIMS all other warranties, expressed or implied, including IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR PURPOSE. This warranty gives you specific legal rights that may vary from state to state.

Further information

For any further information about our products, about the installation of them or about the guarantee, please contact our customer service department:

Franke Kitchen Systems 800 Aviation Parkway Smyrna, TN 37167, USA Phone: 800-626-5771 Email: ks-customerservice.us@franke.com

INSTALLATION MANUAL ABSINTHE POT FILLER PF5200 - PF5220 - PF5270 - PF5280



.06/2017



TECHNICAL DATA

| Flow Rate | 2 GPM at 60 PSI |
|----------------------------|-----------------|
| Recommended Water Pressure | e 30-75 PSI |
| Max. Water Pressure | 145 PSI |


Hole Size For Faucet

Certifies this faucet complies with ASME A112.18.1 / CSA B125.1 & NSF 61, NSF 372 and AB1953 NOTE:


1 3/8"


Contact us immediatly if you see inconsistencies. Phone: (1- 800-626-5771) website: www.franke.us/ks email: ks-customerservice.us@franke.com

CONTENTS IN BOX

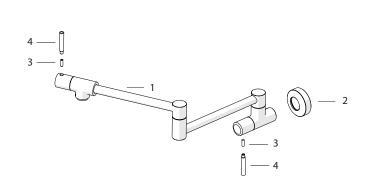

- 1 Faucet assembly
- 2 Escutcheon
- 3 Pin handle set screws x 2
- 4 Pin handles x 2

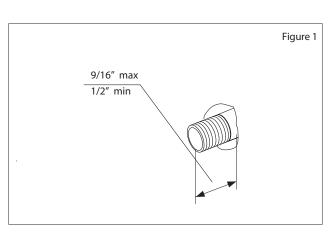

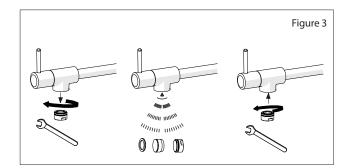

INSTALLATION INSTRUCTIONS

1. For best results, Franke recommends this faucet be installed by a licensed, professional plumber. Please read over the instructions before beginning the installation. Make sure to observe all local plumbing and building codes during installation of this faucet.

2. Remove all contents from the package and check for completeness.

3. Turn off cold water supply.

4. This faucet requires a ½" **NPT male nipple** (6) at the desired faucet location for proper installation. The nipple must have adequate bracing to support the weight of the faucet.

ATTENTION: The faucet should be connected to cold water only!

5. The water supply nipple (6) should extend from the finished wall 1/2" minimum and 9/16 " maximum as shown in figure 1.

NOTE: For steps 6-10, refer to figure 2.

6. Install the pin handle set screws (4) into the handle (3) with a 2.5 mm allen key as illustrated. Thread the pin handles (5) onto the set screws (4) hand tight.

7. Apply thread sealing tape or thread sealant onto the cold water supply nipple (6).

8. Slide the escutcheon (2) onto the faucet body (1) and thread the faucet body onto the water supply nipple (6).

9. Tighten body until connection is water tight and the faucet is level

10. Slide the escutcheon down the faucet body (1) against the finished mounting surface

11. Remove the aerator using a 7/8'' (22mm) wrench and turn on the water and let it run for several seconds to flush any debris from the faucet. While the faucet is on check for leaks. Turn off the faucet and reinstall the aerator – see figure 3