

Installation & Maintenance Manual



NOTICE

- Customer must register unit within thirty (30) days of installation in order to gain warranty coverage. See Warranty Card for details.
- When receiving the HeatMaster TC unit, any claims for damage or shortage in shipment must be filed immediately against the transportation company by the consignee.
- Leave all documentation received with appliance with the owner for future reference.



If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury or death.

FOR YOUR SAFETY

- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- WHAT TO DO IF YOU SMELL GAS
 - Do not try to light any appliance
 - Do not touch any electrical switch; do not use any phone in your building.
 - Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
 - If you cannot reach your gas supplier, call the fire department.

Installation and service must be performed by a qualified installer, service agency or the gas supplier.

INTENTIONALLY LEFT BLANK

PRODUCT AND SAFETY INFORMATION	IX
CHAPTER 1 - PRE-INSTALLATION REQUIREMENTS	1
 Code Compliance	1 1 2 2 2
CHAPTER 2 - COMBUSTION AIR & VENTING	3
 2.1. Combustion Air Contamination	4 5 5 6 6 6 8 8 8 8 8 8 8 8
CHAPTER 3 - UNIT PREPARATIONS	11
3.1. Handling Instructions3.2. Boiler Placement	
CHAPTER 4 - DOMESTIC PIPING	13
 4.1. General Piping Requirements	13 13 14 14
4.6.1 Standard Installation	

iii

4.7.	Automatic Air Vent	15
4.8.	Thermal Expansion	15
4.9.	Water Hammer	15
4.10.	Vacuum Breaker	15
4.11.	General Piping	17
4.12.	Domestic Piping	17
4.13.	Thermostatic Mixing Valve	17
4.14.	Recirculation Piping	
4.15.	Storage Tank Application	17
CHAR	PTER 5 - BOILER PIPING	19
5.1.	General Piping Requirements	19
5.2.	Pressure Relief Valve	
5.3.	Boiler Air Vent	20
5.4.	Low Water Cutoff Device	20
5.5.	Additional Limit Control	21
5.6.	Backflow Preventer	21
5.7.	Dirt Separator	21
5.8.	Boiler System Piping Applications	21
5.9.	Expansion Tank and Makeup Water	22
5.10.	Circulators	
5.11.	Sizing Primary Piping	
5.12.	System Piping – Zone Circulators	
5.13.	System Piping – Zone Valves	
5.14.	System Piping – Single Zone	
5.15.	System Piping - Radiant Heating	
5.16.	System Piping - Special Application	
CHAR	PTER 6 - INSTALLING VENT/COMBUSTION AIR & CONDENSATE DRAIN	27
6.1.	Installing Vent and Combustion Air	27
6.2.	Installing Condensate Drain Assembly	27
CHA	PTER 7 - GAS PIPING	29
7.1.	Gas Supply Piping Connection	29
	Natural Gas	
	2.1 Pipe Sizing	
7.	2.2 Supply Pressure Requirements	
7.3.	Propane Gas	
7.	3.1 Pipe Sizing	
7.	3.2 Supply Pressure Requirements	
	PTER 8 - INTERNAL WIRING	
8.1.	General Requirements	
8.2.	Fuse Locations	
0.2.		55

iv

CHAF	PTER 9 - EXTERNAL WIRING	35
9.1.	General Requirements	35
9.2.	Line Voltage Connections	35
9.3.	Internal Circulator	
9.4.	Circulator Wiring	
9.5.	Flame Status & Alarm Wiring	
9.6.	Low Voltage Connections	
9.7.	Thermostat Wiring	
9.8.	Outdoor Sensor Wiring	
9.9.	Domestic Hot Water Wiring	
9.10. 9.11.	Additional Boiler Limits External Modulation Control	
9.11. 9.12.	System Sensor Wiring	
9.12. 9.13.	Cascade Wiring	
9.14.	Modbus Wiring	
	PTER 10 - ACVMAX OPERATION	
10.1.	ACVMax Navigation	41
10.2.	ACVMax Menu Structure	
10.3.	Home Screen	
10.4.	Status Line Messages	
10.5.	Main Menu	45
10.6.	EZ Setup	45
10.7.	Heating EZ Setup	
	0.7.1 Select CH Demand (No outdoor sensor connected)	
10	0.7.2 Select CH Demand (Outdoor sensor connected)	47
10.8.	Domestic Hot Water EZ Setup	48
10.9.	EZ Setup Reset	49
10.10.	Display EZ Setup	49
10.11.	CH/DHW Operation	
10.12.	Boiler Information	50
10	0.12.1 Information Items	51
10).12.2Lockout Screen	52
10).12.3Manual Reset Lockouts	53
10	0.12.4 Automatic Reset Blocking Lockouts	54

CHAF	PTER 11 - START-UP PREPARATION	55
11.1.	Boiler System Fluid Requirements	55
11	1.1 Boiler Fluid pH Level 6.6 to 8.5	55
	1.2 Boiler Fluid Hardness Less Than 7 Grains	
11.	1.3 Chloride Level Less Than 125 ppm (mg/L)	55
11.	1.4 Total Dissolved Solids (TDS) Less Than 200 ppm (mg/L)	55
	1.5 Iron Level Less Than 0.5 ppm (mg/L)	
11	1.6 Copper Level Less Than 0.1 ppm (mg/L)	
	.1.7 Conductivity Less Than 400μS/cm (at 77°F [25°C])	
	1.8 Flush Boiler to Remove Sediment	
11.	1.9 Cleaning of Old Boiler/System:	55
	1.10 Cleaning of New Boiler/System:	
	1.11 Check and Test Antifreeze	
	1.12 Use of Antifreeze in the Boiler System	
11.2.	Filling the Domestic Water Tank	
11.3. 11.4.	Filling the Boiler System	
11.4. 11.5.	Check Low Water Cut-Off Device Check For Gas Leaks	
11.5.	Check Thermostat Circuit	
11.7.	Inspect Condensate Drain Assembly	
11.8.	Setting the Thermostatic Mixing Valve	
CHAF	PTER 12 - START-UP PROCEDURES	
12.1.	Final Checks Before Start-Up	61
12.2.	HeatMaster TC Start-Up	
12.3.	Check the HeatMaster TC and System	
12	.3.1 Check Boiler Piping	61
12	.3.2 Check Vent and Combustion Air Piping	61
12	.3.3 Verify Carbon Monoxide Detector	61
12	.3.4 Check Gas Piping	62
	.3.5 Verify Flame Pattern and Combustion	
12	.3.6 Measure Input - Natural Gas Only	63
12	.3.7 Test High Temperature Limit	63
CHAF	PTER 13 - OUTDOOR RESET CONTROL	65
13.1.	Mounting the Outdoor Sensor	65
13.2.	Wiring the Sensor	65
CHAF	PTER 14 - EXTERNAL MODULATING CONTROL	67
14.1.	Wiring the Modulating Controller	
14.2.	ACVMax Programming	
14.3.	Programming of External Modulating Control	67

CHAF	PTER 15 - CHECK-OUT PROCEDURES	69
CHAF	PTER 16 - INSTALLATION RECORD	71
CHAF	PTER 17 - MAINTENANCE SCHEDULES	73
17.1. 17.2.	Service Technician Owner Maintenance	
	PTER 18 - MAINTENANCE PROCEDURES	
18.1. 18.2.	Service Technician Maintenance Procedures Reported Problems	
18.3.	Check Surrounding Area	
18.4.	Inspect Burner Area	
18.5.	Check System Piping	
18.6.	Clean Condensate Drain Assembly	
18.7.	Check Ventilation Air Openings	
18.8.	Inspect Vent and Combustion Air Piping	
18.9.	Check Boiler System	
18.10.	Check Expansion Tank	
18.11.	Check Boiler Relief Valve	76
18.12.	Check Water Heater T&P Relief Valve	77
18.13.	Inspection of Ignitor	77
18.14.	Check Ignition Cable and Ground Wiring	77
18.15.	Check Control Wiring	77
18.16.	Check Control Settings	77
	Perform Start-up and Checkout Procedures	
18.18.	Check Burner Flame	78
	Check Flame Signal	
	Check Combustion Levels	
	Check Flue Gas Temperature	
	Clean Heat Exchanger	
	Check Carbon Monoxide Detectors	
	Review With Owner	
	Draining Procedure	
	.25.1Draining Boiler Tank	
	.25.2 Draining Domestic Tank	
	Torque Specifications Table	
CHAF	PTER 19 - REPLACEMENT PARTS	81
CHAF	PTER 20 - PRODUCT SPECIFICATIONS	87

vii

Fig. 1 - All Combustion Air from adjacent Indoor Spaces through Indoor Combustion Openings	5
Fig. 2 - All Combustion Air from Outdoors Through One Permanent Air Opening	5
Fig. 3 - All Combustion Air from Outdoors Through Ventilated Attic	6
Fig. 4 - All Combustion Air from Outdoors Through Horizontal Ducts	6
Fig. 5 - Standard Installation of the T&P Relief Valve	.14
Fig. 6 - Standard Installation Domestic Piping	
Fig. 7 - Domestic Piping with Optional Recirculation	.16
Fig. 8 - Domestic Piping with Optional Storage Tank	.16
Fig. 9 - Pressure Relief Valve Location	
Fig. 10 - Piping Component Legend	20
Fig. 11 - System Piping - Zoning with Zone Circulators	
Fig. 12 - System Piping - Zoning with Zone Valves	
Fig. 13 - System Piping - Single Zone System with Single System/Boiler Circulator	
Fig. 14 - Condensate Drain Assembly	28
Fig. 15 - Recommended Gas Supply Piping	
Fig. 16 - Gas Valve / Venturi Assembly - HeatMaster 240 TC	
Fig. 17 - Gas Valve / Venturi Assembly - HeatMaster 399 TC	
Fig. 18 - ACVMax Control Module Fuse Location	33
Fig. 19 - HeatMaster TC Boiler Factory Wiring	
Fig. 20 - Terminal Strip Location	
Fig. 21 - Typical Zone Panel Wiring to HeatMaster TC with Zone Valves	
Fig. 22 - Typical Zone Panel Wiring to HeatMaster TC with Zone Circulators	
Fig. 23 - ACVMax User Interface	
Fig. 24 - ACVMax Manual Operation screen	
Fig. 25 - HeatMaster 240 - 399 TC Jacket Components	
Fig. 26 - HeatMaster 240 - 399 TC Internal Components	
Fig. 27 - HeatMaster 240 TC Burner Components	
Fig. 28 - HeatMaster 399 TC Burner Components	
Fig. 29 - HeatMaster TC Control & Display Enclosures	
Fig. 30 - Front and Side Views HeatMaster 240 - 399 TC	
Fig. 31 - Rear Side View HeatMaster 240 - 399 TC	89
Graph 1 - Pressure Loss Through Boiler - Taco Circulators	90
Graph 2 - Pressure Loss Through Boiler - Grundfos Circulators	90

Table 1 - Gas Piping Sizing - Natural Gas	30
Table 2 - Outdoor Reset Preset Selections	
Table 3 - Throttle Screw Adjustment	63
Table 4 - Acceptable Combustion Levels	
Table 5 - Factory ACVMax Settings	67

IMPORTANT SAFETY INFORMATION FOR THE HOMEOWNER AND THE INSTALLER

This manual contains important information with respect to the installation, starting up and maintenance of the appliance.

This manual must be provided to the Homeowner, who will keep it in a safe place for future reference.

Triangle Tube accepts no liability for any damage, injury, or loss of life resulting from incorrect installation, alteration of any factory supplied parts, or the use of parts or fittings not specified by Triangle Tube. If there is a conflict or doubt about the proper installation of the unit or any factory supplied replacement parts please contact Triangle Tube Technical Support.

DEFINITIONS

The following terms are used throughout this manual to bring attention to the presence of potential hazards or to important information concerning the product.

Indicates the presence of a hazardous situation which, if ignored, will result in substantial property damage, serious injury, or death.

Indicates a potentially hazardous situation which, if ignored, can result in substantial property damage, serious injury, or death.



Indicates a potentially hazardous situation which, if ignored, can result in minor property damage, or injury.

NOTICE

Indicates special instructions on installation, operation or maintenance, which are important to the equipment but not related to personal injury hazards.

BEST PRACTICE

Indicates recommendations made by Triangle Tube for the installers, which will help to ensure optimum operation and longevity of the equipment.

\land DANGER

- Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system which has been under water.
- Avoid electrical shock when servicing the appliance, by disconnecting the electrical supply prior to performing maintenance.
- Failure to comply with these instructions will result in substantial property damage, serious injury, or death.



- What to do if you smell gas:
 - Do not try to light any appliance
 - Do not touch any electrical switch; do not use any phone in your building.
 - Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
 - If you cannot reach your gas supplier, call the fire department.
- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- Prior to installing this product, the qualified installer must read all instructions included in this manual and all accompanying manuals/ documents with this appliance.
- All installation steps required in these manuals must be performed in the proper order given.
- This product must be maintained / serviced and inspected annually by a qualified service technician.
- A byproduct of any gas fired appliance is carbon monoxide. Triangle Tube requires the installation of a minimum of two (2) hard-wired carbon monoxide detectors with an alarm and battery back-up; one in the mechanical room where the boiler is located and another installed in the living area outside the bedroom(s) for all installations. Consult the local authority having jurisdiction for any additional carbon monoxide detector requirements in your area. See Section 2.8 on page 8 for additional carbon monoxide detector requirements in Massachusetts.
- Failure to comply with these instructions can result in substantial property damage, serious injury, or death.

Triangle 🕠 Tube



- Should overheating occur or if the gas supply fails to shut off, turn OFF the manual gas control valve external to the appliance.
- Do not add cold make up water when the appliance is hot. Thermal shock can potentially cause cracks in the heat exchanger.
- Failure to comply with these instructions can result in substantial property damage, serious injury, or death.



- It is prohibited to carry out any modifications to the appliance without prior written consent from Triangle Tube.
- Faulty parts must only be replaced by genuine Triangle Tube factory parts.
- Failure to comply with these instructions can result in minor property damage, or injury.

NOTICE

- The homeowner is only permitted to carry out the basic set-up operations (EZ Setup) after he has received all relevant instructions from the installer. Any other set-up must be carried out by a qualified installer.
- In case of any anomaly, please call your qualified service technician.
- Make sure to reference the unit's model number and serial number from the rating label when inquiring about service or troubleshooting.
- Triangle Tube reserves the right to change the technical characteristics, components and features of its products without prior notice. Check for an updated version of this manual at www.triangletube.com.

\Lambda DANGER

HOT WATER CAN SCALD!

Water temperature over 125°F can cause severe burns instantly or death from scalds.



- Children, disabled and elderly are at highest risk of being scalded.
 - Never leave them unattended in or near shower, bathtub or sink.
 - Never allow small children to use a hot water faucet or draw their own bath.
- To avoid any potential scald hazard or if codes require specific water temperatures at the hot water faucet, the installer must:

•

- Install the factory supplied thermostatic mixing valve at this appliance and ensure it is working property AND
- Set the domestic storage temperature to the lowest temperature which satisfies your hot water needs.
- Feel and adjust water temperature before bathing or showering.
- Water drained from the system drain valves may be extremely hot.

TO AVOID INJURY:

- Make sure all connections are tight.
- Direct water flow away from any person.
- Failure to comply with these instructions will result in substantial property damage, serious injury, or death.



Bacteria can develop in the domestic water system if certain minimum water temperatures are not maintained. Failure to maintain at least 140°F [60°C] domestic hot water temperature or use the Antilegionella function can result in bacteria development, which can result in serious injury, or death.

Х



Protection must be taken against excessive temperature and pressure!

- TO PROTECT AGAINST EXCESSIVE TEM-PERATURE AND PRESSURE:
- Verify the Temperature & Pressure (T&P) relief valve is installed in the location provided (DHW Side).
- Verify the 45 psi relief valve supplied is installed in the location provided (CH Side).
- To avoid injury, install the relief valves in compliance with local code requirements.

Failure to comply with these instructions can result in substantial property damage, serious injury, or death.



- To prevent damage to the inner tank, the Installer must:
- Always fill inner tank prior to outer tank and always drain outer tank prior to inner tank.
- Relieve primary system pressure below 15 psig prior to draining inner tank.

Failure to comply with these instructions can result in minor property damage, or injury.

INTENTIONALLY LEFT BLANK

CHAPTER 1 - PRE-INSTALLATION REQUIREMENTS

1.1. Code Compliance

The HeatMaster TC must be installed by a qualified installer in accordance with the following:

- All applicable local, state, national and provincial codes, ordinances, regulations and laws.
- For installations in Massachusetts, code requires the HeatMaster TC to be installed by a licensed plumber or gas fitter, and if antifreeze is utilized, the installation of a reduced pressure back-flow preventer device is required in the boiler's cold water fill or make up water supply line.
- For installation in Massachusetts, all direct vented appliances must comply with the guidelines as outlined in *Section 2.8 on page 8*.
- The National Fuel Gas Code (NFPA54/ANSI Z 223.1).
- National Electric Code (ANSI/NFPA 70).
- For installations in Canada Installation Code for Gas Burning Equipment (CAN/CSA B149.1), Canadian Electrical Code Part 1 (CSA C22.1).
- Standards for Controls and Safety Devices for Automatically Fired Boilers (ANSI/ASME CSD-1), when required.

NOTICE

The HeatMaster TC gas manifold and gas controls meet the safe lighting and other performance requirements as specified in ANSI Z21.13.

1.2. Determining Product Location

NOTICE

The HeatMaster TC is certified for indoor, conditioned space installations ONLY.

Before locating the HeatMaster TC check for convenient locations to:

- Heating system piping
- Venting
- Gas supply piping
- Electrical service

Ensure the HeatMaster TC location allows the combustion air/vent piping to be routed directly through the building and terminate properly outside with a minimum amount of length and bends.

Ensure the area chosen for the installation of the Heat-Master TC is free of any combustible materials, gasoline, or other flammable liquids.



Failure to remove or maintain the area free of combustible materials, gasoline, or other flammable liquids or vapors can result in substantial property damage, serious injury, or death.

Ensure the HeatMaster TC and its controls are protected from dripping or spraying water during normal operation or service.

The HeatMaster TC should be installed in a location so that any water leaking from the boiler, piping connections, or relief valve will not cause damage to the surrounding area or any lower floors in the structure.

1.3. Flooring and Foundation

The HeatMaster TC is certified for installation on noncombustible floors ONLY. The floor must be capable of supporting the installed weight of 1500lbs [680 kg].



The HeatMaster TC must not be installed on carpeting or a combustible floor even if a foundation is used. Failure to comply with these instructions can result in substantial property damage, serious injury, or death.

Installer should provide a solid brick or concrete foundation pad at least 2 inches above floor level, if any of the following is true:

- There is a potential for the floor to become flooded.
- The floor is dirt, sand, gravel, or other loose material.
- The floor is uneven or sloped.

The minimum required foundation size is 30" wide by 32" deep.

Triangle 🚺 Tube

1.4. Boiler Freeze Protection Feature

The ACVMax boiler management system has a freeze protection feature built in. This feature monitors the boiler water temperature and responds as follows when no call for heat is present:

- 46°F [8°C] Pump outputs configured to respond to a CH1 Call are enabled.
- 42°F [6°C] Pump outputs configured to respond to a CH1 or CH2 Call are enabled, Burner operates at low fire.
- 60°F [15°C] Freeze protection ends. Burner & all pumps turn off after completing CH Post Pump Time.



- The boiler freeze protection feature is disabled during a hard lockout. The burner will not fire, but the circulators will operate.
- The boiler freeze protection feature is designed to protect the boiler, not the heating system. The boiler should be installed in a primary/secondary piping arrangement if it is installed in an unheated space or exposed to water temperatures of 46°F or less. Refer to *Chapter 11 on page 55* for antifreeze guides.
- Failure to comply can result in minor property damage, or injury.

1.5. DHW Frost Protection

The Water Heater Sensor used in the HeatMaster TC provides a Frost Protection feature to the water heater. The Frost Protection feature is designed to protect the water heater from a potential freeze up. Frost Protection will generate a DHW call once the water heater temperature falls below 42° F [6°C]. Once Frost Protection is activated, the burner will fire. Frost Protection will end once the water heater temperature is raised to 60°F [16°C]. This feature is always active and cannot be disabled. Frost Protection is still active even if DHW operation has been disabled.

1.6. Boiler Replacement

If the HeatMaster TC is replacing an existing boiler, the following items should be checked and corrected prior to installation:

- Boiler piping leaks and corrosion.
- Proper location and sizing of the expansion tank on the boiler heating loop.
- The existing vent system is appropriate for the Heat-Master TC and it is correctly installed. Refer to the Vent Supplement for the vent system requirements.
- Amount and quality of propylene glycol within the system, if applicable.

1.7. Recommended Clearances

The HeatMaster TC is approved for zero clearance to combustibles, excluding vent and boiler piping.

- Boiler piping must be a minimum 1/4 inch from combustible materials.
- Reference the Vent Supplement for vent pipe clearance requirements.

BEST PRACTICE

It is recommended that the following clearances be maintained for serviceability:

- Top boiler jacket 24 inches [610 mm].
- Front 24 inches [610 mm].
- Rear 12 inches [305 mm].
- Sides 12 inches [305 mm].

NOTICE

When maintaining less than recommended service clearances, some product labeling, including the rating label, may become hidden and unreadable.

- If the recommended clearances listed above cannot be maintained or the enclosure in which the boiler is installed is less than 175 cubic feet, the space must be ventilated. See Section 2.2 on page 4.
- When installing the HeatMaster TC in a confined space, sufficient air must be provided to allow, under normal operating conditions, proper air flow around the product to maintain ambient temperatures within safe limits to comply with the National Fuel Gas Code (NFPA 54 / ANSI Z223.1)
- Failure to comply with these instructions can result in substantial property damage, serious injury, or death.

1.8. Residential Garage Installations

When installing the HeatMaster TC in a residential garage, the following special precautions per NFPA 54/ ANSI Z223.1 must be taken:

- Mount the unit a minimum 18 inches [458 mm] above the floor level of the garage.
- Locate or protect the unit in a manner so it cannot be damaged by a moving vehicle.



2.1. Combustion Air Contamination

If the HeatMaster TC combustion air inlet is located in an area likely to cause or contain contamination, or if products which could contaminate the air cannot be removed, the combustion air must be repiped and terminated at another location. Contaminated combustion air will damage the unit and its burner system, and can result in substantial property damage, serious injury, or death.



- Do not operate the HeatMaster TC if the combustion air inlet is located near a laundry room or pool facility. These areas will always contain hazardous contaminants.
- Pool, laundry, common household, and hobby products often contain fluorine or chlorine compounds. When these chemicals pass through the burner and vent system, they can form strong acids. These acids will corrode the heat exchanger, burner components, and vent system, causing serious damage and possible flue gas spillage or water leakage into the surrounding area.
- Please read the information listed on the right. If contaminating chemicals are located near the area of the combustion air inlet, the installer must pipe the combustion air inlet to an area free of these chemicals, as indicated in *Chapter 6 on page 27*.
- Failure to comply with these instructions will result in substantial property damage, serious injury, or death

Potential contaminating products

- Spray cans containing chloro/fluorocarbons
- Permanent Wave Solutions
- Chlorinated wax
- Chlorine based swimming pool chemicals / cleaners
- Calcium Chloride used for thawing ice
- Sodium Chloride used for water softening
- Refrigerant leaks
- Paint or varnish removers
- Hydrochloric acid / muriatic acid
- Cements and glues
- Antistatic fabric softeners used in clothes dryers
- Chlorine-type bleaches, detergents, and cleaning solvents found in household laundry rooms
- Adhesives used to fasten building products and other similar products

Areas likely to contain these products

- Dry cleaning / laundry areas and establishments
- Beauty salons
- Metal fabrication shops
- Swimming pools and health spas
- Refrigeration Repair shops
- Photo processing plants
- Auto body shops
- Plastic manufacturing plants
- Furniture refinishing areas and establishments
- New building construction
- Remodeling areas
- Garages with workshops

2.2. Ventilation and Combustion Air Requirements - Direct Vent

A Direct Vent appliance utilizes uncontaminated outdoor air piped directly to the appliance for combustion.

For Direct Vent installations involving only the Heat-Master TC, in which the minimum service clearances are maintained as listed in *Section 1.7 on page 2*, no ventilation openings are required, but may be necessary to equalize the air pressure with the outside.

For Direct Vent installations involving only the HeatMaster TC, in which the minimum service clearances are not maintained as listed in *Section 1.7 on page 2*, the space / enclosure must provide two openings for ventilation. The openings must be sized to provide 1 square inch of free area per 1,000 BTUH of boiler input. The openings shall be placed 12 inches from the top of the space and 12 inches from the floor of the space.

For installations in which the HeatMaster TC shares the space with air movers (exhaust fan, clothes dryers, fireplaces, etc.) and other combustion equipment (gas or oil) the space must be provided with adequate air openings to provide ventilation and combustion air to the equipment. To properly size the ventilation / combustion air openings, the installer must comply with the National Fuel Gas Code (NFPA 54 / ANSI Z223.1) for installations in the U.S. or CAN/CSA B149.1 for installations in Canada.

The space must be provided with ventilation / combustion air openings properly sized for all make-up air requirements (exhaust fans, clothes dryers, fireplaces, etc.) and the total input of all appliances located in the same space as the HeatMaster TC, excluding the input of a Direct Vent HeatMaster TC which uses combustion air directly from the outside, thus additional free area for the openings is not required. Failure to provide or properly size the openings can result in substantial property damage, serious injury, or death.

2.3. Ventilation and Combustion Air Requirements - Category IV

A Category IV appliance utilizes uncontaminated indoor or outdoor air surrounding the appliance for combustion.

BEST PRACTICE

In order to reduce the potential risks associated with indoor contaminates (see list in **Section 2.1 on page 3**), flammable vapors and tight housing construction with little or no infiltration air, it is recommended to pipe uncontaminated combustion air directly from the outdoors to the appliance. This practice also promotes higher system efficiency by reducing heated indoor air from being exhausted from the house and replaced by cold infiltration air into the house.

For installations in which the HeatMaster TC shares the space with air movers (exhaust fan, clothes dryers, fireplaces, etc.) and other combustion equipment (gas or oil) the space must be provided with adequate air openings to provide ventilation and combustion air to the equipment. To properly size the ventilation / combustion air openings, the installer must comply with the National Fuel Gas Code (NFPA 54 / ANSI Z223.1) for installations in the U.S. or CAN/ CSA B149.1 for installations in Canada.



The space must be provided with ventilation / combustion air openings properly sized for all make-up air requirements (exhaust fans, clothes dryers, fireplaces, etc.) and the total input of all appliances, including the Heat-Master TC when located in the same space. Failure to provide or properly size the openings can result in substantial property damage, serious injury, or death.

2.4. Methods of Accessing Combustion Air Into A Space - Category IV

2.4.1. Indoor Combustion Air


NOTICE

- The methods listed in this chapter for accessing Indoor Combustion Air assume that the infiltration rate is adequate and not less than .40 ACH.
- For infiltration rates less than .40 ACH, reference the National Fuel Gas Code (NFPA 54 / ANSI Z223.1) for additional guidance.

Opening Size and Location

Openings used to connect indoor spaces shall be sized and located in accordance with the following, see *Fig. 1 below* :

• Combining spaces on the same story. Each opening shall have a minimum free area of 1 sq. in./1000 Btu/hr of the total input rating of all gas utilization equipment in the space, but not less than 100 sq. inches. One opening shall commence within 12 inches of the top, and one opening shall commence within 12 inches of the bottom of the enclosure. The minimum dimension of air openings shall be not less than 3 inches.

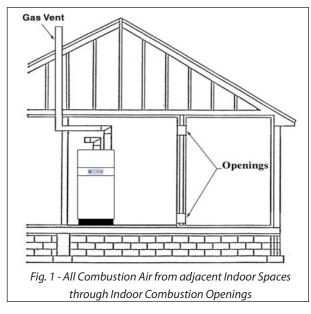

• Combining spaces in different stories. The volumes of spaces in different stories shall be considered as communicating spaces where such spaces are connected by one or more openings in doors or floors having a total minimum free area of 2 sq. in./1000 Btu/hr of total input rating of all gas utilization equipment.

2.4.2. Outdoor Combustion Air

BEST PRACTICE


Isolating the combustion appliance room from the rest of the building and bringing in uncontaminated outside air for combustion and ventilation is always preferred.

Opening Size and Location

The minimum dimension of air openings shall be not less than 3 inches

Openings used to supply combustion and ventilation air shall be sized and located in accordance with the following:

- One Permanent Opening Method. One permanent opening, commencing within 12 in. of the top of the enclosure, shall be provided as shown in Fig. 2 below. The equipment shall have clearances of at least 1 inch from the sides and 6 in. from the front of the appliance. The opening shall directly communicate with the outdoors or shall communicate through a vertical or horizontal duct to the outdoors or spaces that freely communicate with the outdoors and shall have a minimum free area of the following:
 - 1sq. in./3000 Btu/hr of the total input rating of all equipment located in the enclosures, and
 - Not less than the sum of the areas of all vent connectors in the space.

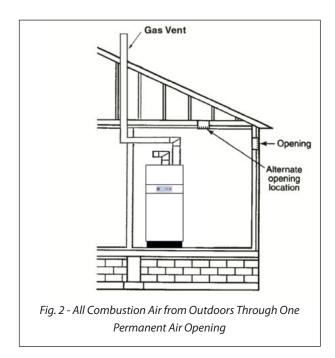

CHAPTER 2 - COMBUSTION AIR & VENTING

- Two Permanent Opening Method. Two permanent openings, one commencing within 12 in. of the top and one commencing within 12 in. of the bottom of the enclosure, shall be provided. The openings shall communicate directly, or by ducts, with the outdoors or spaces that freely communicate with the outdoors, as follows:
 - Where directly communicating with the outdoors or where communication to the outdoors is through vertical ducts, each opening shall have a minimum free area of 1 sq. in./4000 Btu/ hr of total input rating of all equipment in the enclosure. See Fig. 3 below.


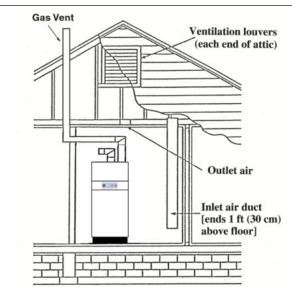


Fig. 3 - All Combustion Air from Outdoors Through Ventilated Attic

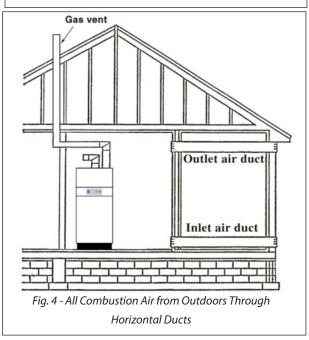

• Where communicating with the outdoors is through horizontal ducts, each opening shall have a minimum free area of not less than 1 sq.in./2000 Btu/hr of total input rating of all equipment in the enclosure. *See Fig. 4 below.*

2.4.3 Combination of Indoor and Outdoor Combustion Air

Indoor Openings. Where used, openings connecting the interior spaces shall comply with *Section 2.4.1 on page 5*.

Outdoor Opening(s) Location. Outdoor opening(s) shall be located in accordance with *Section 2.4.2 on page 5*.

Outdoor Opening(s) Size. Outdoor opening(s) shall be calculated in accordance with the following:

- The ratio of the interior spaces shall be the available volume of all communicating spaces divided by the required volume.
- The outdoor size reduction factor shall be 1 minus the ratio of interior spaces.
- The minimum size of outdoor opening(s) calculated in accordance with the above outdoor air chapter multiplied by the reduction factor. The minimum dimension of air openings shall not be less than 3 in.

2.5. Combustion Air and Vent Piping

The HeatMaster TC requires a Category IV venting system, which is designed for pressurized venting and condensate.

The HeatMaster TC is certified as a Category IV or Direct Vent (sealed combustion) appliance. A Category IV appliance utilizes uncontaminated indoor or outdoor air surrounding the appliance for combustion. A Direct Vent appliance utilizes uncontaminated outdoor air piped directly to the appliance for combustion.



Do not install the HeatMaster TC into a common vent with any other gas or oil appliances. This will cause flue gas spillage or appliance malfunction, which will result in substantial property damage, serious injury, or death.

BEST PRACTICE

In order to reduce the potential risks associated with indoor contaminates (see list in **Section 2.1 on page 3**), flammable vapors and tight housing construction with little or no infiltration air, it is recommended to pipe uncontaminated combustion air directly from the outdoors to the appliance. This practice also promotes higher system efficiency by reducing heated indoor air from being exhausted from the house and replaced by cold infiltration air into the house.

Verify installed combustion air and vent piping are sealed gas tight and meet all provided instructions and applicable codes, failure to comply will result in serious injury, or death.

Failure to properly support the vent system can cause the venting system to fail, resulting in substantial property damage, serious injury, or death.

NOTICE

Install combustion air and vent pipe as detailed in the Vent Supplement included in the boiler installation envelope. Refer to optional vent kit instructions for additional vent installation instructions.

2.6. Removal of an Existing Boiler from a Common Vent System

BEST PRACTICE

When an existing boiler is removed from a common venting system, the common venting system is likely to be too large for proper venting of the remaining appliances. At the time of removal of an existing boiler, the following steps shall be followed with each appliance remaining connected to the common venting system placed in operation, while the other appliances remaining connected to the common venting system are not in operation.

- 1. Seal any unused openings in the common venting system.
- 2. Visually inspect the venting system for proper size and horizontal pitch and determine there is no blockage or restriction, leakage, corrosion and other deficiencies which could cause an unsafe condition.
- 3. Insofar as is practical:
 - Close all exterior building doors and windows and all doors between the space in which the appliances remaining connected to the common venting system are located and other spaces of the building.
 - Turn on clothes dryers and any appliance not connected to the common venting system.
 - Turn on any exhaust fans, such as range hoods and bathroom exhausts, so they will operate at maximum speed.
 - Do not operate a summer exhaust fan.
 - Close fireplace dampers.
- 4. Place in operation the appliance being inspected.
 - Follow the lighting instructions.
 - Adjust thermostat so appliance will operate continuously.
- 5. Test for spillage at the draft hood relief opening after 5 minutes of main burner operation. Use the flame of a match or candle, or smoke from a cigarette, cigar or pipe.
- 6. After it has been determined that each appliance remaining connected to the common venting system properly vents when tested as outlined above, return doors, windows, exhaust fans, fireplace dampers, and any other gas-burning appliance to their previous condition of use.
- 7. Any improper operation of the common venting system should be corrected so the installation conforms with the National Fuel Gas Code (NFPA 54 / ANSI Z223.1) for installations in the U.S. or CAN/CSA B149.1 for installations in Canada. When resizing any portion of the common venting system, the common venting system should be resized to approach the minimum size as determined using the appropriate tables in Chapter 13 of the National Fuel Gas Code (NFPA 54 / ANSI Z223.1) for installations in the U.S. or CAN/CSA B149.1 for installations in the U.S. or CAN/CSA B149.1 for installations in Canada.



Do not install the HeatMaster TC into a common vent with any other gas or oil appliances. This will cause flue gas spillage or appliance malfunction, resulting in substantial property damage, serious injury, or death.

2.7. Carbon Monoxide Detector Installation

Triangle Tube requires the installation of a minimum of two (2) hard wired carbon monoxide detectors with an alarm and battery back-up in the mechanical room where the HeatMaster TC is located and another installed in the living area outside the bedroom(s) for all installations.

Each carbon monoxide detector shall comply with NFPA 720 and be ANSI/UL 2034 listed and IAS certified.

Consult the local authority having jurisdiction for any additional carbon monoxide detector requirements in your area. See *Section 2.8 on page 8* for additional carbon monoxide detector requirements in Massachusetts.

A byproduct of any gas fired appliance is carbon monoxide. Failure to install carbon monoxide detectors with alarms can result in serious injury, or death.

2.8. Commonwealth of Massachusetts Installation Requirements

For all side wall horizontally vented gas fueled equipment installed in every dwelling, building or structure used in whole or in part for residential purposes, including those owned or operated by the Commonwealth and where the side wall exhaust vent termination is less than seven (7) feet above finished grade in the area of the venting, including but not limited to decks and porches, the following requirements shall be satisfied:

2.8.1 Installation of Carbon Monoxide Detectors.

- 1. At the time of installation of the side wall horizontal vented gas fueled equipment, the installing plumber or gasfitter shall observe that a hard wired carbon monoxide detector with an alarm and battery back-up is installed on the floor level where the gas equipment is to be installed.
- 2. In addition, the installing plumber or gasfitter shall observe that a battery operated or hard wired carbon monoxide detector with an alarm is installed on each additional level of the dwelling, building or structure served by the side wall horizontal vented gas fueled equipment.
- 3. It shall be the responsibility of the property owner to secure the services of qualified licensed professionals for the installation of hard wired carbon monoxide detectors.

- a. In the event that the side wall horizontally vented gas fueled equipment is installed in a crawl space or an attic, the hard wired carbon monoxide detector with alarm and battery back-up may be installed on the next adjacent floor level.
- b. In the event that the requirements of this subdivision can not be met at the time of completion of installation, the owner shall have a period of thirty (30) days to comply with the above requirements; provided, however, that during said thirty (30) day period, a battery operated carbon monoxide detector with an alarm shall be installed.

2.8.2 Approved Carbon Monoxide Detectors.

Each carbon monoxide detector as required in accordance with the above provisions shall comply with NFPA 720 and be ANSI/UL 2034 listed and IAS certified.

2.8.3 Signage

A metal or plastic identification plate shall be permanently mounted to the exterior of the building at a minimum height of eight (8) feet above grade directly in line with the exhaust vent terminal for the horizontally vented gas fueled heating appliance or equipment.

The sign shall read, in print size no less than one half (1/2) inch in size, **"GAS VENT DIRECTLY BELOW. KEEP CLEAR OF ALL OBSTRUCTIONS".**

2.8.4 Inspection.

The state or local gas inspector of the side wall horizontally vented gas fueled equipment shall not approve the installation unless, upon inspection, the inspector observes carbon monoxide detectors and signage installed in accordance with the provisions of 248 CMR 5.08(2)(a) 1 through 4.

Exemptions

The following equipment is exempt from 248 CMR 5.08(2)(a) 1 through 4:

- 1. The equipment listed in Chapter 10 entitled "Equipment Not Required To Be Vented" in the most current edition of NFPA 54 as adopted by the Board; and
- 2. Product Approved side wall horizontally vented gas fueled equipment installed in a room or structure separate from the dwelling, building or structure used in whole or in part for residential purposes.

Triangle Tube

2.8.5 Manufacturer Requirements - Gas Equipment Venting System Provided.

When the manufacturer of Product Approved side wall horizontally vented gas equipment provides a venting system design or venting system components with the equipment, the instructions provided by the manufacturer for installation of the equipment and the venting system shall include:

- Detailed instructions for the installation of the venting system design or the venting system components; and
- 2. A complete parts list for the venting system design or venting system.

2.8.6 Manufacturer Requirements - Gas Equipment Venting System Not Provided.

When the manufacturer of a Product Approved side wall horizontally vented gas fueled equipment does not provide the parts for venting the flue gases, but identifies "special venting systems", the following requirements shall be satisfied by the manufacturer:

- 1. The referenced "special venting system" instructions shall be included with the appliance or equipment installation instructions; and
- 2. The "special venting systems" shall be Product Approved by the Board, and the instructions for that system shall include a parts list and detailed installation instructions.

A copy of all installation instructions for all Product Approved side wall horizontally vented gas fueled equipment, all venting instructions, all parts lists for venting instructions, and/or all venting design instructions shall remain with the appliance or equipment at the completion of the installation.

INTENTIONALLY LEFT BLANK

CHAPTER 3 - UNIT PREPARATIONS

3.1. Handling Instructions

The HeatMaster TC is generally easier to handle and maneuver once removed from the shipping packaging.

To remove the shipping packaging:

NOTICE

Use care not to bump or tip the boiler over, as damage to the boiler will result.

1. Cut open the plastic wrap.

NOTICE

When cutting the plastic wrap open, use care not to damage the exterior jacket of the appliance.

- 2. Remove the shipping straps.
- 3. Remove all shipping protections.
- 4. Remove the boxes from the bottom of the pallet containing field installable accessories.
- 5. Discard all packing materials.

3.2. Boiler Placement



 
When lifting or moving the appliance, make sure to use appropriate handling equipment and to transport the appliance from the rear only. Failure to comply can result in substantial property damage, serious injury, or death.

- 1. Utilize a pallet jack or forklift to move the appliance into the installation location.
- 2. Lift the appliance up from the pallet using a forklift. The forks must go all the way through the bottom of the unit.



Ensure that the forklift forks go all the way through to the opposite side of the unit. Failure to lift the unit properly can result in minor property damage, or injury.

3. Remove the pallet and lower the appliance into position. Ensure the appliance is level and stable.





INTENTIONALLY LEFT BLANK

4.1. General Piping Requirements

- All plumbing must meet or exceed all local, state and national plumbing codes.
- Support all piping using hangers. DO NOT support piping by the unit or its components.
- Use isolation valves to isolate system components.
- Install unions for easy removal of the HeatMasterTC from the system piping.



Use a two-wrench method when tightening field piping onto the boiler piping connections. Use one wrench to prevent the boiler connections from turning and the second to tighten field piping. Failure to support the boiler piping connections could damage piping, causing a leak, resulting in substantial property damage, serious injury, or death.

4.2. Code Restrictions

The single wall heat exchanger in the HeatMaster TC water heater complies with National Standard Plumbing Code, provided that:

- Boiler water (including additives) is practically non-toxic, having toxicity rating or class of 1, as listed in Clinical Toxicology of Commercial Products, and
- Boiler water pressure is limited to maximum 30 psig by approved relief valve.

Single wall heat exchangers are permitted under the Uniform Plumbing Code - Paragraph L3.2. and L3.3 if they satisfy all of the following requirements.

- The heat transfer medium is potable water or contains only substances which are recognized as safe by the U.S. Food and Drug Administration.
- The pressure of the heat transfer medium is maintained less than the normal minimum operating pressure of the potable water system
- The equipment is permanently labeled to indicate that only additives recognized as safe by the FDA shall be used in the heat transfer medium.

Other heat exchanger designs may be permitted where approved by the Administrative Authority.

4.3. Operating Restrictions

- Maximum DHW outlet temperature is 150°F, when factory supplied mixing valve is installed.
- Maximum boiler water temperature rating is 210°F.
- Maximum working pressure for inner (domestic water) tank is 150 psig.
- Maximum working pressure for outer (boiler water) tank is 45 psig.
- Water quality limitations (based on E.P.A National Secondary Drinking Water Regulations):
 - Chloride, less than 150 ppm or mg/l
 - pH value min. 6, max. 8
 - Total hardness 3 7 grains/gallon or 50-120 ppm or mg/l.
 - Total Dissolved Solids (TDS), less than 120 ppm or mg/l.
 - Iron less than 0.3 ppm or mg/l.
 - Aluminum, less than 0.2 ppm or mg/l.
 - Copper, less than 1 ppm or mg/l.
 - Manganese, less than 0.05 ppm or mg/l.
 - Zinc, less than 5 ppm or mg/l.

BEST PRACTICE

In hard water areas (more than 7 grains of hardness) soften the cold domestic supply water to the appliance to prevent scaling.

NOTICE

- Any water conditioning system must be installed and maintained in accordance with manufacturer's specifications.
- Do not install the HeatMaster TC water heater on any application if the boiler piping contains non-oxygen barrier tubing or if the boiler piping is considered an "open system". Exposing the outer tank of the HeatMaster TC water heater to oxygen contamination will lead to premature tank failure and denial of the warranty.

4.4. Temperature & Pressure (T&P) Relief Valve

A T&P relief valve is factory-installed on the top of the water heater as shown in *Fig. 5 below*.

4.5. T&P Relief Valve Discharge Piping

T&P relief valve discharge piping must be:

- Made of material serviceable for temperatures of 250°F or greater.
- Directed so that hot water flows away from all persons.
- Directed to a suitable place for disposal.
- Installed so as to allow complete draining of the T&P relief valve and discharge line.

T&P relief valve discharge piping must not be:

- Excessively long. Using more than 2 elbows or 15 feet of piping can reduce discharge capacity.
- Directly connected to a drain. Terminate discharge piping within 6" from drain. Refer to local codes.
- Plugged, reduced or restricted.
- Subject to freezing.

Do not install any valve between T&P relief valve and tank connection or on T&P relief valve discharge piping. Do not plug T&P relief valve or discharge piping. Improper placement and piping of T&P relief valve can cause severe personal injury, death or substantial property damage.

4.6. Drain Valve

Drain valve and fittings are supplied by others.

4.6.1 Standard Installation

- Install a tee connection at the domestic cold water inlet, as shown in *Fig. 6 on page 15*.
- Pipe the drain piping with drain valve from the tee connection to:
- a suitable place for disposal
- or
- terminate within 12" of the floor

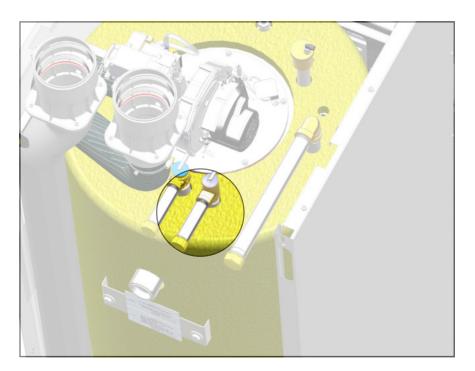


Fig. 5 - Standard Installation of the T&P Relief Valve

() Triangle Tube

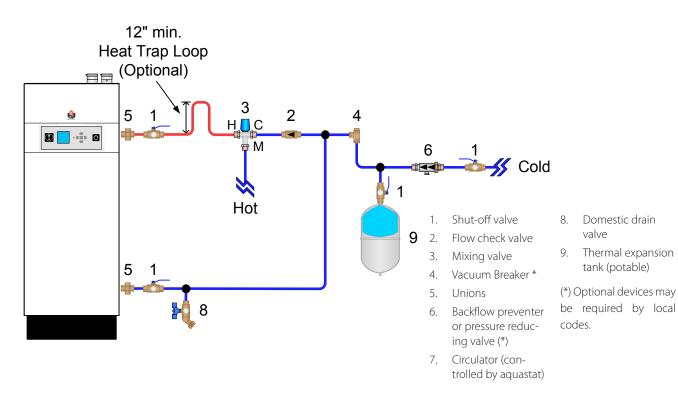


Fig. 6 - Standard Installation Domestic Piping

4.7. Automatic Air Vent

An automatic air vent is factory-installed.

4.8. Thermal Expansion

If a backflow preventer, check valve or pressure reducing valve is piped on cold water supply piping of water heater, install an expansion tank on cold water supply line to prevent normal thermal expansion from repeatedly forcing open T&P relief valve.

NOTICE

T&P relief valve is not intended for constant duty, such as relief of pressure due to repeated normal thermal expansion. Correct this condition by installing a properly sized expansion tank in the domestic water system. Refer to expansion tank manufacturer's installation instructions for proper sizing.

4.9. Water Hammer

Dishwashers, clothes washers and fast-closing positive shut-off valves incorporated in the system all contribute to creating water shock. Install a water hammer arrester to prevent damage to pipes and appliances. See device manufacturer's instructions for application and installation.

NOTICE

Water hammering within the domestic piping system can cause premature failure of the inner tank of the water heater. This type of failure is NOT covered under warranty.

4.10. Vacuum Breaker

Installing a vacuum breaker on the domestic cold water inlet will prevent damage to the inner tank if a negative pressure is developed in the domestic supply line. See manufacturer's instructions for application and installation of the vacuum breaker.

Triangle 🕠 Tube

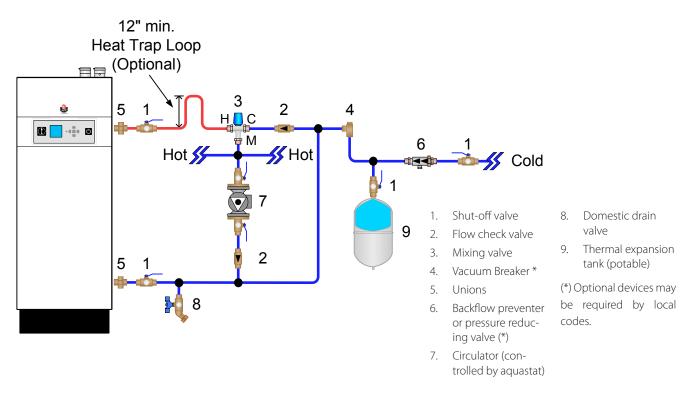


Fig. 7 - Domestic Piping with Optional Recirculation

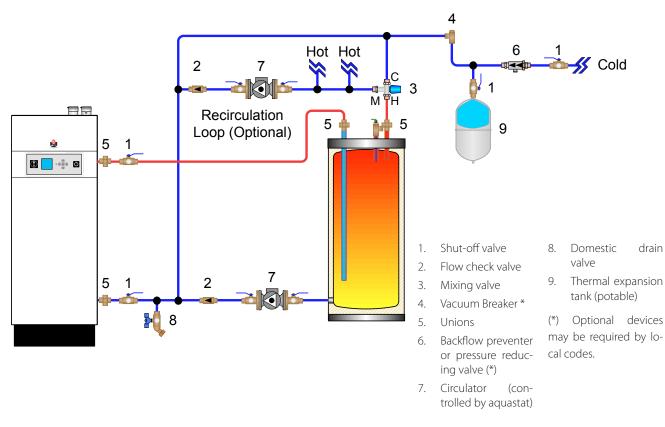


Fig. 8 - Domestic Piping with Optional Storage Tank

Triangle Tube

4.11. General Piping

- For domestic water piping diagrams, see *Fig. 6* on page 15 and Fig. 7 & Fig. 8 on page 16.
- All plumbing must meet or exceed all local, state and national plumbing codes.
- Use pipe dope or tape suitable for potable water systems.
- Use isolation valves to isolate system components.

4.12. Domestic Piping

- Use dielectric unions or couplings to protect hot and cold water fittings from corrosion when connecting dissimilar materials such as copper and galvanized iron pipe.
- If copper pipe is used for domestic water connections, first solder pipe to a threaded adapter and then screw adapter into unit
- When the water supply pressure is higher than 70 psig, it is recommended to install a pressure reducing valve on cold water supply line to prevent water loss through T&P relief valve.

4.13. Thermostatic Mixing Valve

The HeatMaster TC is factory supplied with a thermostatic mixing valve. The mixing valve must be installed as shown in *Fig. 6 on page 15 and Fig. 7 & Fig. 8 on page 16*.

The operating range of the thermostatic mixing is 95°F [35° C] to 150°F [65° C].

For applications with a domestic recirculation loop, the recirculation pump should be controlled by an aquastat. The maximum recommended setting of the aquastat is 10°F lower than the thermostatic mixing valve setting.



For proper operation of the thermostatic mixing valve and to prevent potential scalding hazards, the recirculation loop should be controlled by an aquastat. DO NOT use continuous recirculation.

Failure to comply with this instruction will result in serious injury, or death.

4.14. Recirculation Piping

Recirculation piping must be installed in the cold water inlet as shown in *Fig. 7 on page 16*.

A stainless steel or bronze circulator is recommended.

4.15. Storage Tank Application

For applications requiring large volumes of domestic hot water in a relatively short period of time, the installer may include a storage tank (see *Fig. 8 on page 16*) in the domestic piping.

The installer must:

- Relocate the thermostatic mixing valve from the HeatMaster TC to the outlet of the storage tank.
- Provide recirculation from the storage tank back to the HeatMaster TC using a stainless steel or bronze circulator.

INTENTIONALLY LEFT BLANK

5.1. General Piping Requirements

- All plumbing must meet or exceed all local, state and national plumbing codes.
- Support all piping using hangers. DO NOT support piping by the unit or its components.
- Use isolation valves to isolate system components.
- Install unions for easy removal of the HeatMaster TC from the system piping.
- If nonmetallic pipe is used in the system, it must have a maximum oxygen diffusion rate of 0.1 mg/ liter per day.




Use a two-wrench method when tightening field piping onto the boiler piping connections. Use one wrench to prevent the boiler connections from turning and the second to tighten field piping. Failure to support the boiler piping connections could damage piping, causing a leak, resulting in substantial property damage, serious injury, or death.

5.2. Pressure Relief Valve

- 1. The HeatMaster TC is supplied with a factory installed 45 psi pressure relief valve. See *Fig. 9 below* for relief valve location.
- 2. To avoid potential water damage to the surrounding area or potential scalding hazard due to the operation of the relief valve, the discharge piping:
 - Must be connected to the discharge outlet of the relief valve and directed to a safe place of disposal.
 - Length should be as short and direct as possible. The size of the discharge line must not be reduced, maintain the same size as the outlet of the relief valve.
 - Must be directed downward towards the floor at all times. The piping should terminate at least 6 inches [153 mm] above any drain connection to allow clear visibility of the discharge.
 - Must terminate with a plain end, not with a threaded end. The material of the piping must have a service-able temperature rating of 250°F or greater.
 - Must not be subject to conditions where freezing could occur.
 - Must not contain any shut-off valves or obstructions. No shut-off valve should be piped between the boiler and relief valve.



Failure to comply with the guidelines on installing the pressure relief valve discharge piping can result in substantial property damage, serious injury, or death.

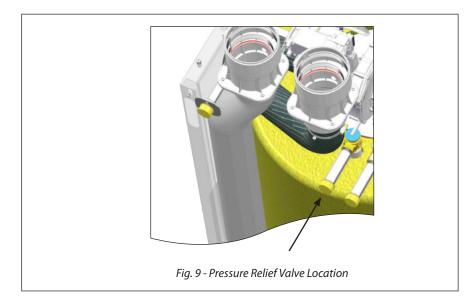

5.3. Boiler Air Vent

NOTICE

This boiler is supplied with a factory installed automatic air vent that will provide reliable operation in purging air from the boiler. The fitting and hose installed on the automatic air vent MUST remain tight at all times.


Never loosen the fitting to allow air to escape the air vent. Air will exit with the fitting fully tightened in place.

5.4. Low Water Cutoff Device

- The HeatMaster TC is equipped with a factory installed pressure sensor type Low Water Cut Off (LWCO).
- The minimum operating system pressure is 10 psig.
- Check local codes if a Low Water Cutoff is required. If so, determine if this device meets their requirements.

NOTICE

The HeatMaster TC control system also senses the water temperatures entering and exiting the heat exchanger to provide protection against low water conditions. Where local codes and jurisdiction do not accept a pressure device for low water protection, the jurisdiction may accept this HeatMaster TC integral control function as a means of providing low water protection.

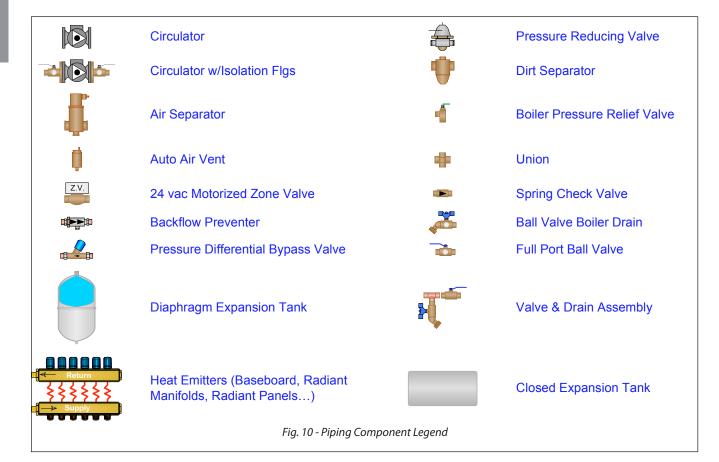

5.5. Additional Limit Control

If a separate Low Water Cut Off (LWCO) is required by the local jurisdiction or when the boiler is installed above the system piping, the following guidelines must be followed:

- The LWCO must be designed for water installations, electrode probe-type is recommended.
- The LWCO must be installed in a tee connection on the boiler supply piping above the boiler.
- Wiring of the LWCO to the HeatMaster TC is done directly onto the low voltage terminal strip. Reference *Fig. 19 on page 34* for available external limit (manual or auto reset) terminals.

If the installation is to comply with ASME or Canadian requirements, an additional high temperature limit may be required. Consult local code requirements to determine compliance. The limit should be installed as follows:

- Install the limit in the boiler supply piping between the boiler and any isolation valve.
- Consult heat exchanger for maximum temperature set point.
- For wiring of the limit, reference *Fig. 19 on page 34.* Wire the limit to the manual reset terminals on the low voltage terminal strip. An open manual reset limit will require a manual reset of the control.

5.6. Backflow Preventer

Use a backflow preventer valve in the make-up water supply to the unit as required by local codes.

5.7. Dirt Separator

A dirt separator is included with the HeatMaster TC and must be installed on the system return to prevent dirt from entering the heat exchanger. If the application requires use of the second system return, an additional dirt separator must be installed.

NOTICE

The dirt separator must be installed and maintained for warranty coverage of the HeatMaster TC heat exchanger. A thorough cleaning of any existing system, using approved heating system cleaning agents is required prior to installation of the HeatMaster TC boiler. System should be treated with an approved inhibitor after filling for long term protection.

5.8. Boiler System Piping Applications

The HeatMaster TC heat exchanger has a single system supply and an upper and lower system return:

- The lower system return should be used in all piping applications.
- The upper system return should be used to optimize efficiency in multi-temperature systems.

The hotter system return should enter the upper return and the cooler system return should enter the lower return. The dual returns allow the bottom of the heat exchanger to remain as cool as possible, thus increasing efficiency.

If the application does not utilize the upper system return, the latter must be capped.

Primary/secondary piping is not necessary due to the unique heat exchanger design of the HeatMaster TC combined with the built-in circulator which maintains constant water flow through the heat exchanger during both central/space heating (CH) and domestic hot water (DHW) demands.

BEST PRACTICE

On piping applications utilizing a single zone or other recognized piping design arrangements, it is recommended that the installer uses flow/ check valves with weighted seats at or near the HeatMaster TC to prevent gravity circulation.

5.9. Expansion Tank and Makeup Water

Ensure the expansion tank is properly sized for the boiler volume, (33 gallons [125 L] for the HeatMaster TC), the system water volume, and the system water temperature.



Undersized expansion tanks will cause system water to be lost through the pressure relief valve and cause additional makeup water to be added to the system. Eventual boiler heat exchanger failure can result due to this excessive makeup water addition.

The expansion tank must be located as shown in *Fig. 11 on page 24 through Fig. 13 on page 26*. Refer to the expansion tank manufacturer for additional installation details.

Connect the expansion tank to an air separator only if the air separator is located on the suction side (inlet) of the system circulator. Always locate and install the system fill connection at the same location as the expansion tank connection to the system.

Always install an automatic air vent on top of the air separator to remove residual air from the system.

5.10. Circulators

The HeatMaster TC is supplied with a built-in circulator which maintains constant water flow through the heat exchanger during both central/space heating (CH) and domestic hot water (DHW) demands.

System circulator(s) must be properly sized to overcome the combined system and HeatMaster TC pressure drop. See *Graph 1 and Graph 2 on page 90* for pressure drop through the boiler.

5.11. Sizing Primary Piping

See *Fig. 11 on page 24 through Fig. 13 on page 26*, for recommended piping arrangements based on various applications. Size the piping and system components required in the space heating system using recognized design methods.

5.12. System Piping – Zone Circulators

Connect the HeatMaster TC to the system piping as shown in *Fig. 11 on page 24* when zoning with zone circulators.

The installer must provide a separate circulator for each zone of space heating. Zone circulators must be properly sized to overcome the combined system and Heat-Master TC pressure drop. See *Graph 1 and Graph 2 on page 90* for pressure drop through the boiler.

5.13. System Piping – Zone Valves

Connect the HeatMaster TC to the system piping as shown in *Fig. 12 on page 25* when zoning with zone valves. System circulator must be properly sized to overcome the combined system and HeatMaster TC pressure drop. See *Graph 1 and Graph 2 on page 90* for pressure drop through the boiler.

5.14. System Piping – Single Zone

Connect the HeatMaster TC to the system piping as shown in *Fig. 13 on page 26* when the system only consists of a single zone. System circulator must be properly sized to overcome the combined system and HeatMaster TC pressure drop. See *Graph 1 and Graph 2 on page 90* for pressure drop through the boiler.

5.15. System Piping - Radiant Heating

The heat exchanger design of the HeatMasterTC allows operation in a condensing mode. This feature requires no regulation of the return water temperature back to the boiler in radiant heating applications.



Do not install the HeatMaster TC in a system which is considered an open system or contains non-oxygen barrier tubing. Exposing the outer tank of the HeatMaster TC to oxygen contamination will lead to premature failure of the heat exchanger and denial of the warranty.

The boiler water supply temperature can be maintained by the HeatMaster TC, potentially eliminating the need for a mixing system to achieve the desired temperature if all zones of heat require the same temperature set point and the DHW setpoint is less than or equal to the CH setpoint.

If the DHW setpoint is greater than the CH setpoint, a mixing system may be necessary to maintain the CH setpoint within the radiant heating system. The ACV-Max control includes a mixing valve function which can operate a mixing valve.

Consult the ACVMax Control Supplement for additional information on this function.

It is recommended to install a high temperature limit to ensure that the primary supply temperature does not exceed the maximum allowable temperature for the radiant tubing.

NOTICE

The addition of the high temperature limit is important when the HeatMaster TC has completed a DHW call, which requires a high primary supply water temperature.

5.16. System Piping - Special Application


If the boiler is used in conjunction with a chilled water/ medium system, the boiler and chiller must be piped in parallel. Install flow/check valves to prevent the chilled medium from entering the boiler.

If the boiler is used to supply hot water to the heating coils of an air handler where they may be exposed to chilled air circulation, install flow/check valves or other automatic devices to prevent gravity circulation of the boiler water during cooling cycles.

PRESET PUMP CONFIGURATION 5				
Heat Call	Pump 4	Pump 3	DHW Pump	CH Pump
CH1	OFF	ON	OFF	ON
CH2	ON	OFF	OFF	ON
DHW	OFF	OFF	ON	ON

NOTICE

Consult the ACVMax Control Supplement for information on setting the required Preset Pump Configuration.

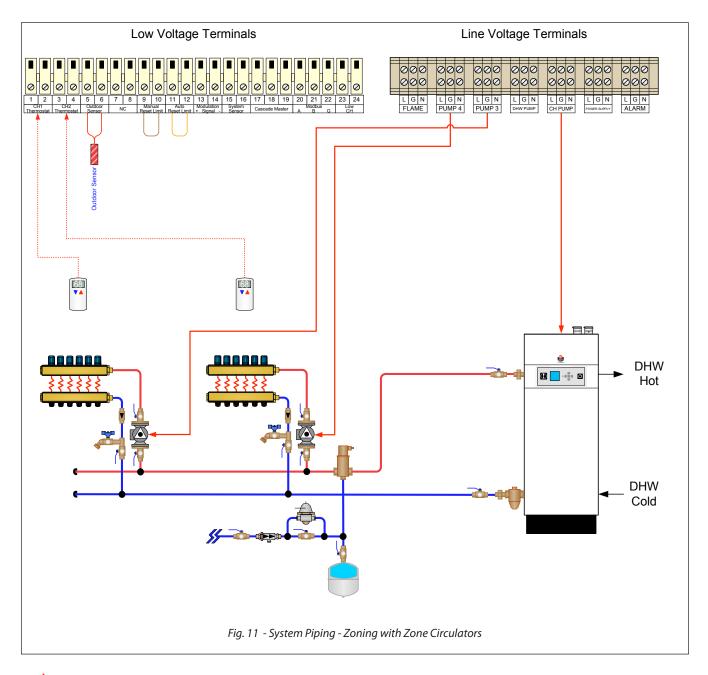


Heat Call	Pump 4	Pump 3	DHW Pump	CH Pump
CH1	OFF	ON	ON	ON
CH2	ON	ON	OFF	ON
DHW	OFF	OFF	OFF	ON

PRESET PUMP CONFIGURATION 16

NOTICE


Consult the ACVMax Control Supplement for information on setting the required Preset Pump Configuration.

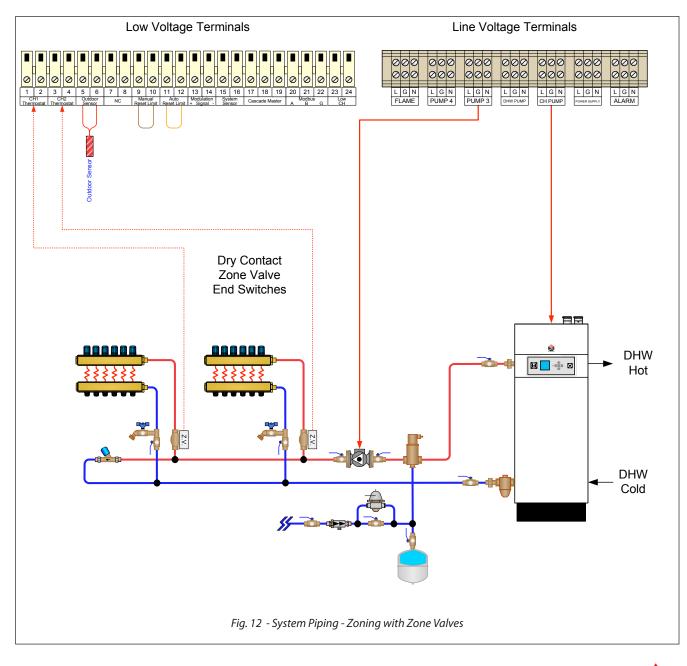

	PRESET PUMP CONFIGURATION 16							
Heat Call	Heat CallPump 4Pump 3DHW PumpCH Pump							
CH1	OFF	ON	ON	ON				
CH2	ON	ON	OFF	ON				
DHW	OFF	OFF	OFF	ON				

NOTICE

Consult the ACVMax Control Supplement for information on setting the required Preset Pump Configuration.

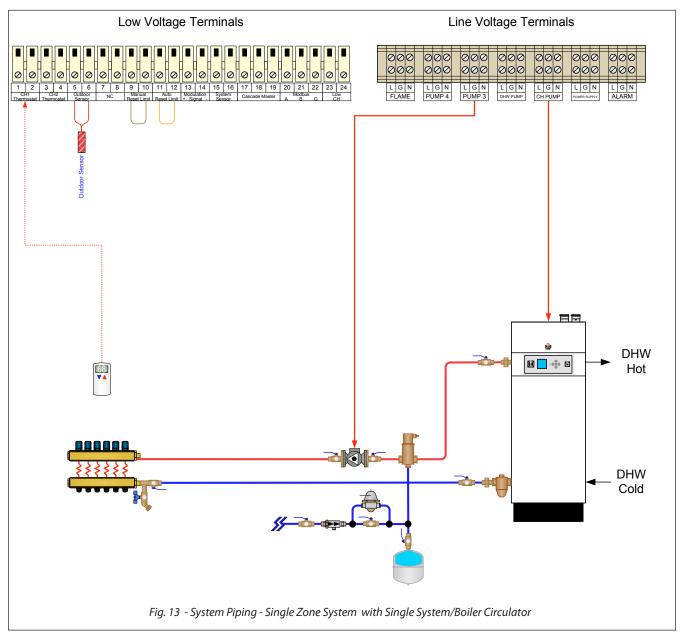

6.1. Installing Vent and Combustion Air



The HeatMaster TC must be vented and supplied with combustion air as shown in the Vent Supplement, included in the installation envelope. Refer to instructions for parts list and method of installation.

Once installation is completed, inspect the vent and combustion air system thoroughly to ensure systems are airtight, properly supported, and comply with the instructions given in the venting supplement and are within all requirements of applicable codes. Failure to comply with the venting and combustion air piping installation requirements will result in substantial property damage, serious injury, or death.

NOTICE

Contact Triangle Tube for other venting options including Stainless Steel or PVC Flush Mount Horizontal Terminations. Refer to the instructions included with these kits for method of installation.

6.2. Installing Condensate Drain Assembly

1. Locate the condensate drain assembly and ensure the metal washer is installed as shown in *Fig. 14 on page 28*.

NOTICE

The installer may want to fill the condensate drain assembly with water prior to assembling on the unit.



Do not operate the boiler without the factory-supplied condensate drain assembly installed. Operation of the boiler without the condensate drain assembly installed can result in property damage, serious injury, or death.

2. Install the condensate drain assembly on the boiler condensate drain by pushing the condensate drain assembly up until it stops.

3. Tighten the condensate drain assembly retaining nut.



- Ensure installation of the condensate drain assembly included the metal washer. Failure to comply could result in the assembly dislocating from the boiler. Dislocation of the condensate drain assembly can result in property damage, serious injury, or death.
- Ensure the condensate drain assembly contains the plastic ball. Do not install the condensate drain assembly if the ball is lost or missing, replace the entire assembly. Installing the condensate drain assembly without the plastic ball can result in substantial property damage, serious injury, or death.
- 4. Remove the compression nut and rubber seal from the condensate drain assembly drain outlet.
- 5. Slide the compression nut and rubber seal over the $3/4'' \times 2'$ flexible tube provided.

NOTICE

The use of 3/4" PVC or CPVC pipe is also acceptable. If 3/4" pipe is used, deburr and chamfer pipe to allow mating onto the drain assembly.

- 6. Thread the rubber seal into the compression nut to ease installation of the tube to the condensate drain assembly.
- 7. Seat the tube onto the condensate drain assembly and tighten the compression nut. **Hand tight only!**

NOTICE

- The installer may opt to use 13/16" ID tubing in lieu of provided tube.
- The drain line materials must be an approved material by the authority having jurisdiction. In absence of such authority, PVC and CPVC piping must comply with ASTM D1785 or D2845. The cement and primer used on the piping must comply with ASME D2564 or F493. For installations in Canada, use ULC certified PVC or CPVC pipe, fittings and cement/primer.

8. Route the tube from the condensate drain assembly to a floor drain or condensate pump.

NOTICE

When selecting and installing a condensate pump, ensure the pump is approved for use with condensing appliances. The pump should be equipped with an overflow switch to prevent property damage from potential condensate spillage.


9. The HeatMaster TC will typically produce a condensate that is considered slightly acidic with a pH content below 4.0. Install a neutralizing filter if required by authority having jurisdiction.

The condensate drain assembly must remain filled with water. Extended periods of non use or high temperature operation may allow the water to evaporate. Periodically check the water level in the condensate drain assembly and fill with water as necessary. Failure to keep the condensate drain assembly full of water can result in substantial proper-

ty damage, serious injury, or death.



The condensate drain assembly must remain unobstructed and allow unrestricted flow of condensate. The condensate should not be subject to conditions where freezing could occur. If the condensate is subjected to freezing or becomes obstructed, it can leak, resulting in potential water damage to the boiler and surrounding area.

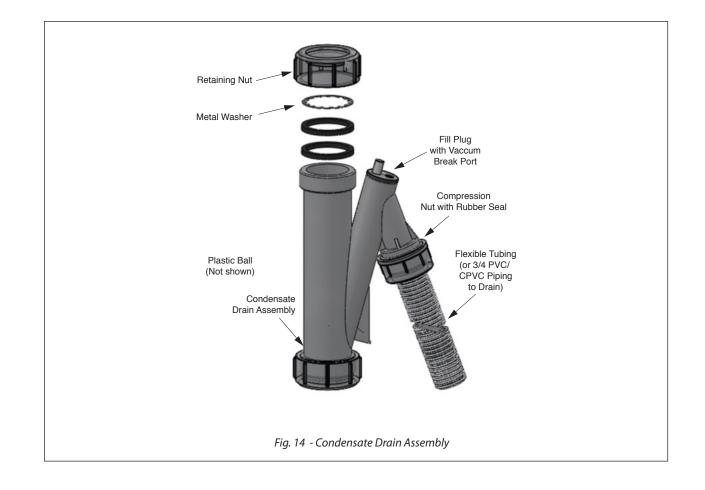

7.1. Gas Supply Piping Connection

NOTICE

The gas supply piping must be installed in accordance to all applicable local, state, national codes, and utility requirements.

- 1. Install a 3/4" NPT pipe union at the gas nipple, for ease of service.
- 2. Install a manual shutoff valve in the gas supply piping as shown in *Fig. 15 below*. For installations in Canada, the installer must tag and identify the main shutoff valve.
- 3. Install a sediment trap (drip leg) on the gas supply line prior to connecting to the HeatMaster TC gas train as shown in *Fig. 15 below*.
- 4. Support the gas piping using hangers. Do not support the piping by the unit or its components.
- 5. Purge all air from the gas supply piping.
- 6. Before placing the HeatMaster TC into operation, check and test all connections for leaks.
 - Close the manual shutoff valve during any pressure test with less than 13"w.c..
 - Disconnect the HeatMaster TC and its gas valve from the gas supply piping during any pressure test greater than 13"w.c..



Do not check for gas leaks with an open flame. Use a gas detection device or bubble test. Failure to check for gas leaks can cause substantial property damage, serious injury, or death.


7. Use pipe dope compatible with natural and propane gases. Apply sparingly only to the male threads of pipe joints so that pipe dope does not block gas flow.



• Failure to apply pipe dope as detailed above can result in substantial property damage, serious injury, or death.



 Use a two-wrench method when tightening field piping onto the boiler piping connections. Use one wrench to prevent the boiler connections from turning and the second to tighten field piping. Failure to support the boiler piping connections could damage piping, causing a leak, resulting in substantial property damage, serious injury, or death.

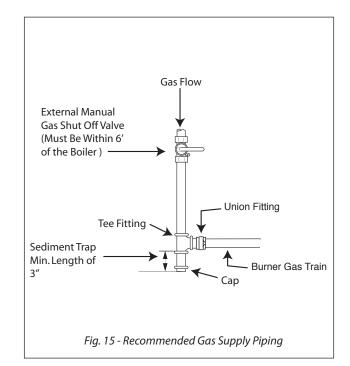

7.2. Natural Gas

7.2.1 Pipe Sizing

Refer to *Table 1 below* for schedule 40 metallic pipe length and diameter requirements for natural gas, based on rated HeatMaster TC input (divide by 1,000 to obtain cubic feet per hour).

- *Table 1 below* is based on Natural Gas with a specific gravity of 0.60 and a pressure drop through the gas piping of 0.30"w.c..
- For additional gas pipe sizing information, refer to National Fuel Gas Code (NFPA 54 / ANSI Z223.1) for installations in the U.S. or CAN/CSA B149.1 for installations in Canada.

7.2.2 Supply Pressure Requirements

- 1. Pressure required at the gas valve inlet supply pressure port:
 - Maximum 13"w.c. at flow or no flow conditions to the burner.
 - Minimum 5"w.c. during flow conditions to the burner. Must be verified during start up and with all other gas appliances operating within the building.
- 2. Install 100% lockup gas pressure regulator in the gas supply line if inlet pressure can exceed 13"w.c at any time. Adjust the lockup pressure regulator for 13"w.c maximum.

DO NOT adjust or attempt to measure gas valve outlet pressure. The gas valve is factory-set for the correct outlet pressure. This setting is suitable for natural gas and propane and requires no field adjustment. Attempts by the installer to adjust or measure the gas valve outlet pressure can result in damage to the valve, causing substantial property damage, serious injury, or death.

NOTICE

The natural gas orifice requirements are:

- HeatMaster 240 TC: N/A
- HeatMaster 399 TC: 0.421" (10.70 mm)



The HeatMaster TC is factory equipped with the required natural gas orifice. The natural gas orifice must never be modified or replaced with a different size orifice. Failure to use the required natural gas orifice can result in substantial property damage, serious injury, or death.

Length of Pipe in Feet	Capacity of Sch			et of Natural Gas c. pressure drop)	Per Hour (based
SCH 40	1/2"	3/4"	1"	1-1/4"	1-1/2"
10	132	278	520	1050	1600
20	92	190	350	730	1100
30	73	152	285	590	890
40	63	130	245	500	760
50	56	115	215	440	670
75	45	93	175	360	545
100	38	79	150	305	460
150	31	64	120	250	380

Table 1 - Gas Piping Sizing - Natural Gas

CHAPTER 7

7.3. Propane Gas

7.3.1 Pipe Sizing

•



- The unit was shipped with a propane conversion kit which is located in the accessory packet under the unit. This kit includes all the necessary parts and instruction to perform the conversion from natural to propane gas. If this conversion kit is missing, please contact Triangle Tube Technical Support for missing kit before installing unit.
- Prior to start up, ensure the unit is set to fire propane. Check the rating label for the type of fuel. Check the gas valve for propane conversion label. If there is a conflict or doubt on the burner set up, remove the gas valve and check for the propane orifice, see Fig. 16 or Fig. 17 on page 32.
- Failure to ensure proper burner setup can result in substantial property damage, serious injury, or death.

Contact the local propane gas supplier for recommended sizing of piping, tanks and 100% lockup gas regulator.

7.3.2 Supply Pressure Requirements

- 1. Adjust the propane supply regulator provided by the gas supplier for 13"w.c. maximum pressure
- 2. Pressure required at the gas valve inlet supply pressure port:
 - Maximum 13"w.c. at flow or no flow conditions to the burner
 - Minimum 5"w.c. during flow conditions to the burner. Must be verified during start up and with all other gas appliances operating within the building.

DO NOT adjust or attempt to measure gas valve outlet pressure. The gas valve is factory-set for the correct outlet pressure. This setting is suitable for natural gas and propane and requires no field adjustment. Attempts by the installer to adjust or measure the gas valve outlet pressure can result in damage to the valve, causing substantial property damage, serious injury, or death.


NOTICE


The propane orifice requirements are:

- HeatMaster 240 TC : 0.236" (6.00 mm)
- HeatMaster 399 TC: 0.307" (7.80 mm)



The propane gas orifice must never be modified or replaced with a different size orifice. Failure to use the required propane gas orifice can result in substantial property damage, serious injury, or death.

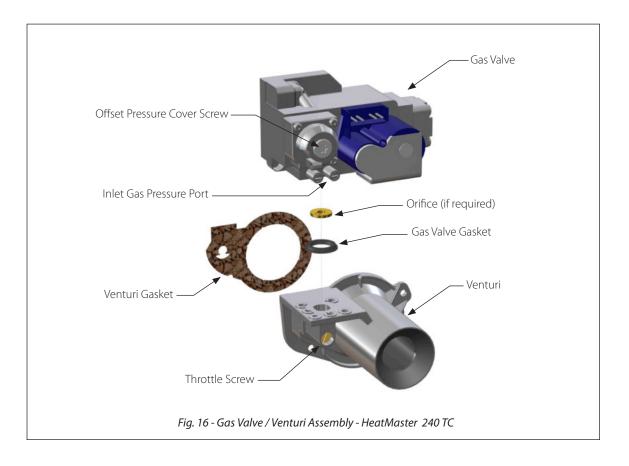

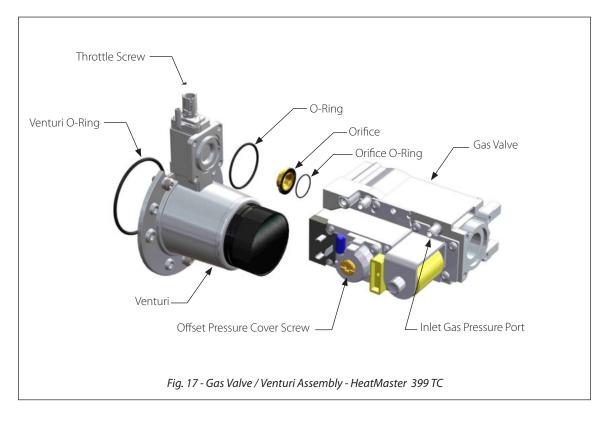

CHAPTER 7



ELECTRICAL SHOCK HAZARD. For your safety, disconnect electrical power supply to the unit before servicing or making any electrical connections to avoid possible electric shock hazard. Failure to do so can cause serious injury, or death.




Prior to servicing, label all wires before disconnecting. Wiring errors can cause improper and dangerous operation. Verify proper wiring and operation after servicing.

8.1. General Requirements


- Wiring must be N.E.C Class 1.
- If original wiring as supplied with the unit must be replaced, use only Type T 194°F [90°C] wire or equivalent as a minimum.
- The HeatMaster TC must be electrically grounded as required by National Electrical Code (ANSI/NFPA 70) for installations in the U.S., or the Canadian Electrical Code Part 1 (CSA C22.1) for installations in Canada.

8.2. Fuse Locations

- The ACVMax control module contains 3 internal replaceable 5A fuses as shown in *Figure 18 below*.
- The top two fuses protect the HeatMaster TC as well as the CH, DHW, and Flame outputs.
- The bottom fuse protects the P3, P4, and Alarm outputs.
- Spare fuses are located on the back of the control module enclosure.

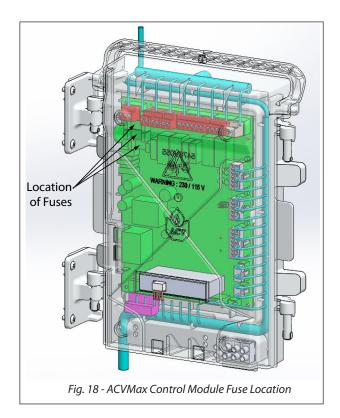

CHAPTER 8 - INTERNAL WIRING

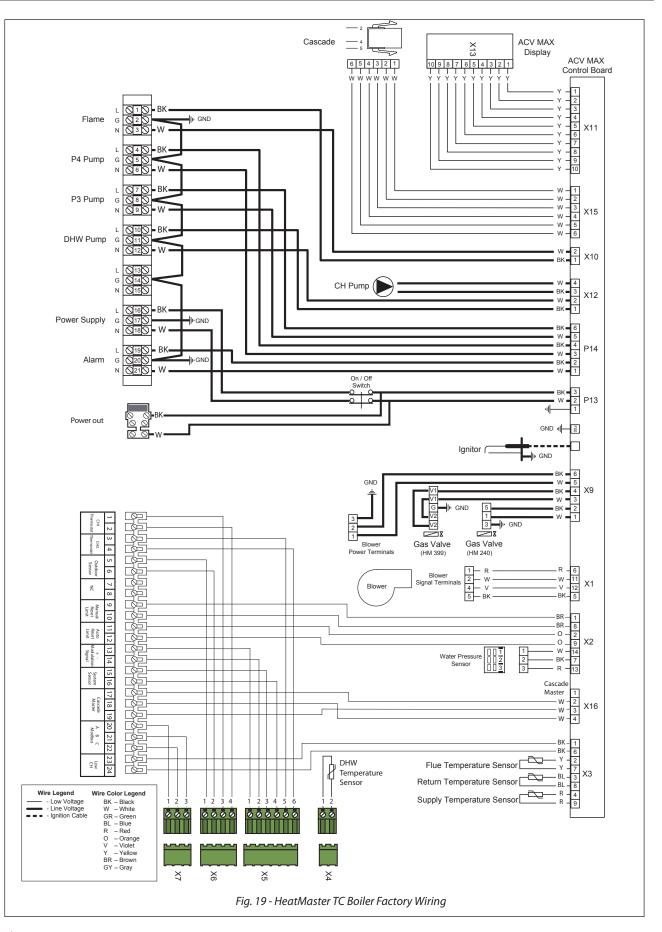

9.1. General Requirements

All field wiring must comply with:

- National Electrical Code (ANSI/NFPA 70) for installations in the U.S., and any other national, state, provincial or local codes or requirements.
- Canadian Electrical Code Part 1 (CSA C22.1) for installations in Canada.



ELECTRICAL SHOCK HAZARD. For your safety, disconnect electrical power supply to the unit before servicing or making any electrical connections to avoid possible electric shock hazard. Failure to do so can cause serious injury, or death.

NOTICE

The low voltage terminals are located at the left set of terminals 1 through 24. The line voltage terminals are located at the right set of terminals as shown in **Fig. 20 below**.

9.2. Line Voltage Connections

- 1. Connect a dedicated 120 VAC/15A service to the line voltage terminals located internally on the right side of the center frame, as shown in *Fig. 20 below*.
- 2. Route the incoming 120 VAC power wires through one of the provided openings in the bottom jacket panel.
- 3. The unit is provided with a service switch located on the front panel, check local code requirements for compliance.

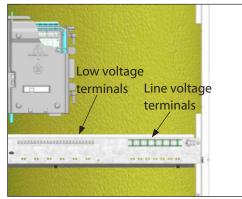


Fig. 20 - Terminal Strip Location

NOTICE

If local electrical codes require an additional service switch, the installer must provide and install a fused disconnect or minimum 15 amp service switch.

9.3. Internal Circulator

The HeatMaster TC is supplied with an internal circulator which maintains constant water flow through the heat exchanger during both central/space heating (CH) and domestic hot water (DHW) demands.

The internal circulator is prewired to the line voltage terminal strip as shown in *Fig. 19 on page 34*. The built-in circulator is enabled for any CH1, CH2, or DHW call.

9.4. Circulator Wiring

1. The circulator connections used will depend on the systems piping layout. See *Fig. 11 on page 24 through Fig. 13 on page 26* for common system piping applications and associated circulator wiring. Consult the ACVMax Control Supplement for additional options.

NOTICE

The circulator, flame, and alarm outputs are protected by fuses on the ACVMax control module. The total combined amp draw of the CH, DHW, and Flame outputs must not exceed 4 amps at any time. The total combined amp draw of the P3, P4, and Alarm outputs must not exceed 5 amps at any time. Use an isolation relay to lower the total combined amp draw if exceeding these limits.

- 2. The internal circulator is prewired to the CH circulator output. An additional circulator cannot be wired to these line voltage terminals located internally on the right side, as shown in *Fig. 20 on the left.*
- 3. Connect the DHW circulator wiring to the line voltage terminals located internally on the right side, as shown in *Fig. 20 on the left*. This circulator is typically used as a dedicated circulator to the first space heating zone.
- Connect the P3 circulator wiring to the line voltage terminals located internally on the right side, as shown in *Fig. 20 on the left*. This circulator is typically used as the system loop circulator in a zone valve system.
- 5. Connect the P4 circulator wiring to the line voltage terminals located internally on the right side, as shown in *Fig. 20 on the left*. This circulator is typically used as a dedicated circulator to a second space heating zone.

9.5. Flame Status & Alarm Wiring

NOTICE

The Flame and Alarm outputs both supply 110VAC when activated. Use an isolation relay to provide dry contacts if required by the external monitoring system.

The Flame output is typically used to provide on/off status to an external monitoring system. The Flame output will provide 0VAC when the HeatMaster TC is not fired and 110VAC when the HeatMaster TC is fired.

The Alarm output is typically used to provide lockout status to an external monitoring system. The Alarm output will provide 0VAC when the HeatMaster TC is not in a lockout and 110VAC when the HeatMaster TC is in a lockout. The types of lockouts which will cause the Alarm output to activate are adjustable in the Installer Menu. Consult the ACVMax Control Supplement for information on this setting.

1. Connect the external monitoring device to the line voltage terminals located internally on the right side, as shown in *Fig. 20 on page 35*.

NOTICE

The circulator, flame, and alarm outputs are protected by fuses on the ACVMax control module. The total combined amp draw of the CH, DHW, and Flame outputs must not exceed 4 amps at any time. The total combined amp draw of the P3, P4, and Alarm outputs must not exceed 5 amps at any time. Use an isolation relay to lower the total combined amp draw if exceeding these limits.

9.6. Low Voltage Connections

Line and Low Voltage wiring should be separated to prevent possible electrical noise on the low voltage circuits. Line and Low Voltage wiring should use separate electrical knockouts on the HeatMaster TC cabinet and should remain separated inside the HeatMaster TC.

NOTICE

CH call connections to the HeatMaster TC require a dry contact with no external voltage present. Ensure no external voltage is present on each set of wires before connecting to the HeatMaster TC. If external voltage is present, the use of an isolation relay is required to prevent damage to the ACVMax controller.

9.7. Thermostat Wiring

The ACVMax control has two thermostat call inputs for multiple zone / temperature systems. This allows each call to have its own outdoor reset curve and maximizes the efficiency of the system.

NOTICE

Simultaneous CH1 and CH2 calls will result in the HeatMaster TC operating at the highest target temperature. The use of a mixing device on the lower temperature zone(s) may be required to protect the lower temperature zone(s) from damage. The ACVMax control includes a mixing valve function which can operate a mixing valve in a dual temperature system. Consult the ACVMax Control Supplement for additional information on this function.

- 1. Connect the room thermostat or dry contact zone valve end switch wires to low voltage terminals 1&2 or 3&4 located on the left side as shown in *Fig. 20 on page 35.*
- 2. Follow thermostat manufacturer's instructions for proper installation. Thermostat should be located on an inside wall away from any heat or cold influences such as drafts, lights, fireplaces, etc.
- 3. Set the thermostat anticipator (If applicable) as follows:
 - Set for 0.2 amps when wired directly to the HeatMaster TC.
 - Set to match the electrical power requirements of the connected device when wired to zone relays or other devices. Refer to the relay manufacturer's specifications and the thermostat instructions for additional information on anticipator setting.

NOTICE

The use of power stealing thermostats which draw their power from the HeatMaster TC can lead to erratic or unpredictable operation.

9.8. Outdoor Sensor Wiring

The Outdoor Reset function and Warm Weather Shutdown (WWSD) features require the connection of the included outdoor temperature sensor. See *Chapter 13 on page 65* for outdoor sensor installation and setup.

9.9. Domestic Hot Water Wiring

An indirect water heater sensor is prewired to low voltage terminals X4 1&2 located at the bottom of the ACV-Max control module.

9.10. Additional Boiler Limits

Additional boiler limits (High Temperature Limit, LWCO, etc.) can be wired into either the Manual Reset Limit or Auto Reset Limit terminals of the HeatMaster TC. These limit connections will provide a "hard" lockout requiring a manual reset of the HeatMaster TC or a "soft" lockout in which the HeatMaster TC will automatically reset when the limit resets.

A Manual Reset External Limit Open (E87) lockout will occur anytime the manual reset terminals are open. An Auto Reset External Limit Open (76) lockout will not occur until just before ignition when the auto reset terminals are open. The Auto Reset terminals should be used for any type of burner interlock such as a combustion air louver or water flow proving switch.

NOTICE

Manual Reset Limit and Auto Reset Limit connections to the HeatMaster TC require a dry contact with no external voltage present. Ensure no external voltage is present on each set of wires before connecting to the HeatMaster TC. If external voltage is present, the use of an isolation relay is required to prevent damage to the ACVMax controller.

- 1. Remove the factory-installed brown jumper wire at the Manual Reset Limit terminals that will accept the additional boiler limit.
- 2. Remove the factory-installed orange jumper wire at the Auto Reset Limit terminals that will accept the additional boiler limit.
- Connect the external limit wires to the Manual Reset Limit or Auto Reset Limit low voltage terminals 9&10 or 11&12 located on the left side as shown in *Fig. 20 on page 35.*

9.11. External Modulation Control

The HeatMaster TC firing rate can be controlled by an external modulating boiler controller. See *Chapter 14 on page 67* for external modulation signal wiring and setup.

9.12. System Sensor Wiring

An optional system temperature sensor can be placed on the central heating loop to control the temperature in the central heating loop instead of the boiler loop. When connected, the HeatMaster TC will automatically modulate to maintain the target temperature in the central heating loop. The boiler supply temperature sensor will continue to be used as a high temperature limit.



Locate the system temperature sensor where it can accurately measure the supply temperature to the heating system. Inaccurate system temperature readings could lead to overheating or under heating resulting in property damage.

1. Connect the system temperature sensor wires to low voltage terminals 15&16 located on the left side as shown in *Fig. 20 on page 35.*

9.13. Cascade Wiring

The ACVMax control includes the ability to operate up to six HeatMaster boilers together as one (Central/ space heating ONLY) without the need for external controllers. Consult the ACVMax Control Supplement for more information.

9.14. Modbus Wiring

The ACVMax control includes the ability to communicate with building management systems (BMS) through a Modbus interface. Consult the ACVMax Control Supplement for more information. Modbus communication will only occur if the external device is properly wired to the HeatMasterTC as follows:


Terminal 20 = RS-485 – Terminal 21 = RS-485 + Terminal 22 = RS-485 Ground

NOTICE

Triangle Tube has building management system (BMS) gateways available to convert Modbus to most BMS protocols including BACnet® MS/TP, BACnet® /IP, Metasys® N2, and LonWorks®. Contact Triangle Tube for more information.


PRESET PUMP CONFIGURATION 16

Heat Call	Pump 4	Pump 3	DHW Pump	CH Pump
CH1	OFF	ON	ON	ON
CH2	ON	ON	OFF	ON
DHW	OFF	OFF	OFF	ON

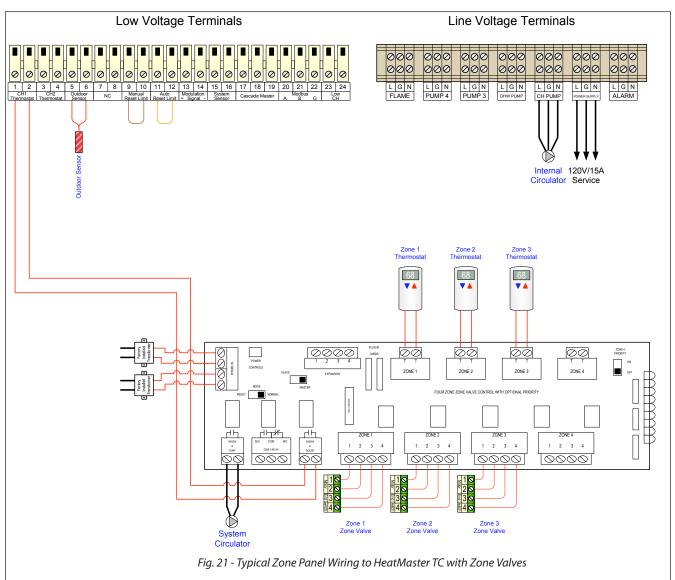

PRESET PUMP CONFIGURATION 5

Heat Call	Pump 4	Pump 3	DHW Pump	CH Pump
CH1	OFF	ON	OFF	ON
CH2	ON	OFF	OFF	ON
DHW	OFF	OFF	ON	ON

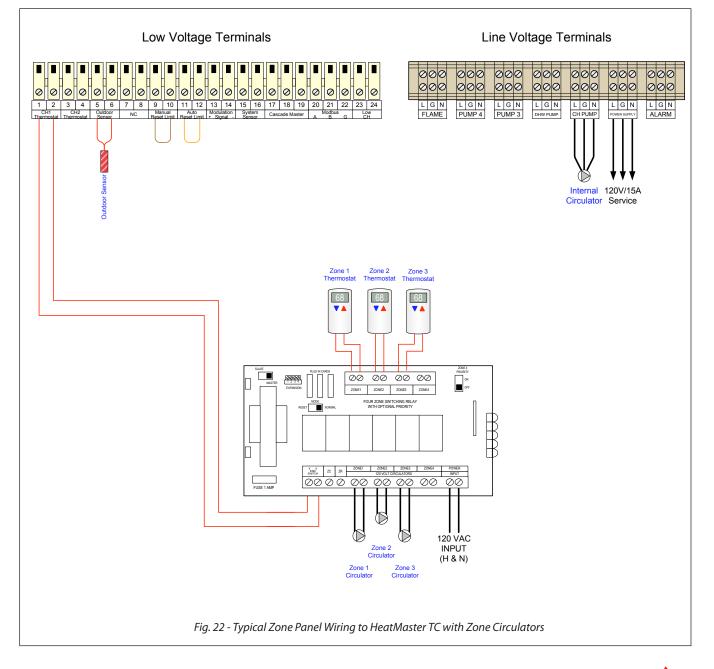

INTENTIONALLY LEFT BLANK

The ACVMax Boiler Management System is designed to be flexible yet easy to use. ACVMax monitors and controls the HeatMaster TC to provide heat as efficiently as possible. ACVMax includes many advanced features:

- Two central/space heating (CH) call inputs with separate outdoor reset curves.
- Domestic Hot Water (DHW) call input with optional priority.
- EZ Setup feature allows the installer to quickly customize ACVMax for each installation.
- Mixing valve control to simultaneously heat dual temperature heating systems.
- Cascade function allows up to six HeatMasterTC boilers to operate together in a single heating system (Central/space heating ONLY).
- Modbus interface for integrating with building management systems.

All ACVMax features are easy to use through a graphical display where information is presented either graphically or in plain English, so code charts are not required. *Fig. 23 below* shows an ACVMax display example of the HeatMaster TC fired for a domestic hot water demand.

10.1. ACVMax Navigation


Navigation is performed through four arrow buttons **UP, DOWN, LEFT, RIGHT** with a center **OK** button for making selections and entering information.

The **INSTALLER** button (the small round button) provides the installing contractor with full access to all available features after entering a password. Reference the ACVMax Control Supplement for Installer level functions

The Main Menu can be entered from the Home Screen by pressing the **OK** button.


The menu system utilizes icons to represent each selection. The current selected menu is displayed as a reversed image with a text description shown at the top of the display. Menus can be entered by highlighting the desired icon and pressing the **OK** button.

The Home Screen icon \clubsuit at the bottom of each screen returns to the Home Screen when selected. The Previous Screen icon \clubsuit at the bottom of each screen returns to the previous screen when selected.

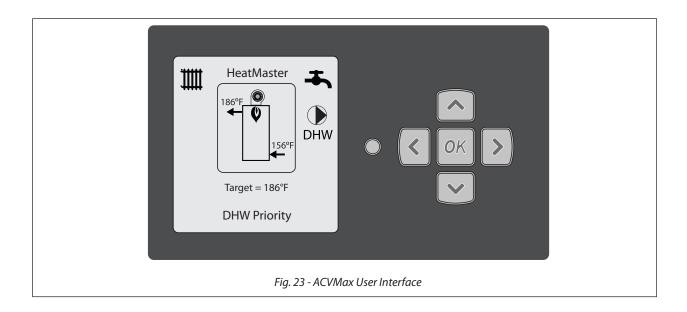

10.2. ACVMax Menu Structure

Home Screen

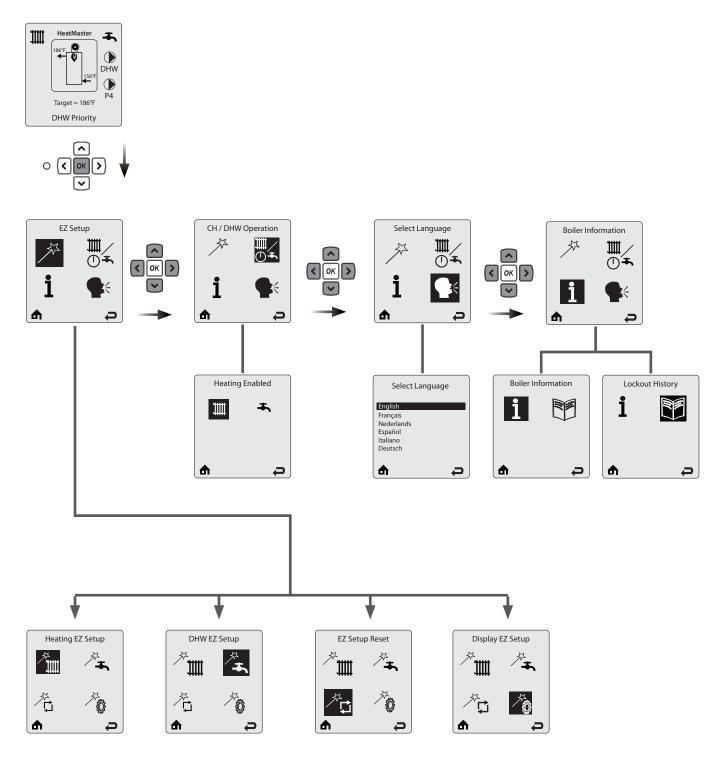


10.3. Home Screen

The Home Screen presents status information in a very user friendly way so that the current state of the boiler can be quickly accessed.

- Screen backlight it will illuminate when any button is depressed, and remain illuminated for five minutes.
- Screen contrast it can be adjusted at the Home screen by pressing and holding the OK button, then pressing and holding the LEFT button along with the OK button. Press the UP and DOWN button to increase or decrease the contrast while holding the OK and LEFT buttons depressed. All buttons must be released and the procedure performed again to switch between increasing and decreasing contrast.

Main Icons of ACVMAX display

- Central Heating indicates information related to central/space heating.
- **A** DHW indicates information related to Domestic Hot Water.
- **Home** to go back to the home screen.
- Back to go back to the previous screen.
- Warm Weather Shutdown displays on the home screen when the outdoor temperature reaches the Warm Weather Shutdown temperature.
- **C** Reset to reset the system to the factory settings.
- Settings to access controller settings (language, units, etc.).
- Fasy Setup to quickly adjust the most common settings.
- CH/DHW operation to enable/disable the central/space heating or Domestic Hot Water functions
 - **I** Information to get information on the boiler.

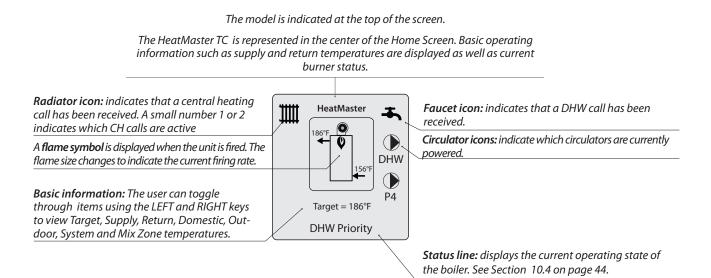

10.4. Status Line Messages

Standby - Indicates that the HeatMaster TC is ready to respond when a demand is received.

CH Demand - A central heating call has been received.

DHW Demand - A domestic hot water call has been received.

CH/DHW Demand - Central heating and domestic hot water calls are being received simultaneously. Both calls are being satisfied simultaneously because domestic hot water priority has been disabled.

DHW Priority - Central heating and domestic hot water calls are being received simultaneously. Domestic hot water call is being satisfied first because it has priority over central heating calls.

Priority Timeout - Central heating and domestic hot water calls are being received simultaneously. The domestic hot water priority time limit has been exceeded. Priority will now switch back and forth between central heating and domestic hot water calls until one call is satisfied.

External Demand - An external modulation call has been received.

Slave Operation - The HeatMaster TC is a slave in a cascade system.

Manual Operation - The burner or circulators have manually been enabled in the Installer Menu.

CH Burner Delay - The burner will not fire until the call blocking time has elapsed.

DHW Burner Delay - The burner will not fire until the call blocking time has elapsed.

CH Setpoint Reached - The burner is not fired because the supply/system water temperature exceeds the setpoint. The central heating circulator(s) continue(s) to operate and the burner will fire again once the supply/ system water temperature drops below the setpoint. **DHW Setpoint Reached** - The burner is not fired because the supply/system water temperature exceeds the setpoint. The domestic circulator(s) continue(s) to operate and the burner will fire again once the supply/system water temperature drops below the setpoint.

CH Post Pump - The central heating circulator(s) is/are running to remove heat from the HeatMaster TC at the completion of a call.

DHW Post Pump - The domestic hot water circulator(s) is/are running to remove heat from the HeatMaster TC at the completion of a call.

Freeze Protection - The burner is fired because the freeze protection feature has been activated. Freeze protection will end once the supply/system water temperature is raised to 60°F [16°C].

Boiler Protection - The burner firing rate is being reduced because of an excessive difference between the boiler supply and return temperatures. The firing rate will begin increasing once the temperature difference is less than 45°F [25°C].

Low Water Pressure - The system pressure has dropped to 10.1 psi. The HeatMaster TC will still respond to calls until the pressure drops below 7.2 psi. Increase system pressure to 14.5 psi to clear Low Water Pressure warning

Lockout Description - The lockout which currently has the HeatMaster TC shut down is displayed

10.5. Main Menu

The Main Menu can be entered from the Home Screen by pressing the **OK** button.


The menu system utilizes icons to represent each selection.

The currently selected menu is displayed as an inversed image with a text description shown at the top of the display.

Menus can be entered by highlighting the desired icon and pressing the **OK** button.

10.6. EZ Setup

The EZ Setup menus provide a simple way to quickly customize ACVMax for each installation. EZ Setup prompts the user to make selections which allows the HeatMaster TC to be setup very quickly without searching through long lists of settings and manually making adjustments.

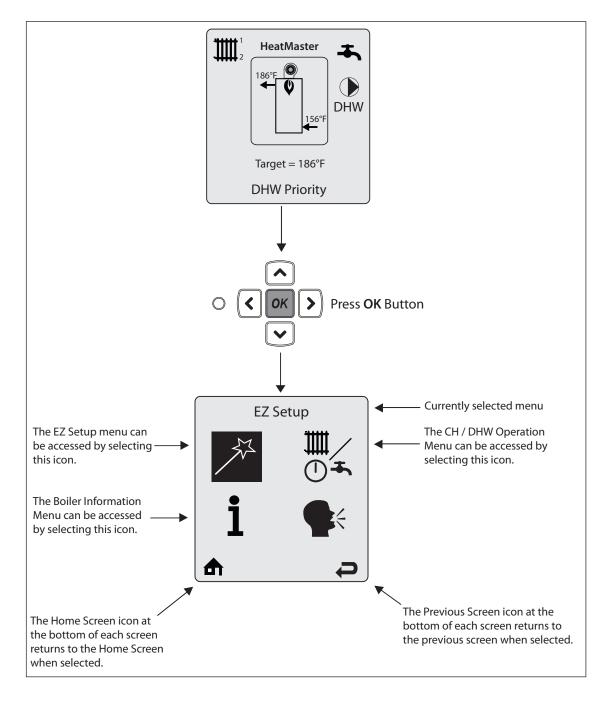


10.7. Heating EZ Setup




Heating EZ Setup allows the installer to quickly customize the central heating settings for the application.

10.7.1 Select CH Demand (No outdoor sensor connected)

Press OK to return to EZ Setup Menu

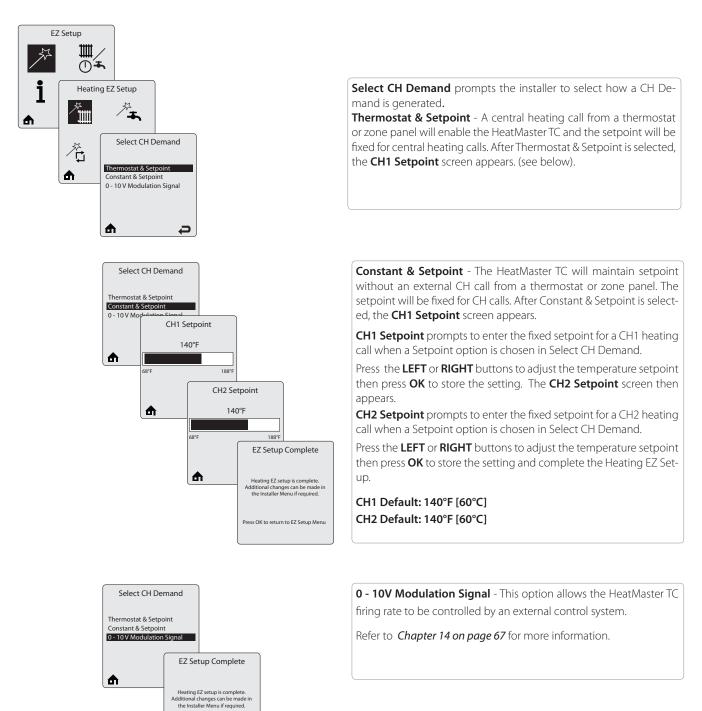

10.7.2 Select CH Demand (Outdoor sensor connected)

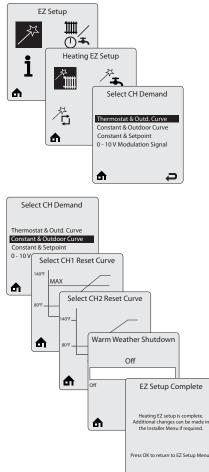

Select CH Demand

♠

Thermostat & Outd. Curve Constant & Outdoor Curve Constant & Setpoint 0 - 10 V Modulation Signal

D

Thermostat & Outd. Curve Constant & Outdoor Curve Constant & Setpoint 0 - 10 V Modulation Signal

Select CH Demand

Select CH Demand prompts the installer to select how a CH Demand is generated.

Thermostat & Outd. Curve – A central heating call from a thermostat or zone panel will enable the HeatMaster TC and the setpoint will vary with the outdoor temperature for central heating calls. After Thermostat & Outd. Curve is selected, the **Select CH1 Reset Curve** screen appears (see below).

Constant & Outdoor Curve - The HeatMaster TC will maintain setpoint without an external CH call from a thermostat or zone panel. The setpoint will vary with the outdoor temperature for central heating calls. After Constant & Outdoor Curve is selected, the **Select CH1 Reset Curve** screen appears

Select CH1 Reset Curve prompts to select an outdoor reset curve for a CH1 heating call when an Outdoor Curve option is chosen in Select CH Demand. Outdoor reset curve presets are available to cover most applications. The outdoor reset curve can also be adjusted to any desired settings in the Installer Menu.

Press the **UP** or **DOWN** buttons to select the outdoor reset curve appropriate for the type of heating system, then press **OK** to store the setting. The **Select CH2 Reset Curve** screen then appears. **Default: Radiators 2**

Select CH2 Reset Curve prompts to select an outdoor reset curve for a CH2 heating call when an Outdoor Curve option is chosen in Select CH Demand. Outdoor reset curve presets are available to cover most applications. The outdoor reset curve can also be adjusted to any desired settings in the Installer Menu.

Press the UP or DOWN buttons to select the outdoor reset curve appropriate for the type of heating system, then press OK to store the setting. The Warm Weather Shutdown screen then appears. Default: Radiators 2

Table 2 - Outdoor Reset Preset Selections					
Preset	Minimum Setpoint	Maximum Setpoint			
Floor Heat Low Temp.	96°F [35°C]	76°F [24°C]			
Floor Heat High Temp.	104°F [40°C]	76°F [24°C]			
Radiators 1	120°F [49°C]	80°F [27°C]			
Radiators 2	140°F [60°C]	80°F [27°C]			
Radiators 3	158°F [70°C]	80°F [27°C]			
Radiators 4	176°F [80°C]	80°F [27°C]			
Radiators 5	188°F [87°C]	80°F [27°C]			
Cast iron baseboard	170°F [77°C]	100°F [38°C]			
Finned tube baseboard	180°F [82°C]	120°F [49°C]			
Radiators 6	170°F [77°C]	120°F [49°C]			
Fancoil	180°F [82°C]	140°F [60°C]			

Warm Weather Shutdown prompts to enter an optional outdoor temperature at which to disable the central heating function and any circulator placed into constant circulation with the Pump Permanent Circulation setting. The HeatMaster TC will continue to respond to a domestic hot water call or a 0- 10V Modulation Signal when the outdoor temperature exceeds the Warm Weather Shutdown Temperature setting.

Press the **LEFT** or **RIGHT** buttons to adjust the Warm Weather Shutdown Temperature then press the **OK** button to store the setting, and complete Heating EZ Setup.


The Warm Weather Shutdown icon (is displayed on the home screen when the outdoor temperature reaches the Warm Weather Shutdown temperature. **Default: OFF**.

Constant & Setpoint - See section 10.7.1 on page 46.

0 - 10V Modulation Signal - See section 10.7.1 on page 46.

10.8. Domestic Hot Water EZ Setup

Domestic Hot Water EZ Setup allows the installer to quickly customize the Domestic Hot Water settings for the application

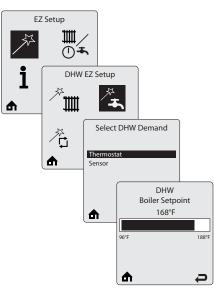

Select DHW Demand prompts the installer to select how a DHW Demand is generated.


When **Thermostat** is selected in Select DHW Demand, a domestic hot water call from an aquastat or dry contact switch will enable the HeatMaster TC with a fixed setpoint for a domestic hot water call. After Thermostat is selected, the **DHW Boiler Setpoint** screen appears.

Default: Sensor

DHW Boiler Setpoint prompts to enter the fixed boiler setpoint temperature during a domestic hot water call.

Press the **LEFT** or **RIGHT** buttons to adjust the temperature setpoint then press **OK** to store the setting. The **DHW Priority Timeout** screen then appears (see below).

Default: 168°F [76°C].

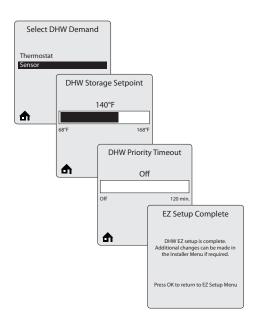

The HeatMasterTC utilizes an Indirect Water Heater sensor. When **Sensor** is selected in Select DHW Demand, use of an Indirect Water Heater Sensor is required. The HeatMasterTC monitors the DHW storage temperature and generates a DHW call whenever the temperature drops below the DHW storage setpoint by 6°F [3°C].

DHW Storage Setpoint prompts to enter the DHW Storage Setpoint temperature.

Press the **LEFT** or **RIGHT** buttons to adjust the temperature setpoint then press **OK** to store the setting. The **DHW Priority Timeout** screen then appears.

Default: 140°F [60°C].

NOTICE


The DHW Boiler Setpoint will automatically be set 28°F [15°C] higher than the DHW Storage Setpoint setting

DHW Priority Timeout prompts to enter an optional time limit that a domestic hot water call has priority over central heating call.

Press the **LEFT** or **RIGHT** buttons to adjust the timeout value, if required, then press **OK** to store the setting and complete the DHW EZ Setup.

Default: Off


10.9. EZ Setup Reset 찬

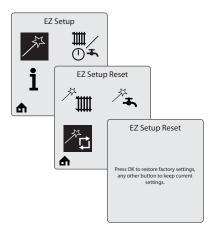

EZ Setup Reset allows reset of all EZ Setup settings back to the original factory defaults. See *Chapter 14 on page 67* for the list of settings reset by this function.

Follow the on-screen instructions to reset all EZ Setup settings.



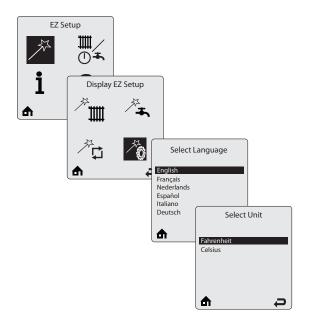


Display EZ Setup allows language (Nine different languages: English, French, Dutch, Spanish, Italian, German, Czech, Polish and Russian) and temperature units selection.

Press the **UP** or **DOWN** buttons to select the required language then press **OK** to store the setting. The **Select Unit** screen then appears.

Press the **UP** or **DOWN** buttons to select the required temperature units then press **OK** to store the setting.

CHAPTER 10 - ACVMAX OPERATION

10.11. CH/DHW Operation

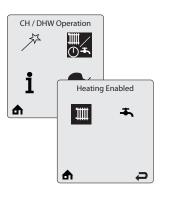


CH/DHW Operation provides a simple way to enable/disable either the CH or the DHW function of the HeatMaster TC.

Press the **LEFT** or **RIGHT** buttons to select the CH or DHW icon, then press **OK** to toggle between the enabled/disabled status. The status is displayed at the top of the screen.

Using the arrow keys, select the **HOME** or **RETURN** icon at the bottom of the screen to go back either to the home page or to the previous screen.



10.12. Boiler Information

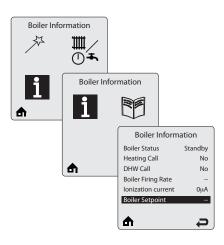

Boiler Information provides real time operating information of the HeatMasterTC. Each line contains an information item followed by its current value. Six lines are displayed on the screen at one time.

Some information items include a logging function which records one sample every 12 minutes to produce a graph of the last 24 hours. Select the information item in Boiler Information then press the **OK** button to view its graph. The following items have a logging function:


- Boiler Firing Rate
- Ionization Current
- Boiler Setpoint
- Boiler Supply Temperature
- Boiler Return Temperature
- Boiler Flue Temperature
- Outdoor Temperature
- DHW Storage Temperature
- External Modulation Signal
- Pressure

Press the **UP** or **DOWN** buttons to scroll through the items.

10.12.1 Information Items

Information Item	Description
Boiler Status	Displays the current operating state of the HeatMaster TC. This is the same as the status line on the home screen.
Heating Call	Displays if a central heating call is present.
DHW Call	Displays if a domestic hot water call is present.
Boiler Firing Rate	Displays the current firing rate of the HeatMaster TC.
Ionization Current	Displays the current flame ionization current from the ignitor.
Boiler Setpoint	Displays the current setpoint of the HeatMaster TC.
Supply Temp.	Displays the current supply temperature of the HeatMaster TC.
Return Temp.	Displays the current return temperature to the HeatMaster TC.
Boiler Flue Temp.	Displays the current flue temperature of the HeatMaster TC.
Outdoor Temp.	Displays the current outdoor temperature.
DHW Storage Temp.	Displays the current DHW storage temperature.
External Modulation Signal	Displays the current external modulation signal being received from an external controller.
Pressure	Displays the current system water pressure.
CH Ignitions	Displays the number of central heating ignitions since the unit was installed. This counter increases in increments of twenty.
CH Runtime	Displays the number of hours the HeatMaster TC has run for a central heating call since the unit was installed.
DHW Ignitions	Displays the number of domestic hot water ignitions since the unit was installed. This counter increases in increments of twenty.
DHW Runtime	Displays the number of hours the HeatMaster TC has run for a domestic hot wa- ter call since the unit was installed.
Mix Zone Temperature	Displays the current low temperature mix zone temperature.

CHAPTER 10 - ACVMAX OPERATION

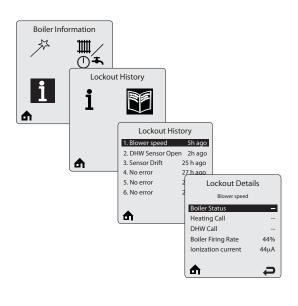

Lockout History records the last eight lockouts. Six lines are displayed on the Lockout History screen at one time. Each line contains a lockout description followed by how long ago the lockout occurred.

Press the **UP** or **DOWN** buttons to scroll through the items then press **OK** to select and get more details through the **Lockout Details** screen. The following information items are recorded at the time of a lockout:


- Boiler Status
- Heating Call
- Domestic Call
- Boiler Firing Rate
- Flame Ionization Current
- Boiler Setpoint
- Boiler Supply Temperature
- Boiler Return Temperature
- Boiler Flue Temperature
- Outdoor Temperature
- System Temperature

10.12.2Lockout Screen

If a problem occurs, the Lockout Screen replaces the Home Screen. The backlight will remain on until the lockout is reset.

Pressing any arrow button will return to the Home Screen so that additional troubleshooting can be performed. See *Sections* 10.12.3 on page 53 and 10.12.4 on page 54 for a list of lockouts and descriptions.

Select the Home Screen icon at the bottom of any screen to return to the lockout screen.

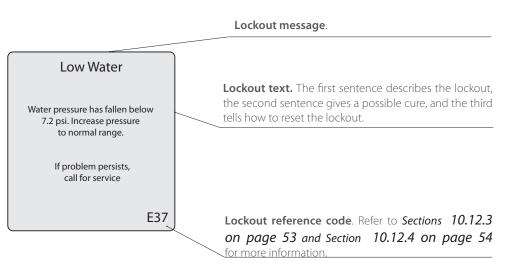

10.12.3 Manual Reset Lockouts

Code	Lockout Message	Description
E1	Failed Ignition	The burner failed to light after 5 ignition attempts.
E2	False Flame	Flame detected prior to ignition.
E3	High Boiler Temperature	Boiler temperature has reached 210°F [99°C] or 102°F [39°C].
E5	Blower Speed	Blower is not at correct speed or speed signal is not being received by control module.
8	Flame Circuit Error	Flame circuit test failed.
9	Gas Valve Circuit Error	Gas valve circuit test failed.
13	Reset Limit Reached	Resets are limited to 5 every 15 minutes.
15	Sensor Drift	Supply or return sensor reading has drifted.
16	Supply Sensor Stuck	Supply sensor reading is not changing.
17	Return Sensor Stuck	Return sensor reading is not changing.
18	Sensor Failure	Supply or return sensor reading changed very rapidly.
19	Flame Failure During Startup Phase	Flame lost after startup
21	Internal Control Fault	A / D conversion error.
30	Supply Sensor Shorted	A short circuit has been detected in the boiler supply temperature sensor circuit.
31	Supply Sensor Open	An open circuit has been detected in the boiler supply temperature sensor circuit.
43	Return Sensor Shorted	A short circuit has been detected in the boiler return temperature sensor circuit.
44	Return Sensor Open	An open circuit has been detected in the boiler return temperature sensor circuit.
47	Water Pressure Sensor Error	Water pressure sensor is disconnected or broken.
80	Return > Supply	Return temperature is higher than supply temperature.
83	Delta T Protection	Excessive difference between boiler supply and return temperatures has occured 5 times
84	High Flue Temperature	Flue temperature has exceeded high limit 5 times
87	External Limit Open	An external manual reset limit has opened

CHAPTER 10 - ACVMAX OPERATION

10.12.4Automatic Reset Blocking Lockouts

Code	Lockout Message	Description
E7	High Flue Temperature	Flue temperature exceeds high limit.
E12	Internal Control Fault	EEPROM misconfiguration.
E25	Internal Control Fault	CRC check error.
E32	DHW Sensor Shorted	A short circuit has been detected in the DHW temperature sensor circuit.
E33	DHW Sensor Open	An open circuit has been detected in the DHW temperature sensor circuit.
E34	Low Voltage	Line voltage has fallen below an acceptable operating level.
E37	Low Water	Water pressure has fallen below 7.2 psi.
E45	Flue Sensor Shorted	A short circuit has been detected in the boiler flue temperature sensor circuit.
E46	Flue Sensor Open	An open circuit has been detected in the boiler flue temperature sensor circuit.
E76	External Limit Open	An external automatic reset boiler limit has opened.
E77	High Mix Circuit Temperature	Mix circuit temperature exceeds Mix zone high limit setting.
E78	Mix Circuit Sensor Shorted	A short circuit has been detected in the mix circuit temperature sensor circuit.
E79	Mix Circuit Sensor Open	An open circuit has been detected in the mix circuit temperature sensor circuit.
E81	Sensor Drift	Supply and return temperatures are not equal.
E82	Delta T Protection	Excessive difference between the boiler supply and return temperatures.
E89	Incorrect Setting	A parameter setting is in conflict with another setting.
E90	Firmware Mismatch	Control module and display firmware versions are incompatible.
E91	System Sensor Shorted	A short circuit has been detected in the system temperature sensor circuit.
E92	System Sensor Open	An open circuit has been detected in the system temperature sensor circuit.
E93	Outdoor Sensor Shorted	A short circuit has been detected in the outdoor temperature sensor circuit.
E94	Internal Display Fault	Display memory error.
E95	Supply Sensor Error	Supply sensor reading is invalid.
E96	Outdoor Sensor Open	An open circuit has been detected in the outdoor temperature sensor circuit.
E97	Cascade Mismatch	Cascade configuration has changed.
E98	Cascade Bus Error	Communication with other boilers has been lost.
E99	Controller Bus Error	Communication between boiler display and control module has been lost.

NOTICE

Requirements below must be met for warranty coverage of HeatMaster TC heat exchangers. A thorough cleaning of any existing system, using approved heating system cleaning agents is required prior to installation of the HeatMaster TC boiler. System should be treated with an approved inhibitor after filling for long term protection.

11.1. Boiler System Fluid Requirements



Do not use petroleum-based cleaning or sealing compounds in the boiler system. Damage to seals and gaskets in the system components can occur, resulting in substantial property damage, serious injury, or death.

NOTICE

System fluid including additives, must be practically non-toxic, having a toxicity rating or Class of 1, as listed in Clinical Toxicology of Commercial Products.

11.1.1 Boiler Fluid pH Level 6.6 to 8.5

Maintain the boiler fluid pH between 6.6 and 8.5. Check using litmus paper or contact a water treatment company for a chemical analysis.

If the pH does not meet this requirement, do not operate the HeatMaster TC or leave the unit filled until the condition is corrected.

11.1.2 Boiler Fluid Hardness Less Than 7 Grains

For areas with unusually hard water (hardness above 7 grains) consult a water treatment company.

11.1.3 Chloride Level Less Than 125 ppm (mg/L)

NOTICE

Do not fill appliance or operate with water containing chlorides in excess of 125 ppm (mg/L).

Filling with fresh chlorinated water should be acceptable since drinking water chloride levels are typically less than 5 ppm (mg/L).

NOTICE

Do not use the HeatMaster TC to heat a swimming pool or spa directly.

11.1.4 Total Dissolved Solids (TDS) Less Than 200 ppm (mg/L)

Total Dissolved Solids are minerals, salts, metals, and charged particles that are dissolved in water.

The greater the amounts of TDS present, the higher the corrosion potential due to increased conductivity in the water.

11.1.5 Iron Level Less Than 0.5 ppm (mg/L)

The greater the amounts of iron present, the higher the corrosion potential due to increased conductivity in the water.

11.1.6 Copper Level Less Than 0.1 ppm (mg/L)

The greater the amounts of copper present, the higher the corrosion potential due to increased conductivity in the water.

11.1.7 Conductivity Less Than 400µS/cm (at 77°F [25°C])

A high conductivity level is an indication of high levels of impurities which increases the potential for corrosion.

11.1.8 Flush Boiler to Remove Sediment

The installer must flush the boiler system to remove any sediment to allow proper operation of the HeatMaster TC. Flush the system until the water runs clean and is free of sediment.

For zoned systems, each zone should be flushed through a purge valve. Purge valves and isolation valves should be installed on each zone to allow proper flushing of the system.

11.1.9 Cleaning of Old Boiler/System:

- Drain the existing system.
- Fill system with fresh water and cleaner, place existing boiler in operation and run all zones.
- Follow manufacturer's instructions for proper cleaner concentration and proper cleaning time.
- Thoroughly drain and flush system with fresh water after cleaning.
- Install new boiler and fill system with fresh water and proper amount of inhibitor.
- Verify pH and inhibitor level per inhibitor manufacturer's specs; add inhibitor if necessary.

11.1.10 Cleaning of New Boiler/System:

- Install new boiler and flush system with clean water to remove any debris.
- Fill system with fresh water and proper amount of inhibitor.
- Verify pH and inhibitor level per inhibitor manufacturer's specs; add inhibitor if necessary.

11.1.11 Check and Test Antifreeze

For boiler systems containing antifreeze solutions, follow the antifreeze manufacturer's instructions in verifying the inhibitor level and to ensure the fluid characteristics are within specification requirements.

Due to the degradation of inhibitors over time, antifreeze fluids must be periodically replaced. Refer to the manufacturer of the antifreeze for additional instructions.

11.1.12 Use of Antifreeze in the Boiler System

NEVER use automotive or ethylene glycol antifreeze or undiluted antifreeze in the system as freeze protection. This can result in substantial property damage, serious injury, or death.

Determine the antifreeze fluid quantity using the system water volume and following the antifreeze manufacturer instructions.

The water volume of the HeatMaster TC is approximately 33 gallons [125 L]. Remember to include the volume of the expansion tank.

Check with local code requirements for the installation of backflow preventers or actual disconnection of the boiler's cold water fill or make up water supply line.

NOTICE

Massachusetts Code requires the installation of a backflow preventer if antifreeze is used.

Ensure the concentration of antifreeze to water does not exceed a 50/50 ratio.

NOTICE

System fluid including additives, must be practically non-toxic, having a toxicity rating or Class of 1, as listed in Clinical Toxicology of Commercial Products. 11.2. Filling the Domestic Water Tank



- Never use the HeatMaster TC unless domestic inner and outer boiler tanks are completely filled with water.
- Domestic inner tank of the HeatMaster TC water heater must be completely filled and pressurized before pressurizing boiler outer tank.
- Failure to comply could result in damage of the inner tank.
- 1. Close domestic water drain valve.
- 2. Open domestic water isolation valves on the water heater piping.
- 3. Vent air from the domestic inner tank by opening nearest hot water faucet.
- 4. Fill domestic water tank completely by allowing water to run until there is a constant flow of water.
- 5. Close hot water faucet.

11.3. Filling the Boiler System



Never use the HeatMaster TC unless domestic inner and outer boiler tanks are completely filled with water.

- Domestic inner tank of the HeatMaster TC water heater must be completely filled and pressurized before pressurizing boiler outer tank.
- Failure to comply could result in damage of the inner tank.
- 1. Close the boiler drain valve located on the bottom of the unit and any manual or automatic air vents in the system.
- 2. Open all system isolation valves.
- 3. Fill the boiler system to correct system pressure. Correct pressure will vary with each application.

NOTICE

Typical residential system fill pressure is 12 psi. System pressure will increase as system temperature increases. Operating pressure of the system should never exceed 25 psi.

() Triangle Tube

- 4. Purge air and sediment in each zone of the boiler system through the purge valve. Open air vents to allow air to be purged from the zones.
- 5. Once the system is completely filled and purged of all air and sediment, check the system pressure and check/repair any leaks.



Unrepaired system leaks will cause continual makeup water to be added to the boiler. Continual makeup water will cause mineral buildup within the heat exchanger, reducing the heat transfer, causing heat buildup and eventual heat exchanger failure. This can result in substantial property damage, serious injury, or death.

11.4. Check Low Water Cut-Off Device

- The HeatMaster TC is provided with a factory installed LWCO device that monitors system pressure.
- Access the Boiler Information Menu by following instructions in *Section 10.12 on page 50*. Scroll down to see the current system pressure and verify it is within the range given in *Section 11.3 on page 56*.

11.5. Check For Gas Leaks



- Prior to start-up and during initial operation, check for a gas leak using a combustable gas detector. Do not proceed with the start-up if there is any indication of a gas leak. Any leaks found must be repaired immediately.
- Propane installations only The propane supplier mixes an odorant with the propane to make its presence detectable. In some cases the odorant can fade and the gas may no longer have an odor.
- Prior to start-up of the unit and periodically after start-up have the propane supplier check and verify the odorant level.
- Failure to comply with these instructions can result in substantial property damage, serious injury, or death.

11.6. Check Thermostat Circuit

- Disconnect the external thermostat wires from the low voltage terminal strip.
- Connect a voltmeter across the wire ends of the external thermostat wiring.
- Close each thermostat, zone valve and relay in the external circuit one zone at a time and check the voltage reading across the wire ends.
- There should **NEVER** be voltage measured at the wire ends.
- If voltage is measured under any condition, check and correct the external wiring.

NOTICE

In systems using 3-wire zone valves, voltage backfeed to the unit is a common problem. Use an isolation relay to prevent voltage from the external circuit from entering the HeatMaster TC.

Reconnect the external thermostat wires to the low voltage terminal strip.

11.7. Inspect Condensate Drain Assembly

- 1. Inspect and ensure the Condensate Drain Assembly is properly installed as described in *Section 6.2 on page 27*.
- 2. Remove the plug from the Condensate Drain Assembly and fill with fresh water.



The condensate drain assembly must be filled with water when the HeatMaster TC is in operation. The condensate drain assembly prevents flue gas emissions from entering the condensate line. Failure to ensure trap is filled with water can result in serious injury, or death.

3. Re-Install plug in condensate drain assembly.

11.8. Setting the Thermostatic Mixing Valve

NOTICE

The thermostatic mixing valve controls the hot water temperature delivered to the faucets.



POTENTIAL SCALD HAZARD. The mixing valve must be installed on the HeatMaster TC. Removal or adjustment of the mixing valve will create a potential scald hazard, which can result in serious injury, or death.

If any adjustment needs to be made to the valve's temperature setpoint refer to the manufacturer's instructions included with the valve.





- Water temperatures over 125°F can cause severe burns instantly, or death from scalds
- Feel water before bathing or showering.
- Consumer Product Safety Commission and some states recommend temperatures settings of 130°F or less. Setting thermostat higher than 130°F will increase risk of scald injury and cause severe personal injury or death.
- Water heated to a temperature suitable for clothes washing, dish washing and other sanitizing needs will scald and cause permanent injury.

- Children and elderly, infirm, or physically handicapped persons are more likely to be injured by hot water. Never leave them unattended in or near a bathtub. If anyone using hot water in the building fits this description, or if state laws or local codes require certain water temperatures at hot water faucets, take special precautions.
 - Install the factory supplied automatic mixing valve at water heater and/or install a point of use mixing valve at each hot water faucet, bath and shower outlet. Selection and installation of point of use mixing valves must comply with valve manufacturer's recommendation and instructions.
 - Use the lowest practical temperature setting.
 - Check water temperature after any adjustment of the mixing valve.
- Failure to comply with these instructions will result in serious injury, or death.

General Notes

- Household water usage patterns will affect water temperature at any faucet or shower. Occasionally check temperature at each point of use, then adjust the mixing valve setting accordingly. Always recheck temperature after adjusting the mixing valve.
- Lowering the automatic mixing valve as indicated in these instructions will reduce water temperature levels. Consult your installer or service technician.

INTENTIONALLY LEFT BLANK

FOR YOUR SAFETY, READ BEFORE OPERATING

If you do not follow these instructions exactly, a fire or explosion may result, causing substantial property damage, serious injury, or death.

- A. This appliance does not have a pilot. It is equipped with an ignition device which automatically lights the burner. DO NOT try to light the burner by hand.
- B. BEFORE OPERATING, smell all around the appliance area for gas. Be sure to smell next to the floor because some gas is heavier than air and will settle on the floor.

WHAT TO DO IF YOU SMELL GAS

- Do not try to light any appliance.
- Do not touch any electric switch; do not use any phone in your building
- Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.

- C. Use only your hand to turn the external manual gas valve. Never use tools. If the valve will not turn by hand, don't try to repair it; call a qualified service technician. Force or attempted repair may result in a fire or explosion.
- D. Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control which has been under water.

OPERATING INSTRUCTIONS

- **1. STOP!** Read the safety information above. This appliance is equipped with an ignition device which automatically lights the burner. DO NOT try to light the burner by hand.
- 2. Set room thermostat(s) to lowest setting. Turn the external manual gas valve handle clockwise to "CLOSE" (valve handle must be perpendicular to gas piping).
- 3. Turn the service switch on the appliance control panel OFF.
- 4. Remove the front jacket panel on the unit.
- 5. Wait five (5) minutes to clear out any gas. If you then smell gas in the jacket enclosure or around the unit, STOP! Follow "B" in the safety information above. If you don't smell gas, go to the next step.
- 6. Turn the external manual gas valve handle counter clockwise \checkmark to "OPEN" gas supply (valve handle shall be parallel to gas piping).

- 7. Turn the service switch on the appliance control panel "ON".
- 8. Set room thermostat(s) to desired setting(s).
- 9. The appliance control panel display will show the current operating status on the Status Line at the bottom of the screen. "Standby" means there is no call for heat (all thermostats are satisfied). "CH Demand" indicates a space heating call has been received. "DHW Demand" indicates a domestic hot water call has been received. A flame icon will be displayed when the unit is fired.
- 10. If the unit will not operate, follow the instructions "To Turn Off Gas to Appliance", below and call your service technician or gas supplier.
- 11. Replace the front jacket panel. Make sure the panel is seated firmly in place and all mounting screws are tightened.

TO TURN OFF GAS TO APPLIANCE

- 1. Set the room thermostat to lowest setting.
- 2. Turn the service switch on the appliance control panel to "OFF"
 - () Triangle Tube

CHAPTER 12 - START-UP PROCEDURES

12.1. Final Checks Before Start-Up

- Read Chapter 10 on page 41 regarding the operation of the ACVMax Boiler Management System.
- Verify the HeatMaster TC and the boiler system are full of water and all system components are correctly set for operation.
- Verify Start-up Preparation items outlined in *Chapter 11 on page 55* have been completed.
- Verify all electrical connections are correct and securely fastened.
- Inspect vent and combustion air piping for signs of deterioration from corrosion, physical damage or sagging. Verify combustion air and vent piping are intact and correctly installed and supported. Reference the Vent Supplement.
- > Verify burner configuration Propane only.
 - Check for proper labeling on the gas valve and the rating label for propane configuration.
 - If there is doubt on the burner configuration, remove the gas valve and check for proper propane gas orifice size. Refer to Section 7.3.2 on page 31 for orifice sizes. Refer to Fig. 16 and Fig. 17 on page 32 for location of the propane gas orifice.
- Ensure the Condensate Drain Assembly is filled with water.

12.2. HeatMaster TC Start-Up

- 1. Press the ON-OFF button located on the front control panel to the OFF position. Turn ON the electrical supply/service to the unit.
- 2. Read and follow the Operating Instructions outlined on previous page.

If HeatMaster TC Does Not Start Correctly

- 1. Check for loose electrical connections, blown fuses on control module, or an open service switch.
- 2. Verify CH and DHW operation is enabled. A radiator or faucet icon with an X through it indicates that function is disabled.
- 3. Check the system pressure in the Boiler Information Menu by following the instructions in *Section 10.12 on page 50.*
- 4. Is an external limit (if applicable) open? Ensure the external limit is reset to the closed position.
- 5. Are the gas supply valves open at the unit and meter?

- 6. Is incoming gas supply pressure at the unit more than 5"w.c. and less than 13" w.c. with all gas appliances ON or OFF.
- 7. Are the heating thermostats set above room temperature?

If none of these conditions correct the problem, contact Triangle Tube Technical Support.

12.3. Check the HeatMaster TC and System

12.3.1 Check Boiler Piping.

- Check Boiler system piping and components for leaks. If found, shut down the unit and repair immediately.
- Purge any remaining air from the system. Air in the system will interfere with circulation, creating heat distribution problems and noise.

12.3.2 Check Vent and Combustion Air Piping.

• Check for a gas-tight seal at every connection and seam of the vent and combustion air piping.



Venting system must be sealed gas-tight to prevent flue gas spillage and carbon monoxide emissions, which will result in serious injury, or death.

12.3.3 Verify Carbon Monoxide Detector

Verify that at least two (2) carbon monoxide detectors are installed and operating properly. One must be installed in the mechanical room where the HeatMaster TC is located and another installed in the living area outside the bedroom(s).

12.3.4 Check Gas Piping

Check around the unit for gas odor following the procedure outlined in this manual *on page 60*.

If any gas leaks are found or suspected, shut the unit down immediately. Use a gas detection device or bubble test to locate the source of the gas leak and repair at once. Do not operate the unit until the leak is corrected. Failure to comply with this procedure will result in substantial property damage, serious injury, or death.

12.3.5 Verify Flame Pattern and Combustion

1. Check the flame pattern through the observation port of the heat exchanger. The flame should be blue and stable. The flame should be over the length of the burner head.

NOTICE

Combustion testing and adjustments must be performed by a qualified installer, service agency or the gas supplier. All combustion measurements must be performed with recently calibrated equipment (1 year max.) to ensure proper reading and accuracy.

- Test for CO₂ or O₂ and for CO during high firing rate. The combustion readings must be within the range listed in *Table 4 on page 63*. The CO level must not exceed 100 ppm for natural gas and 150 ppm for propane gas when combustion is correct. Perform the following procedure to manually place the burner into high fire.
 - a. Press the round **INSTALLER** button. Reference *Section 10.1 on page 41*.
 - Enter the installer access code "054" by using the LEFT and RIGHT buttons to select a digit and the UP and DOWN buttons to change the digit.
 Press the OK button to enter the access code.
 - c. Press the **RIGHT** button to highlight the Manual Operation icon the **OK** button.
 - d. Press the **OK** button while the FAN icon is highlighted to manually fire the burner and power the CH circulator(s).



Fig. 24 - ACVMax Manual Operation screen

- e. Press the **RIGHT** button to adjust the firing rate from 1% to 100%. Hold down the **RIGHT** button to rapidly increase the firing rate.
- f. Press the **OK** button while the FAN icon is highlighted to shutdown the burner.
- 3. If the combustion levels during high fire (100%) are outside the acceptable levels, adjust the THROTTLE SCREW (see *Fig. 16 & Fig. 17 on page 32*) according to *Table 3 on page 63*.
- 4. Once the combustion level is set at high fire (100%), manually place the boiler into low fire (1%) mode by pressing the **LEFT** button to adjust firing rate down.
- 5. Verify the combustion levels during low fire (1%) are within the acceptable combustion levels in *Table 4 on page 63.*



If the combustion levels at low fire (1%) are not within the range given in *Table 4 on page* 63, shut the boiler down and contact Triangle Tube Technical Support. Failure to comply with this requirement can result in substantial property damage, serious injury, or death.

Triangle Tube

CHAPTER 12 - START-UP PROCEDURES

Direction	HM 240 TC	HM 399 TC
Clockwise	Decrease CO ₂ Increase O ₂	Increase CO ₂ Decrease O ₂
Counter-Clockwise	Increase CO ₂ Decrease O ₂	Decrease CO ₂ Increase O ₂

Table 3 - Throttle Screw Adjustment

12.3.6 Measure Input - Natural Gas Only

- 1. Ensure the boiler is firing at maximum firing rate. To manually place the boiler into high fire, reference *Section 12.3.5 on page 62*.
- 2. Operate the unit for approximately 10 minutes.
- 3. Turn off all gas appliances within the building, except the HeatMaster TC.
- 4. At the gas meter, record the time required to use one cubic foot of gas.
- Calculate Natural gas input using the following equation: 3600 x 1000 / number of seconds recorded for one cubic foot of gas = BTU/H.
- 6. The BTU/H calculated should approximate the input rating listed on the unit.

12.3.7 Test High Temperature Limit

The high temperature limit can be temporarily lowered from 210°F [99°C] to 102°F [39°C] for testing.

- 1. Press the round **INSTALLER** button. Reference *Section 10.1 on page 41.*
- Enter the installer access code "054" by using the LEFT and RIGHT buttons to select a digit and the UP and DOWN buttons to change the digit. Press the OK button to enter the access code.

- 3. Press the **OK** button while CH & DHW Settings icon is highlighted.
- Press the **DOWN** button to highlight the Boiler Settings icon ^{OV} then press the **OK** button.
- 5. Press the **DOWN** button to highlight Lockout Temperature then press the **OK** button.
- 6. Press the **UP** button to highlight 102°F [39°C] then press the **OK** button.
- Press the **DOWN** button to highlight the Home Screen icon for then press the **OK** button.
- 8. Initiate a CH or DHW call and confirm that a High Boiler Temperature lockout occurs once the supply temperature reaches 102°F [39°C].
- 9. Press any **ARROW** button to return to the Home Screen.
- 10. Press the round **INSTALLER** button.
- 11. Press the **OK** button while the CH & DHW Settings icon is highlighted.
- 12. Press the **DOWN** button to highlight the Boiler Settings icon [©] then press the **OK** button.
- 13. Press the **DOWN** button to highlight Lockout Temperature, then press the **OK** button.
- 14. Press the **DOWN** button to highlight 210°F [99°C] then press the **OK** button.
- 16. Press the **OK** button to reset the lockout and return the unit to service.

		Natural Gas All Models	Propane HM 240 TC	Propane HM 399 TC		
	CO ₂ Range	8.8 to 10.5%	10.7 to 12.0%	10.4 to 11.4%		
) Fire	CO ₂ Target	9.2%	1	1.0%		
High	O ₂ Range	2.3 to 5.3%	2.7 to 4.7%	3.7 to 5.2%		
	O ₂ Target	4.6%	2	4.2%		
ire	CO ₂ Range		0.5 to 0.6% Lower than High Fire CO2			
Low Fire	O ₂ Range		0.8 to 0.9% Higher than High Fire O2			
	CO Max	100 ppm	150 pp	m		

Table 4 - Acceptable Combustion Levels

INTENTIONALLY LEFT BLANK

The use of the outdoor reset function is required to optimize boiler efficiency, see notice on the right. If the outdoor sensor is not installed before turning on the HeatMaster TC, an Outdoor Sensor Open error (E96) will be displayed. The error will not prevent the boiler from operating. The error will automatically reset once the outdoor sensor is installed or if the outdoor reset function is disabled. Reference *Section 10.7 on page 46* for information on disabling the outdoor reset function. The outdoor reset function can only be disabled if the installation meets one of the exceptions listed in the **IMPORTANT** notice below.

13.1. Mounting the Outdoor Sensor

- 1. The exterior wall selected for mounting the outdoor sensor should represent the heat load of the building. Typically a northern wall will suit most buildings.
- 2. Ensure the outdoor sensor is shielded from direct sunlight or the effects of heat or cold from other sources (exhaust fans, appliance vents...) to prevent false temperature readings.
- 3. Mount the outdoor sensor at an elevation on the exterior wall to prevent accidental damage or tampering.
- 4. Avoid mounting the outdoor sensor in areas subjected to excessive moisture.
- 5. Once an area on the exterior wall has been determined, follow the mounting instructions included with the outdoor sensor.

13.2. Wiring the Sensor

- 1. Connect 18 AWG 2-wire cable or similar to the outdoor sensor.
- 2. Route the cable back to the HeatMaster TC boiler, ensuring the wires are not run parallel to telephone or power wiring.

NOTICE

If the sensor wires are located in an area with sources of electromagnetic interference (EMI), the sensor wires should be shielded or the wires should be run in a grounded metal conduit. If using shielded cable, the shielding should be connected to the common ground of the unit.

3. Connect the outdoor sensor wires to low voltage terminals 5&6 located on the left side as shown in *Fig. 20 on page 35.*

IMPORTANT

In accordance with Chapter 325 (f) (3) of the Energy Policy and Conservation Act, this boiler is equipped with a feature that saves energy by reducing the boiler water temperature as the heating load decreases. This feature is equipped with an override which is provided primarily to permit the use of an external energy management system that serves the same function.

THIS OVERRIDE MUST NOT BE USED UNLESS AT LEAST ONE OF THE FOLLOWING CONDITIONS IS TRUE.

- An external energy management system is installed that reduces the boiler water temperature as the heating load decreases.
- This boiler is not used for any space heating
- This boiler is part of a modular or multiple boiler system having a total input of 300,000 BTU/ hr or greater.
- This boiler is equipped with a tankless coil.

INTENTIONALLY LEFT BLANK

The HeatMaster TC can directly accept an analog 0-10 VDC signal from an external modulating boiler controller to control the firing rate.

14.1. Wiring the Modulating Controller

Run two 18 gauge wires from the external modulating boiler controller's 0-10 VDC boiler output to low voltage terminals 13&14 located on the left side as shown in *Fig. 20 on page 35*. This signal will both enable and modulate the boiler. No wiring is required at the thermostat terminals.

External modulating control will only function if the external modulating controller is properly wired to the HeatMasterTC as follows:

- Terminal 13 = +
- Terminal 14 = -

NOTICE

Ensure that the polarity of the connections from the external modulating boiler controller to the boiler are correct. Reversed polarity will lead to no response from the boiler.

14.2. ACVMax Programming

The ACVMax control module must be programmed to accept the 0-10 VDC signal from the external modulating boiler control.

1. Use the Heating EZ Setup function to set CH Demand to 0-10V Modulation Signal. Reference *Section 10.7 on page 46.*

14.3. Programming of External Modulating Control

The external modulating control must be programmed to send 2 VDC to enable the boiler and run it at low fire, and 10 VDC to run the boiler at high fire. Once the control enables the boiler, it must wait 30 seconds to allow the burner to stabilize before modulating the boiler.

HEATING SETTING	FACTORY	MINIMUM	MAXIMUM	EZ SETUP RESET	INSTALLER RESE
	DEFAULT	SETTING	SETTING	LZ JETUP NEJET	INJIALLEN REJE
Heating Operation	Enabled				1
Demand Type	Thermostat &			1	1
Demand Type	Outd. Curve			v	V
CH Maximum Capacity	100%	0%	100%		
CH Minimum Capacity	0%	0%	100%		
Absolute Max CH Setpoint	188°F [87°C]	68°F [20°C]	188°F [87°C]		
CH1 Maximum Setpoint	140°F [60°C]	68°F [20°C]	188°F [87°C]	180°F [82°C]	180°F [82°C]
CH1 Minimum Setpoint	80°F [27°C]	60°F [15°C]	188°F [87°C]	✓	✓
Outdoor Curve Coldest Day	10°F [-12°C]	-30°F [-34°C]	50°F [10°C]		1
Outdoor Curve Warmest Day	64°F [18°C]	60°F [15°C]	78°F [25°C]		1
CH2 Circuit	Enabled				1
CH2 Maximum Setpoint	140°F [60°C]	68°F [20°C]	188°F [87°C]	1	1
CH2 Minimum Setpoint	80°F [27°C]	60°F [15°C]	186°F [86°C]	1	1
Warm Weather Shutdown	Off	Off	78°F [25°C]	1	1
Circulation Pump Permanent	Disabled				✓
CH Post Pump Time	5 Minutes	Off	20 Minutes		1
Freeze Protection	Enabled				1
Frost Protection Setpoint	-22°F [-30°C]	-22°F [-30°C]	50°F [10°C]		1
Parallel Shift Value	0°F [0°C]	0°F [0°C]	144°F [80°C]		1
CH Call Blocking	2 Minutes	0 Minutes	30 Minutes		1
WP Diff Trigger	290 cpsi	0 cpsi	725 cpsi		
Appliance Min CH Setpoint	80°F	60°F	188°F		

Table 5 - Factory ACVMax Settings

CHAPTER 14 - EXTERNAL MODULATING CONTROL

✓ ✓

DHW SETTING	FACTORY DEFAULT	MINIMUM SETTING	MAXIMUM SETTING	EZ SETUP RESET	INSTALLER RESET
DHW Operation	Enabled				1
Demand Type	Sensor				
DHW Boiler Setpoint	168°F [76°C]	96°F [35°C]	188°F [87°C]	✓	<i>√</i>
DHW Setpoint	140°F [60°C]	68°F [20°C]	186°F [86°C]	1	1
DHW On Differential	6°F [3°C]	4°F [2°C]	18°F [10°C]		1
DHW Storage Adder	28°F [15°C]	10°F [5°C]	54°F [30°C]		1
DHW Post Pump Time	3 Minutes	Off	30 Minutes		2 Minutes
DHW Priority Timeout	Off	Off	120 Minutes	1	1
DHW Priority	Enabled				✓
DHW Call Blocking	0 Minute	0 Minute	30 Minutes		\checkmark
DHW to CH Call Blocking	1 Minute	0 Minute	30 Minutes		\checkmark
Antilegionella Function	Enabled			1	1
BOILER SETTING	FACTORY DEFAULT	MINIMUM SETTING	MAXIMUM SETTING	EZ SETUP RESET	INSTALLER RESET
Lockout Temp.	210°F [99°C]				1
Modbus Address	0=BCST	0=BCST	247		1
Flex. Relay 1(CH)	CH1/CH2/DHW				
Flex. Relay 2(DHW)	CH1				
Flex. Relay 3(P3)	CH1/CH2				
Flex. Relay 4(ERR)	ERROR				
Flex. Relay 5(Flame)	FLAME				
Flex. Relay 6(P4)	CH2				
Error Relay	On Lockout, Blockii and Warning	ng			
Pump PWM Minimum	100%	1%	100%		
Ignition Level	Varies by model	1600 rpm	6000 rpm		
Mix Zone High Limit	114°F [45°C]	68°F [20°C]	176°F [80°C]		
Appliance Setting	Varies by model				
WP Diff Trigger	290 cpsi	0 cpsi	725 cpsi		
CASCADE SETTING	FACTORY DEFAULT	MINIMUM SETTING	MAXIMUM SETTING	EZ SETUP RESET	INSTALLER RESET
Stage Delay	60 Seconds	0 Seconds	255 Seconds		✓
Minimum Firing Rate	25%	0%	100%		1
Max. Firing Rate	Varies by model	0 MBH [0kW] 8	369 MBH [255kW]		1
CH/DHW Boilers	0	0	6		1
Auto. Rotation	Enabled				1

Factory ACVMax Settings (cont'd)



CH Prop. Gain

CH Integral Gain

DHW Prop. Gain

NOTICE

Perform the following check-out procedures as outlined and check off items as completed. When procedures are completed, the installer should complete the installation record in Chapter 16 on page 71.

- Domestic inner tank is filled with water.
- Central/space heating outer tank is filled with water.
- Boiler system fluid chemistry checked and verified as outlined in *Section 11.1 on page 55.*.
- □ Boiler system was completely flushed to remove any debris/sediment.
- Any automatic air vents placed within the system are open one full turn.
- Air is purged from the heating zones and boiler system piping.
- □ If applicable, confirm that the burner has been properly configured for Propane as outlined in *Section 7.3 on page 31*.
- Thermostat circuit wiring checked and verified that no voltage is present as outlined in Section 11.6 on page 57.
- Operating Instructions *on page 60* were followed during start-up.
- □ Combustion levels and flame pattern verified as outlined in *Section 12.3.5 on page 62*.

- Measured the rate of input on Natural Gas as outlined in *Section 12.3.6 on page 63.*
- □ Test high temperature limit as outlined in *Section 12.3.7 on page 63.*
- Checked the incoming gas pressure to the Heat-Master TC to ensure a minimum pressure of 5"w.c during flow conditions to all gas appliances and a maximum pressure of 13"w.c during non-flow conditions for Natural and Propane.
- Adjusted balancing valves and system limit controls to provide design temperatures to the primary space heating system.
- □ In multiple zone applications, adjusted for correct flow of boiler water to each zone.
- Checked and verified room thermostat(s) function properly and the thermostat(s) heat anticipator (if used) was properly set.
- □ Observed several operating cycles for proper operation of the HeatMaster TC and the system.
- Set the room thermostat(s) to the desired room temperature.
- Reviewed all instructions shipped with the Heat-Master TC with the homeowner or maintenance personnel.
- Completed the Installation Record of *Chapter 16* on page 71.
- Ensure all manuals and other documents are returned to the Installation envelope and given to the owner for safekeeping.

INTENTIONALLY LEFT BLANK

CHAPTER 16 - INSTALLATION RECORD

Ensure all manuals and other documents are returned to the Installation envelope and given to the owner for safekeeping.

HEATMASTER TC Model Number:						
Serial Number:						
Date of Installation:						
Fuel: 🗌 Natural Gas 📄 Propane						
Measured Rate of Input:	Btu/hr					
Combustion Readings:						
CO ₂ %						
0 ₂ %						
CO ppm						
The following items were completed during installat	ion:					
Installation instructions have been followed and completed						
Check-out procedures have been followed and completed						
Information regarding the unit and installation received and left with owner / maintenance personnel.						
Installer Information						
(Company)						
(Address)						
(Address)						
(Phone Number)						