


5 Maintenance

⚠ WARNING


Risk of electric shock. Before performing any maintenance or servicing, always turn power off at service panel or disconnect the unit from the outlet. When cleaning the unit, it is recommended to wear safety glasses and gloves.

5.1 Quarterly Maintenance

1. Disconnect unit or turn power off at service panel.
2. Open unit's door by following these steps and referring to illustration below:
 - A** For each corner, simultaneously push on the door while pushing on the corner metal tab to disengage these tabs from the unit frame (see inset).
 - B** Disengage the unit door by pushing out the center tabs, one after the other.

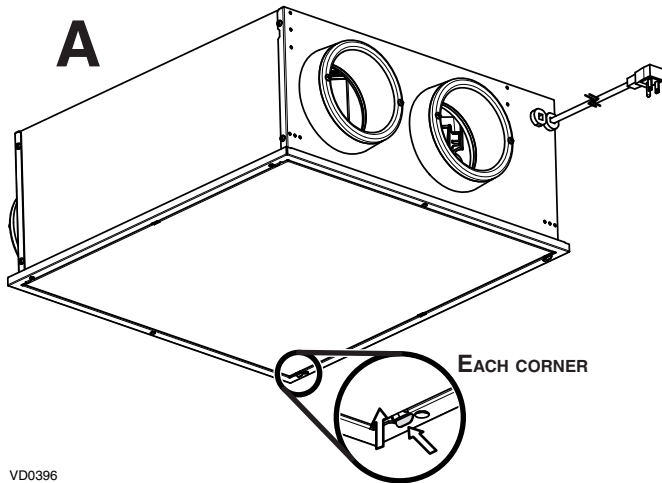


VD0396

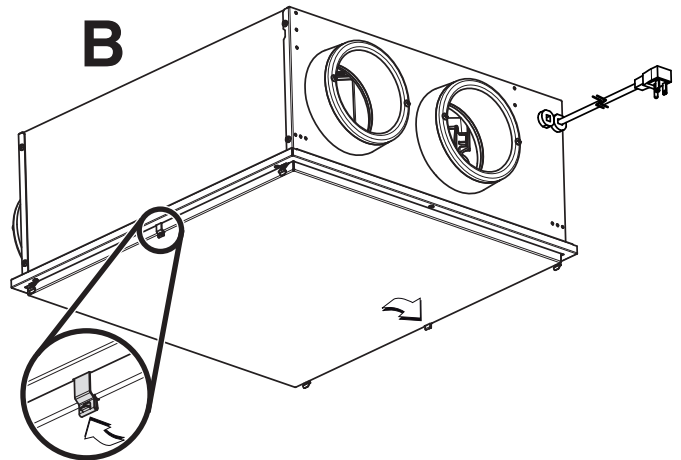

CAUTION

Be careful when opening the door; water may be present when outdoor temperature is cold.

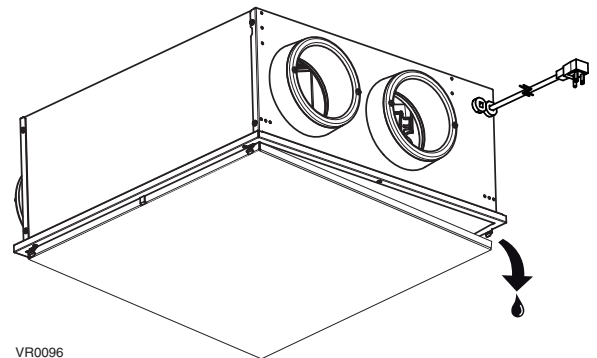


VR0096

3. While holding the core (1) if unit is installed in or under the ceiling, loosen the wing nut (2) and rotate the core retaining bracket (shaded part in illustration at right). Slide out the core with its filters.

⚠ WARNING

If the unit is installed in or under the ceiling, always hold the core when rotating the core retaining bracket; failure to do so will cause the core to fall out.

4. Wash both core filters under lukewarm water with mild soap. Rinse and let dry completely before reinstalling on the core. Refer to the core label for proper location.
5. Slide the core with its cleaned filters in the unit. Refer to filter location indicators embossed inside the unit to position adequately the core. Use the core bracket and wing nut to lock the core in place.
6. Close the door and restore power.

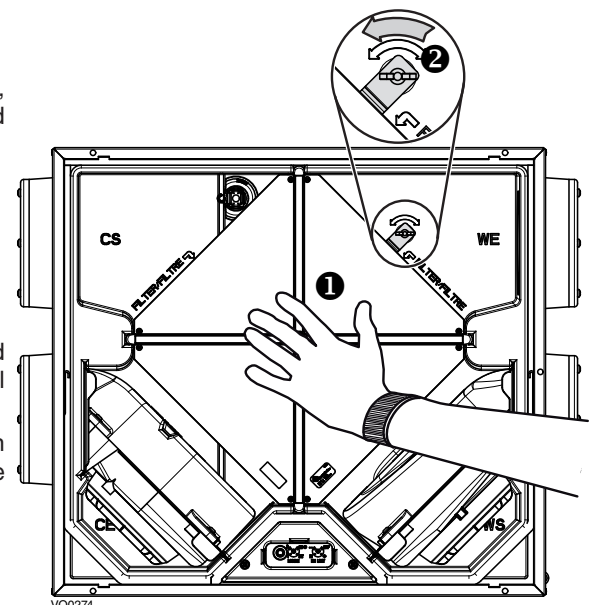

VO0274