

## COMMERCIAL REPLACEMENT PARTS LIST High Efficiency Commercial Gas Water Heater



EF120T(400,500)3N(A)3

Includes Hydrojet® Total Performance System


Effective: February, 2019 ECO 8160

NOTE: BOTH MODEL AND SERIAL NUMBERS ARE REQUIRED FOR ORDERING REPLACEMENT PARTS

Dimensions and specifications subject to change without notice.




As required by the state of California Proposition 65.

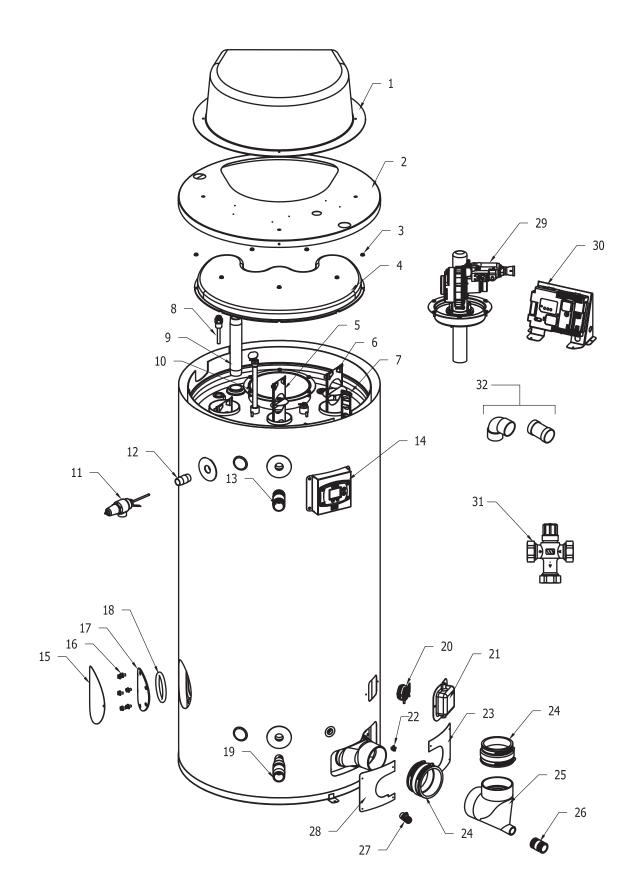



Item         Description         EF120T4003N           1         Surround with Latches         239-5381-00           2         Jacket Head         239-5381-00           3         Hex Nut 1/4-20 Serrated         239-43297-00           4         Exhaust Collector         239-43297-00           5         Baffle 4" Flue (1 req'd)         239-53308-00           7         Baffle 5" Flue (2 req'd)         239-53308-00           8         Sensor Well         239-45658-01           9         Top Outlet Nipple         229-40913-01           10         Power Anode (2 req'd)         224-46075-00           11         T&P Valve         230-33630-04           12         T&P Nipple         229-40913-01           10         Power Anode (2 req'd)         224-46075-00           11         T&P Valve         230-33630-04           12         T&P Valve         230-3363-04           13         Front Outlet Nipple         229-40913-02           14         Control Display Assembly         SEE PAGE 6           15         Cleanout Cover Access         243-20299-00           16         Screw 5/16 - 18 x 3/4 (5 req'd)         239-46037-01           17         Cleanout Cover         <			Model
2         Jacket Head         239-53427-00           3         Hex Nut 1/4-20 Serrated         239-53037-00           4         Exhaust Collector         239-53037-00           5         Baffle 4" Flue (1 req'd)         239-45039-00           6         Baffle 5" Flue (1 req'd)         239-45658-00           8         Sensor Well         239-45658-01           9         Top Outlet Nipple         229-40913-01           10         Power Anode (2 req'd)         224-46075-00           11         T&P Valve         230-33630-04           12         T&P Nipple         229-40913-01           10         Power Anode (2 req'd)         224-46075-00           11         T&P Valve         230-33630-04           12         T&P Nipple         229-50053-02           13         Front Outlet Nipple         229-40913-02           14         Control Display Assembly         SEE PAGE 6           15         Cleanout Cover Access         243-20299-00           16         Screw 5/16 - 18 x 3/4 (5 req'd)         239-32970-00           17         Cleanout Cover         205-18427-00           18         Cleanout Cover         205-18427-00           19         Inlet Diptube <t< td=""><td>Item</td><td>Description</td><td>EF120T4003N</td></t<>	Item	Description	EF120T4003N
3         Hex Nut 1/4-20 Serrated         239-43297-00           4         Exhaust Collector         239-53037-00           5         Baffle 4" Flue (1 req'd)         239-46099-00           6         Baffle 2" Flue (2 req'd)         239-4658-00           7         Baffle 2" Flue (19 Req'd)         239-46558-01           9         Top Outlet Nipple         239-46558-01           9         Top Outlet Nipple         239-43658-01           10         Power Anode (2 req'd)         224-46075-00           11         T&P Valve         230-33630-04           12         T&P Naple         229-50053-02           13         Front Outlet Nipple         229-50053-02           13         Front Outlet Nipple         229-40913-02           14         Control Display Assembly         SEE PAGE 6           15         Cleanout Cover Access         243-20299-00           16         Screw 5/16 - 18 x 3/4 (5 req'd)         239-3207-00           17         Cleanout Cover         205-18427-00           18         Cleanout Gasket         205-18427-00           19         Inlet Diptube         239-43238-03           20         Exhaust Limit Switch         239-43238-03           21 <td< td=""><td>1</td><td>Surround with Latches</td><td>239-53581-00</td></td<>	1	Surround with Latches	239-53581-00
4       Exhaust Collector       239-53037-00         5       Baffle 4" Flue (1 req'd)       239-46099-00         6       Baffle 5" Flue (2 req'd)       239-45658-00         7       Baffle 2" Flue (19 Req'd)       239-45658-00         8       Sensor Well       233-46558-01         9       Top Outlet Nipple       229-40913-01         10       Power Anode (2 req'd)       224-46075-00         11       T&P Nipple       229-50053-02         13       Front Outlet Nipple       229-40913-02         14       Control Display Assembly       SEE PAGE 6         15       Cleanout Cover Access       243-20299-00         16       Screw 5/16 - 18 x 3/4 (5 req'd)       239-4507-00         17       Cleanout Cover Access       243-20299-00         18       Cleanout Cover Access       243-20299-00         16       Screw 5/16 - 18 x 3/4 (5 req'd)       239-4503-01         17       Cleanout Gasket       205-18428-00         20       Exhaust Pressure Switch       239-4603-01         21       Intel Diptube       239-45338-00         22       Exhaust Limit Switch       239-43238-03         23       Service Door Right       239-53384-00	2	Jacket Head	239-53427-00
5         Baffle 4" Flue (1 req'd)         239-46099-00           6         Baffle 5" Flue (2 req'd)         239-3308-00           7         Baffle 5" Flue (2 req'd)         239-4658-00           8         Sensor Well         233-46558-01           9         Top Outlet Nipple         229-40913-01           10         Power Anode (2 req'd)         224-46075-00           11         T&P Valve         230-33630-04           12         T&P Nipple         229-50053-02           13         Front Outlet Nipple         229-40913-01           14         Control Display Assembly         SEE PAGE 6           15         Cleanout Cover Access         243-20299-00           16         Screw 5/16 - 18 x 3/4 (5 req'd)         239-32970-00           17         Cleanout Cover         205-18428-00           18         Cleanout Cover         205-18427-00           19         Inlet Diptube         229-53188-00           20         Exhaust Pressure Switch         239-43238-03           21         Pressure Switch Cover         239-53487-00           22         Exhaust Limit Switch         239-53384-00           23         Exhaust Coupler         239-53385-00           23         Exha	3	Hex Nut 1/4-20 Serrated	239-43297-00
6         Baffle 5" Flue (2 req'd)         239-53308-00           7         Baffle 2" Flue (19 Req'd)         239-45658-00           8         Sensor Well         233-46558-01           9         Top Outlet Nipple         229-40913-01           10         Power Anode (2 req'd)         224-46075-00           11         T&P Valve         230-33630-04           12         T&P Nipple         229-50053-02           13         Front Outlet Nipple         229-40913-02           14         Control Display Assembly         SEE PAGE 6           15         Cleanout Cover Access         243-20299-00           16         Screw 5/16 - 18 x 3/4 (5 req'd)         239-32970-00           17         Cleanout Cover         205-18428-00           18         Cleanout Cover         205-18427-00           19         Inlet Diptube         229-53188-00           20         Exhaust Pressure Switch         239-4037-01           21         Pressure Switch Cover         239-43238-03           22         Exhaust Limit Switch         239-53384-00           23         Exhaust Coupler         239-53384-00           24         Exhaust Coupler         239-53385-00           23         Drain Valv	4	Exhaust Collector	239-53037-00
7       Baffle 2" Flue (19 Req'd)       239-45658-00         8       Sensor Well       233-46558-01         9       Top Outlet Nipple       229-40913-01         10       Power Anode (2 req'd)       224-46075-00         11       T&P Valve       230-33630-04         12       T&P Nipple       229-50053-02         13       Front Outlet Nipple       229-40913-01         14       Control Display Assembly       SEE PAGE 6         15       Cleanout Cover Access       243-20299-00         16       Screw 5/16 - 18 x 3/4 (5 req'd)       239-33970-00         17       Cleanout Cover       205-18428-00         18       Cleanout Cover       205-18427-00         19       Inlet Diptube       229-53188-00         20       Exhaust Pressure Switch       239-43037-01         21       Pressure Switch Cover       239-80281-03         22       Exhaust Limit Switch       239-53487-00         24       Exhaust Coupler       239-53487-00         24       Exhaust Coupler       239-53385-00         23       Service Door Right       239-53385-00         24       Exhaust Coupler       239-53385-00         25       Condensate Elbow	5	Baffle 4" Flue (1 req'd)	239-46099-00
8         Sensor Well         233-46558-01           9         Top Outlet Nipple         229-40913-01           10         Power Anode (2 req'd)         224-46075-00           11         T&P Valve         230-33630-04           12         T&P Nipple         229-50053-02           13         Front Outlet Nipple         229-40913-02           14         Control Display Assembly         SEE PAGE 6           15         Cleanout Cover Access         243-20299-00           16         Screw 5/16 - 18 x 3/4 (5 req'd)         239-32970-00           17         Cleanout Cover         205-18428-00           18         Cleanout Cover         205-18428-00           18         Cleanout Gasket         205-18427-00           19         Inlet Diptube         229-53188-00           20         Exhaust Pressure Switch         239-46037-01           21         Pressure Switch Cover         239-46037-01           22         Exhaust Limit Switch         239-43238-03           23         Service Door Right         239-53384-00           24         Exhaust Coupler         239-53384-00           25         Condensate Coupler         239-53385-00           27         Drain Valve	6	Baffle 5" Flue (2 req'd)	239-53308-00
9         Top Outlet Nipple         229-40913-01           10         Power Anode (2 req'd)         224-46075-00           11         T&P Valve         230-33630-04           12         T&P Nipple         229-40913-02           13         Front Outlet Nipple         229-40913-02           14         Control Display Assembly         SEE PAGE 6           15         Cleanout Cover Access         243-20299-00           16         Screw 5/16 - 18 x 3/4 (5 req'd)         239-32970-00           17         Cleanout Cover         205-18428-00           18         Cleanout Gasket         205-18427-00           19         Inlet Diptube         229-40037-01           21         Pressure Switch         239-46037-01           21         Pressure Switch Cover         239-80281-03           22         Exhaust Limit Switch         239-53384-00           23         Service Door Right         239-53384-00           24         Exhaust Coupler         239-53384-00           25         Condensate Elbow         239-53386-00           26         Condensate Elbow         239-53386-00           27         Darin Valve         227-48070-02           28         Service Door Left	7	Baffle 2" Flue (19 Req'd)	239-45658-00
10         Power Anode (2 req'd)         224-46075-00           11         T&P Valve         230-33630-04           12         T&P Nipple         229-50053-02           13         Front Outlet Nipple         229-40913-02           14         Control Display Assembly         SEE PAGE 6           15         Cleanout Cover Access         243-20299-00           16         Screw 5/16 - 18 x 3/4 (5 req'd)         239-32970-00           17         Cleanout Cover         220-518428-00           18         Cleanout Gasket         205-18427-00           19         Inlet Diptube         229-53188-00           20         Exhaust Pressure Switch         239-46037-01           21         Pressure Switch Cover         239-80281-03           22         Exhaust Limit Switch         239-53384-00           23         Service Door Right         239-53384-00           24         Exhaust Coupler         239-53385-00           23         Service Door Left         239-53385-00           24         Exprise Door Left         239-53486-00           29         Burner Assembly (Specify Model)         SEE PAGE 4           30         Control Panel Assembly         SEE PAGE 6           31	8	Sensor Well	233-46558-01
11       T&P Valve       230-33630-04         12       T&P Nipple       229-50053-02         13       Front Outlet Nipple       229-40913-02         14       Control Display Assembly       SEE PAGE 6         15       Cleanout Cover Access       243-20299-00         16       Screw 5/16 - 18 x 3/4 (5 reg'd)       239-32970-00         17       Cleanout Cover       205-18428-00         18       Cleanout Gasket       205-18428-00         19       Inlet Diptube       229-53188-00         20       Exhaust Pressure Switch       239-46037-01         21       Pressure Switch Cover       239-80281-03         22       Exhaust Limit Switch       239-43238-03         23       Service Door Right       239-53487-00         24       Exhaust Coupler       239-53384-00         25       Condensate Elbow       239-53385-00         26       Condensate Coupler       239-53385-00         27       Drain Valve       227-48070-02         28       Service Door Left       239-53486-00         29       Burner Assembly (Specify Model)       SEE PAGE 6         31       Thermostatic Mixing (Optional)       239-51778-00	9	Top Outlet Nipple	229-40913-01
12         T&P Nipple         229-50053-02           13         Front Outlet Nipple         229-40913-02           14         Control Display Assembly         SEE PAGE 6           15         Cleanout Cover Access         243-20299-00           16         Screw 5/16 - 18 x 3/4 (5 req'd)         239-32970-00           17         Cleanout Cover         205-18428-00           18         Cleanout Gasket         205-18428-00           19         Inlet Diptube         229-53188-00           20         Exhaust Pressure Switch         239-46037-01           21         Pressure Switch Cover         239-480281-03           22         Exhaust Limit Switch         239-43238-03           23         Service Door Right         239-53384-00           24         Exhaust Coupler         239-53384-00           25         Condensate Elbow         239-53384-00           26         Condensate Coupler         239-53385-00           27         Drain Valve         227-48070-02           28         Service Door Left         239-53486-00           29         Burner Assembly (Specify Model)         SEE PAGE 6           31         Thermostatic Mixing (Optional)         239-51778-00	10	Power Anode (2 req'd)	224-46075-00
13         Front Outlet Nipple         229-40913-02           14         Control Display Assembly         SEE PAGE 6           15         Cleanout Cover Access         243-20299-00           16         Screw 5/16 - 18 x 3/4 (5 req'd)         239-32970-00           17         Cleanout Cover         205-18428-00           18         Cleanout Gasket         205-18427-00           19         Inlet Diptube         229-53188-00           20         Exhaust Pressure Switch         239-46037-01           21         Pressure Switch Cover         239-80281-03           22         Exhaust Limit Switch         239-43238-03           23         Service Door Right         239-53487-00           24         Exhaust Coupler         239-53384-00           25         Condensate Elbow         239-53385-00           27         Drain Valve         227-48070-02           28         Service Door Left         239-53486-00           29         Burner Assembly (Specify Model)         SEE PAGE 4           30         Control Panel Assembly         SEE PAGE 6           31         Thermostatic Mixing (Optional)         239-51778-00	11	T&P Valve	230-33630-04
14         Control Display Assembly         SEE PAGE 6           15         Cleanout Cover Access         243-20299-00           16         Screw 5/16 - 18 x 3/4 (5 req'd)         239-32970-00           17         Cleanout Cover         205-18428-00           18         Cleanout Gasket         205-18427-00           19         Inlet Diptube         229-53188-00           20         Exhaust Pressure Switch         239-46037-01           21         Pressure Switch Cover         239-80281-03           22         Exhaust Limit Switch         239-43238-03           23         Service Door Right         239-53487-00           24         Exhaust Coupler         239-53384-00           25         Condensate Elbow         239-53385-00           27         Drain Valve         227-48070-02           28         Service Door Left         239-53486-00           29         Burner Assembly (Specify Model)         SEE PAGE 4           30         Control Panel Assembly         SEE PAGE 6           31         Thermostatic Mixing (Optional)         239-51778-00	12		229-50053-02
15         Cleanout Cover Access         243-20299-00           16         Screw 5/16 - 18 x 3/4 (5 req'd)         239-32970-00           17         Cleanout Cover         205-18428-00           18         Cleanout Gasket         205-18428-00           19         Inlet Diptube         229-53188-00           20         Exhaust Pressure Switch         239-46037-01           21         Pressure Switch Cover         239-480281-03           22         Exhaust Limit Switch         239-43238-03           23         Service Door Right         239-53384-00           24         Exhaust Coupler         239-53384-00           25         Condensate Elbow         239-53385-00           27         Drain Valve         227-48070-02           28         Service Door Left         239-53486-00           29         Burner Assembly (Specify Model)         SEE PAGE 4           30         Control Panel Assembly         SEE PAGE 6           31         Thermostatic Mixing (Optional)         239-51778-00	13	Front Outlet Nipple	229-40913-02
16         Screw 5/16 - 18 x 3/4 (5 req'd)         239-32970-00           17         Cleanout Cover         205-18428-00           18         Cleanout Gasket         205-18427-00           19         Inlet Diptube         229-53188-00           20         Exhaust Pressure Switch         239-46037-01           21         Pressure Switch Cover         239-80281-03           22         Exhaust Limit Switch         239-43238-03           23         Service Door Right         239-53487-00           24         Exhaust Coupler         239-53384-00           25         Condensate Elbow         239-53384-00           26         Condensate Elbow         239-53385-00           27         Drain Valve         227-48070-02           28         Service Door Left         239-53486-00           29         Burner Assembly (Specify Model)         SEE PAGE 4           30         Control Panel Assembly         SEE PAGE 6           31         Thermostatic Mixing (Optional)         239-51778-00	14	Control Display Assembly	SEE PAGE 6
17       Cleanout Cover       205-18428-00         18       Cleanout Gasket       205-18427-00         19       Inlet Diptube       229-53188-00         20       Exhaust Pressure Switch       239-46037-01         21       Pressure Switch Cover       239-80281-03         22       Exhaust Limit Switch       239-43238-03         23       Service Door Right       239-53487-00         24       Exhaust Coupler       239-53384-00         25       Condensate Elbow       239-53384-00         26       Condensate Elbow       239-53385-00         27       Drain Valve       227-48070-02         28       Service Door Left       239-53486-00         29       Burner Assembly (Specify Model)       SEE PAGE 4         30       Control Panel Assembly       SEE PAGE 6         31       Thermostatic Mixing (Optional)       239-51778-00	15	Cleanout Cover Access	243-20299-00
18         Cleanout Gasket         205-18427-00           19         Inlet Diptube         229-53188-00           20         Exhaust Pressure Switch         239-46037-01           21         Pressure Switch Cover         239-80281-03           22         Exhaust Limit Switch         239-43238-03           23         Service Door Right         239-53487-00           24         Exhaust Coupler         239-53384-00           25         Condensate Elbow         239-53384-00           26         Condensate Elbow         239-53385-00           27         Drain Valve         227-48070-02           28         Service Door Left         239-53486-00           29         Burner Assembly (Specify Model)         SEE PAGE 4           30         Control Panel Assembly         SEE PAGE 6           31         Thermostatic Mixing (Optional)         239-51778-00	16	Screw 5/16 - 18 x 3/4 (5 req'd)	239-32970-00
19         Inlet Diptube         229-53188-00           20         Exhaust Pressure Switch         239-46037-01           21         Pressure Switch Cover         239-80281-03           22         Exhaust Limit Switch         239-43238-03           23         Service Door Right         239-53487-00           24         Exhaust Coupler         239-53384-00           25         Condensate Elbow         239-53384-00           26         Condensate Elbow         239-53385-00           27         Drain Valve         227-48070-02           28         Service Door Left         239-53486-00           29         Burner Assembly (Specify Model)         SEE PAGE 4           30         Control Panel Assembly         SEE PAGE 6           31         Thermostatic Mixing (Optional)         239-51778-00	17	Cleanout Cover	205-18428-00
20       Exhaust Pressure Switch       239-46037-01         21       Pressure Switch Cover       239-80281-03         22       Exhaust Limit Switch       239-43238-03         23       Service Door Right       239-53487-00         24       Exhaust Coupler       239-53384-00         25       Condensate Elbow       239-53384-00         26       Condensate Coupler       239-53385-00         27       Drain Valve       227-48070-02         28       Service Door Left       239-53486-00         29       Burner Assembly (Specify Model)       SEE PAGE 4         30       Control Panel Assembly       SEE PAGE 6         31       Thermostatic Mixing (Optional)       239-51778-00	18	Cleanout Gasket	205-18427-00
21       Pressure Switch Cover       239-80281-03         22       Exhaust Limit Switch       239-43238-03         23       Service Door Right       239-53487-00         24       Exhaust Coupler       239-53384-00         25       Condensate Elbow       239-53384-00         26       Condensate Coupler       239-53385-00         27       Drain Valve       227-48070-02         28       Service Door Left       239-53486-00         29       Burner Assembly (Specify Model)       SEE PAGE 4         30       Control Panel Assembly       SEE PAGE 6         31       Thermostatic Mixing (Optional)       239-51778-00	19	Inlet Diptube	229-53188-00
22       Exhaust Limit Switch       239-43238-03         23       Service Door Right       239-53487-00         24       Exhaust Coupler       239-53384-00         25       Condensate Elbow       239-53384-00         26       Condensate Coupler       239-53385-00         27       Drain Valve       227-48070-02         28       Service Door Left       239-53486-00         29       Burner Assembly (Specify Model)       SEE PAGE 4         30       Control Panel Assembly       SEE PAGE 6         31       Thermostatic Mixing (Optional)       239-51778-00	20	Exhaust Pressure Switch	239-46037-01
23         Service Door Right         239-53487-00           24         Exhaust Coupler         239-53384-00           25         Condensate Elbow         239-53041-00           26         Condensate Coupler         239-53385-00           27         Drain Valve         227-48070-02           28         Service Door Left         239-53486-00           29         Burner Assembly (Specify Model)         SEE PAGE 4           30         Control Panel Assembly         SEE PAGE 6           31         Thermostatic Mixing (Optional)         239-51778-00	21		239-80281-03
24         Exhaust Coupler         239-53384-00           25         Condensate Elbow         239-53041-00           26         Condensate Coupler         239-53385-00           27         Drain Valve         227-48070-02           28         Service Door Left         239-53486-00           29         Burner Assembly (Specify Model)         SEE PAGE 4           30         Control Panel Assembly         SEE PAGE 6           31         Thermostatic Mixing (Optional)         239-51778-00	22	Exhaust Limit Switch	239-43238-03
25         Condensate Elbow         239-53041-00           26         Condensate Coupler         239-53385-00           27         Drain Valve         227-48070-02           28         Service Door Left         239-53486-00           29         Burner Assembly (Specify Model)         SEE PAGE 4           30         Control Panel Assembly         SEE PAGE 6           31         Thermostatic Mixing (Optional)         239-51778-00	23	Service Door Right	239-53487-00
26Condensate Coupler239-53385-0027Drain Valve227-48070-0228Service Door Left239-53486-0029Burner Assembly (Specify Model)SEE PAGE 430Control Panel AssemblySEE PAGE 631Thermostatic Mixing (Optional)239-51778-00	24	Exhaust Coupler	239-53384-00
27Drain Valve227-48070-0228Service Door Left239-53486-0029Burner Assembly (Specify Model)SEE PAGE 430Control Panel AssemblySEE PAGE 631Thermostatic Mixing (Optional)239-51778-00	25	Condensate Elbow	239-53041-00
28Service Door Left239-53486-0029Burner Assembly (Specify Model)SEE PAGE 430Control Panel AssemblySEE PAGE 631Thermostatic Mixing (Optional)239-51778-00	26	Condensate Coupler	239-53385-00
29Burner Assembly (Specify Model)SEE PAGE 430Control Panel AssemblySEE PAGE 631Thermostatic Mixing (Optional)239-51778-00	27	Drain Valve	227-48070-02
30Control Panel AssemblySEE PAGE 631Thermostatic Mixing (Optional)239-51778-00	28	Service Door Left	239-53486-00
31 Thermostatic Mixing (Optional) 239-51778-00	29	Burner Assembly (Specify Model)	SEE PAGE 4
	30	Control Panel Assembly	SEE PAGE 6
	31	Thermostatic Mixing (Optional)	239-51778-00
	32		239-53455-00



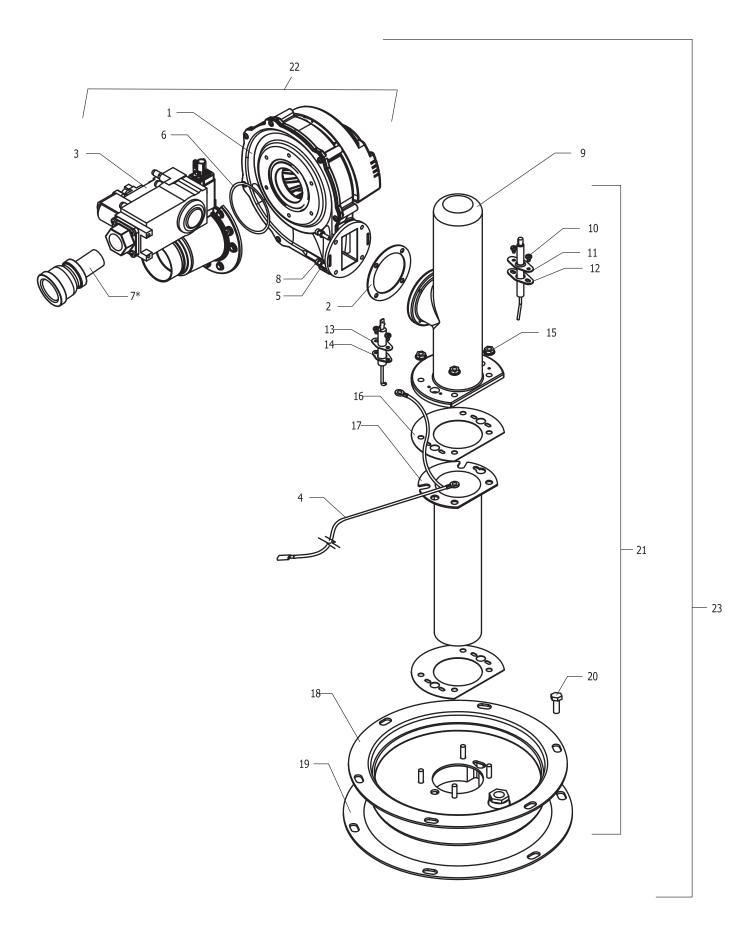




		Model
Item	Description	EF120T4003N
1	Blower w/Gasket	415-51310-00
2	Blower Transition Gasket	239-43241-00
3	Venturi & Gas Valve Assembly	243-53478-01
4	Ground Wire	239-51994-00
5	Washer - #10 Lockwasher (4 Req'd)	239-18461-00
6	Venturi Gasket ◊	239-51397-00
7	Gas Piping assembly*	243-53497-00
8	Screw 10-32 x .75 Skt Head Cap (4 Req'd)	239-43273-00
9	Transition Tube Blower to Burner	239-52974-00
10	Screw - #8-32 x 1/4 (4 Req'd)	239-43272-00
11	Spark Rod	233-53078-00
12	Gasket Spark Rod	239-43370-00
13	Flame Sensor w/Gasket	415-43232-00
14	Gasket Flame Sensor	239-43371-00
15	Nut Hex Washer 1/4-20 Serrated(4 req'd for Trans Tube)	239-43297-00
16	Gasket Burner (2 Req'd)●	239-53301-00
17	Burner w/Gasket	265-53033-00
18	Burner Mounting Assembly	239-53027-00
19	Combustion Assembly Gasket	239-53445-00
20	Screw 5/16-18 x 3/4 (5 Req'd)	239-32970-00
21	Burner Assembly *	243-53476-00
22	Blower and Gas Valve Assembly *	243-53480-01
23	Assy-Complete Combustion System*	243-53482-01


. . . .


\* Ordering a complete assembly may increase delivery time. Please order the specific component required for the ◊ Included with Item 1 & 3
• Included with Items 17 & 21

 
\* To be purchased seperatly



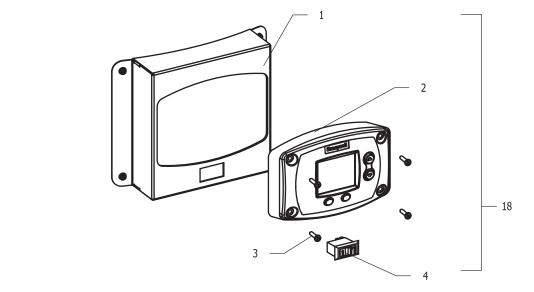



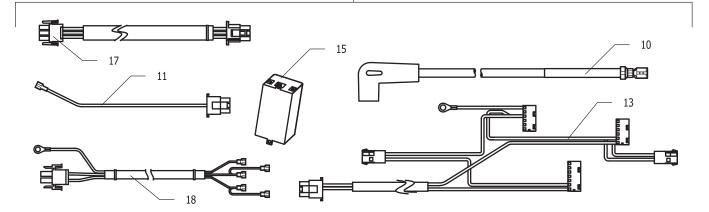

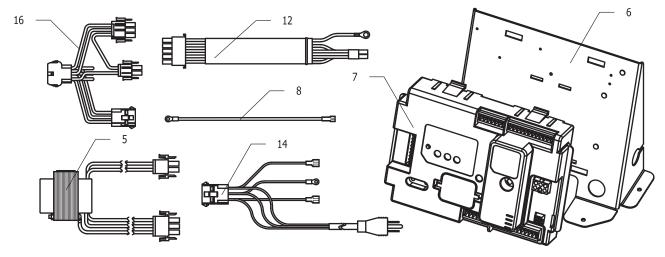




		Model
Item	Description	EF120T4003N
1	Display Mount	239-50508-00
2	Control Display-Honeywell Integrated Control w/Harness	415-48231-00
3	Screw-#8-18 X .75 for Control Display (4 req'd)	239-41104-00
4	Main Power Switch	239-50586-00
5	Transformer 120V to 24V	233-50559-00
6	Control Panel	239-50514-00
7	Integrated Control Board	233-53470-00
8	Ground Wire	239-38951-91
9	T-Stat Sensor Harness	239-53458-00
10	High Voltage Spark Cable	239-50887-00
11	Flame Sensor Wire	239-48237-00
12	Blower Modulation Harness	239-48170-00
13	Ignition Control Harness	239-53460-00
14	Power Cord Harness	239-53464-00
15	Power Anode Module	239-46229-00
16	Power Switch Harness	239-53459-00
17	Blower Power Harness	239-53465-00
18	Display Assembly*	243-51213-00
19	Control Assembly*	243-53474-01

\* Ordering a complete assembly may increase delivery time. Please order the specific component required for the




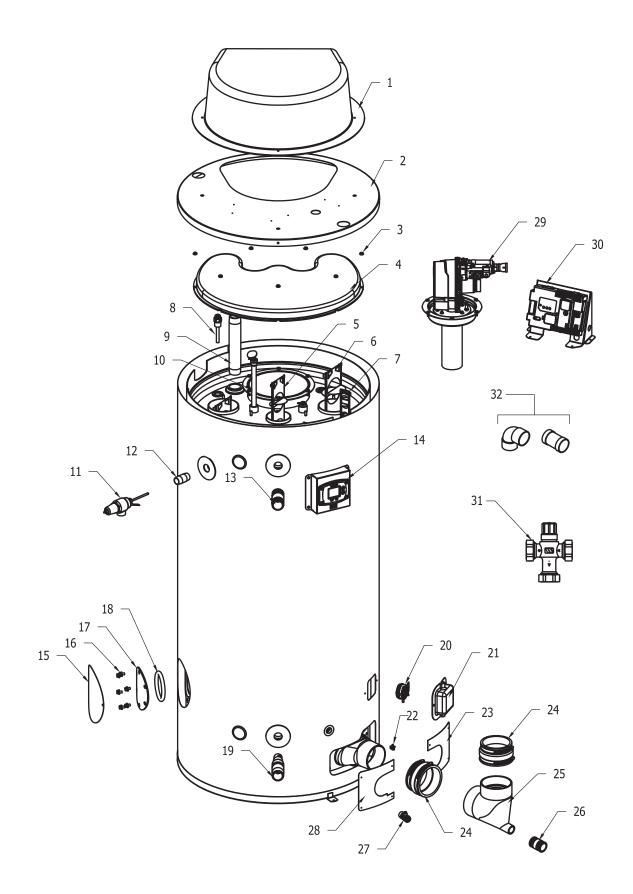



Item         Description         EF120T5003N           1         Surround with Latches         239-53581-00         239-53581-00           2         Jacket Head         239-53327-00         239-43297-00           3         Hex Nut 1/4-20 Seratted         239-43297-00         239-43297-00           4         Exhaust Collector         239-53037-00         239-53037-00           5         Baffle 4" Flue (1 req'd)         239-53308-00         239-45658-00           6         Baffle 5" Flue (2 req'd)         239-45658-01         239-45658-01           9         Top Outlet Nipple         229-40913-01         229-40913-01           10         Power Anode (2 req'd)         224-46075-00         11         T&P Valve         230-33630-04           11         T&P Valve         230-33630-04         229-50053-02         13         Front Outlet Nipple         229-40913-02           14         Control Display Assembly         SEE PAGE 12         215         Cleanout Cover Access         243-20299-00         16         Screw 5/16 - 18 x 1/2 (6 req'd)         239-33297-00         17         Cleanout Cover         205-18428-00         18         Cleanout Cover         205-18428-00         18         Cleanout Cover         205-18428-00         18         Cleanout Cover <td< th=""><th></th><th></th><th>Model</th></td<>			Model
2       Jacket Head       239-53427-00         3       Hex Nut 1/4-20 Seratted       239-53427-00         4       Exhaust Collector       239-43297-00         5       Baffle 4" Flue (1 req'd)       239-453037-00         6       Baffle 5" Flue (2 req'd)       239-45089-00         7       Baffle 2" Flue (19 Req'd)       239-45658-00         8       Sensor Well       233-45658-01         9       Top Outlet Nipple       229-40913-01         10       Power Anode (2 req'd)       224-46075-00         11       T&P Valve       230-33630-04         12       T&P Nipple       229-40913-01         13       Front Outlet Nipple       229-40913-02         14       Control Display Assembly       SEE PAGE 12         15       Cleanout Cover Access       243-20299-00         16       Screw 5/16 - 18 x 1/2 (6 req'd)       239-332970-00         17       Cleanout Cover       205-18427-00         18       Cleanout Cover       205-18427-00         19       Inlet Diptube       229-53188-00         20       Exhaust Pressure Switch       239-43238-03         21       Pressure Switch       239-43238-03         22       Service Door Right	Item	Description	EF120T5003N
3         Hex Nut 1/4-20 Seratted         239-43297-00           4         Exhaust Collector         239-53037-00           5         Baffle 4" Flue (1 req'd)         239-46099-00           6         Baffle 2" Flue (19 Req'd)         239-45658-00           8         Sensor Well         239-45658-01           9         Top Outlet Nipple         229-40913-01           10         Power Anode (2 req'd)         224-46075-00           11         T&P Valve         230-33630-04           12         T&P Nipple         229-50053-02           13         Front Outlet Nipple         229-40913-02           14         Control Display Assembly         SEE PAGE 12           15         Cleanout Cover Access         243-20299-00           16         Screw 5/16 - 18 x 1/2 (6 req'd)         239-32970-00           17         Cleanout Gasket         205-18428-00           18         Cleanout Gasket         205-18428-00           19         Inlet Diptube         239-43037-01           20         Exhaust Pressure Switch         239-46037-01           21         Pressure Switch         239-43038-03           22         Exhaust Limit Switch         239-53384-00           23         Serv	1	Surround with Latches	239-53581-00
4         Exhaust Collector         239-53037-00           5         Baffle 4" Flue (1 req'd)         239-46099-00           6         Baffle 5" Flue (2 req'd)         239-46099-00           7         Baffle 5" Flue (19 Req'd)         239-45658-00           8         Sensor Well         233-46558-01           9         Top Outlet Nipple         229-40913-01           10         Power Anode (2 req'd)         224-46075-00           11         T&P Nipple         229-50053-02           13         Front Outlet Nipple         229-40913-01           21         Seter PAGE 12         229-40913-02           14         Control Display Assembly         SEE PAGE 12           15         Cleanout Cover Access         243-20299-00           16         Screw 5/16 - 18 x 1/2 (6 req'd)         239-532970-00           17         Cleanout Cover         205-18428-00           18         Cleanout Gasket         205-18428-00           20         Exhaust Pressure Switch         239-53384-00           20         Exhaust Pressure Switch         239-53384-00           21         Pressure Switch Cover         239-53385-00           21         Prain Valve         239-53385-00           22	2	Jacket Head	239-53427-00
5       Baffle 4" Flue (1 req'd)       239-46099-00         6       Baffle 5" Flue (2 req'd)       239-53308-00         7       Baffle 5" Flue (19 Req'd)       239-45658-00         8       Sensor Well       233-46558-01         9       Top Outlet Nipple       229-40913-01         10       Power Anode (2 req'd)       224-46075-00         11       T&P Valve       230-33630-04         12       T&P Nipple       229-50053-02         13       Front Outlet Nipple       229-40913-01         14       Control Display Assembly       SEE PAGE 12         15       Cleanout Cover Access       243-20299-00         16       Screw 5/16 - 18 x 1/2 (6 req'd)       239-32970-00         17       Cleanout Cover       205-18428-00         18       Cleanout Cover       205-18428-00         19       Inlet Diptube       229-53188-00         20       Exhaust Pressure Switch       239-40037-01         21       Pressure Switch Cover       239-4328-03         22       Exhaust Limit Switch       239-4328-03         23       Exhaust Coupler       239-53384-00         24       Exhaust Coupler       239-53384-00         25       Condensate Elb	3	Hex Nut 1/4-20 Seratted	239-43297-00
6         Baffle 5" Flue (2 req'd)         239-53308-00           7         Baffle 2" Flue (19 Req'd)         239-45658-00           8         Sensor Well         233-46558-01           9         Top Outlet Nipple         229-40913-01           10         Power Anode (2 req'd)         224-46075-00           11         T&P Valve         230-33630-04           12         T&P Nipple         229-50053-02           13         Front Outlet Nipple         229-40913-02           14         Control Display Assembly         SEE PAGE 12           15         Cleanout Cover Access         243-20299-00           16         Screw 5/16 - 18 x 1/2 (6 req'd)         239-332970-00           17         Cleanout Cover         205-18428-00           18         Cleanout Gasket         205-18427-00           19         Inlet Diptube         229-53188-00           20         Exhaust Pressure Switch         239-43238-03           22         Exhaust Pressure Switch         239-43238-03           23         Service Door Right         239-53384-00           23         Service Door Right         239-53384-00           24         Exhaust Coupler         239-53385-00           23         Con	4	Exhaust Collector	239-53037-00
7         Baffle 2" Flue (19 Req'd)         239-45658-00           8         Sensor Well         233-46558-01           9         Top Outlet Nipple         229-40913-01           10         Power Anode (2 req'd)         224-46075-00           11         T&P Valve         230-33630-04           12         T&P Nipple         229-40913-02           13         Front Outlet Nipple         229-50053-02           13         Front Outlet Nipple         229-40913-02           14         Control Display Assembly         SEE PAGE 12           15         Cleanout Cover Access         243-20299-00           16         Screw 5/16 - 18 x 1/2 (6 req'd)         239-3382-00           17         Cleanout Cover         205-18428-00           18         Cleanout Cover         205-18427-00           19         Inlet Diptube         229-53188-00           20         Exhaust Pressure Switch         239-43038-03           21         Pressure Switch Cover         239-80281-03           22         Exhaust Limit Switch         239-53487-00           24         Exhaust Coupler         239-53484-00           25         Condensate Coupler         239-53484-00           26         Condensate	5	Baffle 4" Flue (1 req'd)	239-46099-00
8         Sensor Well         233-46558-01           9         Top Outlet Nipple         229-40913-01           10         Power Anode (2 req'd)         224-46075-00           11         T&P Valve         230-33630-04           12         T&P Nipple         229-50053-02           13         Front Outlet Nipple         229-40913-02           14         Control Display Assembly         SEE PAGE 12           15         Cleanout Cover Access         243-20299-00           16         Screw 5/16 - 18 x 1/2 (6 req'd)         239-32970-00           17         Cleanout Cover         205-18428-00           18         Cleanout Gover         205-18427-00           19         Inlet Diptube         229-5018428-00           12         Pressure Switch         239-40037-01           21         Pressure Switch Cover         239-40037-01           21         Pressure Switch Cover         239-4037-01           22         Exhaust Limit Switch         239-43238-03           23         Service Door Right         239-53384-00           24         Exhaust Coupler         239-53385-00           23         Service Door Left         239-53486-00           239-53486-00         239-53486-0	6	Baffle 5" Flue (2 req'd)	239-53308-00
9         Top Outlet Nipple         229-40913-01           10         Power Anode (2 req'd)         224-46075-00           11         T&P Valve         230-33630-04           12         T&P Nipple         229-50053-02           13         Front Outlet Nipple         229-40913-02           14         Control Display Assembly         SEE PAGE 12           15         Cleanout Cover Access         243-20299-00           16         Screw 5/16 - 18 x 1/2 (6 req'd)         239-32970-00           17         Cleanout Cover         205-18428-00           18         Cleanout Gasket         205-18427-00           19         Inlet Diptube         229-4093-01           20         Exhaust Pressure Switch         239-46037-01           21         Pressure Switch Cover         239-80281-03           22         Exhaust Limit Switch         239-43238-03           23         Service Door Right         239-53487-00           24         Exhaust Coupler         239-53384-00           25         Condensate Elbow         239-53384-00           25         Condensate Elbow         239-53385-00           27         Drain Valve         227-48070-02           28         Service Door Left </td <td>7</td> <td>Baffle 2" Flue (19 Req'd)</td> <td>239-45658-00</td>	7	Baffle 2" Flue (19 Req'd)	239-45658-00
10         Power Anode (2 req'd)         224-46075-00           11         T&P Valve         230-33630-04           12         T&P Nipple         229-50053-02           13         Front Outlet Nipple         229-40913-02           14         Control Display Assembly         SEE PAGE 12           15         Cleanout Cover Access         243-20299-00           16         Screw 5/16 - 18 x 1/2 (6 req'd)         239-32970-00           17         Cleanout Cover         205-18428-00           18         Cleanout Gasket         205-18427-00           19         Inlet Diptube         229-53188-00           20         Exhaust Pressure Switch         239-80281-03           22         Exhaust Limit Switch         239-53487-00           21         Pressure Switch Cover         239-53384-00           22         Exhaust Coupler         239-53384-00           23         Service Door Right         239-53385-00           23         Condensate Elbow         239-53385-00           24         Exhaust Coupler         239-53487-00           24         Exhaust Coupler         239-53385-00           25         Condensate Elbow         239-53385-00           26         Condensate Coup	8	Sensor Well	233-46558-01
11         T&P Valve         230-33630-04           12         T&P Nipple         229-50053-02           13         Front Outlet Nipple         229-40913-02           14         Control Display Assembly         SEE PAGE 12           15         Cleanout Cover Access         243-20299-00           16         Screw 5/16 - 18 x 1/2 (6 req'd)         239-32970-00           17         Cleanout Cover         205-18428-00           18         Cleanout Gasket         205-18427-00           19         Inlet Diptube         229-53188-00           20         Exhaust Pressure Switch         239-46037-01           21         Pressure Switch Cover         239-46037-01           21         Pressure Switch Cover         239-46037-01           22         Exhaust Limit Switch         239-43238-03           23         Service Door Right         239-53384-00           24         Exhaust Coupler         239-53384-00           25         Condensate Elbow         239-53385-00           26         Condensate Coupler         239-53385-00           27         Drain Valve         227-48070-02           28         Service Door Left         239-53486-00           29         Burner Assembly	9	Top Outlet Nipple	229-40913-01
12         T&P Nipple         229-50053-02           13         Front Outlet Nipple         229-40913-02           14         Control Display Assembly         SEE PAGE 12           15         Cleanout Cover Access         243-20299-00           16         Screw 5/16 - 18 x 1/2 (6 req'd)         239-32970-00           17         Cleanout Cover         205-18428-00           18         Cleanout Gasket         205-18427-00           19         Inlet Diptube         229-53188-00           20         Exhaust Pressure Switch         239-46037-01           21         Pressure Switch Cover         239-80281-03           22         Exhaust Limit Switch         239-53487-00           24         Exhaust Coupler         239-53384-00           25         Condensate Elbow         239-53385-00           27         Drain Valve         227-48070-02           28         Service Door Left         239-53486-00           29         Burner Assembly (Specify Model)         SEE PAGE 10           30         Control Panel Assembly         SEE PAGE 12           31         Thermostatic Mixing (Optional)         239-51778-00	10	Power Anode (2 req'd)	224-46075-00
13         Front Outlet Nipple         229-40913-02           14         Control Display Assembly         SEE PAGE 12           15         Cleanout Cover Access         243-20299-00           16         Screw 5/16 - 18 x 1/2 (6 req'd)         239-32970-00           17         Cleanout Cover         205-18428-00           18         Cleanout Gasket         205-18427-00           19         Inlet Diptube         229-53188-00           20         Exhaust Pressure Switch         239-46037-01           21         Pressure Switch Cover         239-80281-03           22         Exhaust Limit Switch         239-43238-03           23         Service Door Right         239-53487-00           24         Exhaust Coupler         239-53384-00           25         Condensate Elbow         239-53384-00           25         Condensate Coupler         239-53385-00           27         Drain Valve         227-48070-02           28         Service Door Left         239-53486-00           29         Burner Assembly (Specify Model)         SEE PAGE 10           30         Control Panel Assembly         SEE PAGE 12           31         Thermostatic Mixing (Optional)         239-51778-00	11	T&P Valve	230-33630-04
14         Control Display Assembly         SEE PAGE 12           15         Cleanout Cover Access         243-20299-00           16         Screw 5/16 - 18 x 1/2 (6 req'd)         239-32970-00           17         Cleanout Cover         205-18428-00           18         Cleanout Gasket         205-18427-00           19         Inlet Diptube         229-53188-00           20         Exhaust Pressure Switch         239-46037-01           21         Pressure Switch Cover         239-80281-03           22         Exhaust Limit Switch         239-43238-03           23         Service Door Right         239-53487-00           24         Exhaust Coupler         239-53041-00           25         Condensate Elbow         239-53385-00           27         Drain Valve         227-48070-02           28         Service Door Left         239-53486-00           29         Burner Assembly (Specify Model)         SEE PAGE 10           30         Control Panel Assembly         SEE PAGE 12           31         Thermostatic Mixing (Optional)         239-51778-00	12	T&P Nipple	229-50053-02
15         Cleanout Cover Access         243-20299-00           16         Screw 5/16 - 18 x 1/2 (6 req'd)         239-32970-00           17         Cleanout Cover         205-18428-00           18         Cleanout Gasket         205-18427-00           19         Inlet Diptube         229-53188-00           20         Exhaust Pressure Switch         239-46037-01           21         Pressure Switch Cover         239-80281-03           22         Exhaust Limit Switch         239-43238-03           23         Service Door Right         239-53384-00           24         Exhaust Coupler         239-53384-00           25         Condensate Elbow         239-53385-00           27         Drain Valve         227-48070-02           28         Service Door Left         239-53486-00           29         Burner Assembly (Specify Model)         SEE PAGE 10           30         Control Panel Assembly         SEE PAGE 12           31         Thermostatic Mixing (Optional)         239-51778-00	13	Front Outlet Nipple	229-40913-02
16         Screw 5/16 - 18 x 1/2 (6 req'd)         239-32970-00           17         Cleanout Cover         205-18428-00           18         Cleanout Gasket         205-18427-00           19         Inlet Diptube         229-53188-00           20         Exhaust Pressure Switch         239-46037-01           21         Pressure Switch Cover         239-80281-03           22         Exhaust Limit Switch         239-43238-03           23         Service Door Right         239-53384-00           24         Exhaust Coupler         239-53384-00           25         Condensate Elbow         239-53385-00           27         Drain Valve         227-48070-02           28         Service Door Left         239-53385-00           29         Burner Assembly (Specify Model)         SEE PAGE 10           30         Control Panel Assembly         SEE PAGE 12           31         Thermostatic Mixing (Optional)         239-51778-00	14	Control Display Assembly	SEE PAGE 12
17       Cleanout Cover       205-18428-00         18       Cleanout Gasket       205-18427-00         19       Inlet Diptube       229-53188-00         20       Exhaust Pressure Switch       239-46037-01         21       Pressure Switch Cover       239-80281-03         22       Exhaust Limit Switch       239-43238-03         23       Service Door Right       239-53487-00         24       Exhaust Coupler       239-53384-00         25       Condensate Elbow       239-53384-00         26       Condensate Elbow       239-53385-00         27       Drain Valve       227-48070-02         28       Service Door Left       239-53486-00         29       Burner Assembly (Specify Model)       SEE PAGE 10         30       Control Panel Assembly       SEE PAGE 12         31       Thermostatic Mixing (Optional)       239-51778-00	15	Cleanout Cover Access	243-20299-00
18         Cleanout Gasket         205-18427-00           19         Inlet Diptube         229-53188-00           20         Exhaust Pressure Switch         239-46037-01           21         Pressure Switch Cover         239-80281-03           22         Exhaust Limit Switch         239-43238-03           23         Service Door Right         239-53487-00           24         Exhaust Coupler         239-53384-00           25         Condensate Elbow         239-53384-00           26         Condensate Coupler         239-53385-00           27         Drain Valve         227-48070-02           28         Service Door Left         239-53486-00           29         Burner Assembly (Specify Model)         SEE PAGE 10           30         Control Panel Assembly         SEE PAGE 12           31         Thermostatic Mixing (Optional)         239-51778-00	16	Screw 5/16 - 18 x 1/2 (6 req'd)	239-32970-00
19         Inlet Diptube         229-53188-00           20         Exhaust Pressure Switch         239-46037-01           21         Pressure Switch Cover         239-80281-03           22         Exhaust Limit Switch         239-43238-03           23         Service Door Right         239-53487-00           24         Exhaust Coupler         239-53384-00           25         Condensate Elbow         239-53384-00           26         Condensate Coupler         239-53385-00           27         Drain Valve         227-48070-02           28         Service Door Left         239-53348-00           29         Burner Assembly (Specify Model)         SEE PAGE 10           30         Control Panel Assembly         SEE PAGE 12           31         Thermostatic Mixing (Optional)         239-51778-00	17	Cleanout Cover	205-18428-00
20       Exhaust Pressure Switch       239-46037-01         21       Pressure Switch Cover       239-80281-03         22       Exhaust Limit Switch       239-43238-03         23       Service Door Right       239-53487-00         24       Exhaust Coupler       239-53384-00         25       Condensate Elbow       239-53384-00         26       Condensate Coupler       239-53385-00         27       Drain Valve       227-48070-02         28       Service Door Left       239-53486-00         29       Burner Assembly (Specify Model)       SEE PAGE 10         30       Control Panel Assembly       SEE PAGE 12         31       Thermostatic Mixing (Optional)       239-51778-00	18	Cleanout Gasket	205-18427-00
21       Pressure Switch Cover       239-80281-03         22       Exhaust Limit Switch       239-43238-03         23       Service Door Right       239-53487-00         24       Exhaust Coupler       239-53384-00         25       Condensate Elbow       239-53384-00         26       Condensate Coupler       239-53385-00         27       Drain Valve       227-48070-02         28       Service Door Left       239-53486-00         29       Burner Assembly (Specify Model)       SEE PAGE 10         30       Control Panel Assembly       SEE PAGE 12         31       Thermostatic Mixing (Optional)       239-51778-00	19	Inlet Diptube	229-53188-00
22         Exhaust Limit Switch         239-43238-03           23         Service Door Right         239-53487-00           24         Exhaust Coupler         239-53384-00           25         Condensate Elbow         239-53384-00           26         Condensate Coupler         239-53385-00           27         Drain Valve         227-48070-02           28         Service Door Left         239-53486-00           29         Burner Assembly (Specify Model)         SEE PAGE 10           30         Control Panel Assembly         SEE PAGE 12           31         Thermostatic Mixing (Optional)         239-51778-00	20	Exhaust Pressure Switch	239-46037-01
23         Service Door Right         239-53487-00           24         Exhaust Coupler         239-53384-00           25         Condensate Elbow         239-53384-00           26         Condensate Coupler         239-53385-00           27         Drain Valve         227-48070-02           28         Service Door Left         239-53486-00           29         Burner Assembly (Specify Model)         SEE PAGE 10           30         Control Panel Assembly         SEE PAGE 12           31         Thermostatic Mixing (Optional)         239-51778-00	21	Pressure Switch Cover	239-80281-03
24         Exhaust Coupler         239-53384-00           25         Condensate Elbow         239-53041-00           26         Condensate Coupler         239-53385-00           27         Drain Valve         227-48070-02           28         Service Door Left         239-53486-00           29         Burner Assembly (Specify Model)         SEE PAGE 10           30         Control Panel Assembly         SEE PAGE 12           31         Thermostatic Mixing (Optional)         239-51778-00	22	Exhaust Limit Switch	239-43238-03
25         Condensate Elbow         239-53041-00           26         Condensate Coupler         239-53385-00           27         Drain Valve         227-48070-02           28         Service Door Left         239-53486-00           29         Burner Assembly (Specify Model)         SEE PAGE 10           30         Control Panel Assembly         SEE PAGE 12           31         Thermostatic Mixing (Optional)         239-51778-00	23	Service Door Right	239-53487-00
26Condensate Coupler239-53385-0027Drain Valve227-48070-0228Service Door Left239-53486-0029Burner Assembly (Specify Model)SEE PAGE 1030Control Panel AssemblySEE PAGE 1231Thermostatic Mixing (Optional)239-51778-00	24	Exhaust Coupler	239-53384-00
27         Drain Valve         227-48070-02           28         Service Door Left         239-53486-00           29         Burner Assembly (Specify Model)         SEE PAGE 10           30         Control Panel Assembly         SEE PAGE 12           31         Thermostatic Mixing (Optional)         239-51778-00	25	Condensate Elbow	239-53041-00
28Service Door Left239-53486-0029Burner Assembly (Specify Model)SEE PAGE 1030Control Panel AssemblySEE PAGE 1231Thermostatic Mixing (Optional)239-51778-00	26	Condensate Coupler	239-53385-00
29Burner Assembly (Specify Model)SEE PAGE 1030Control Panel AssemblySEE PAGE 1231Thermostatic Mixing (Optional)239-51778-00	27	Drain Valve	227-48070-02
30Control Panel AssemblySEE PAGE 1231Thermostatic Mixing (Optional)239-51778-00	28	Service Door Left	239-53486-00
31 Thermostatic Mixing (Optional) 239-51778-00	29	Burner Assembly (Specify Model)	SEE PAGE 10
	30	Control Panel Assembly	SEE PAGE 12
	31	Thermostatic Mixing (Optional)	239-51778-00
	32		239-53455-00



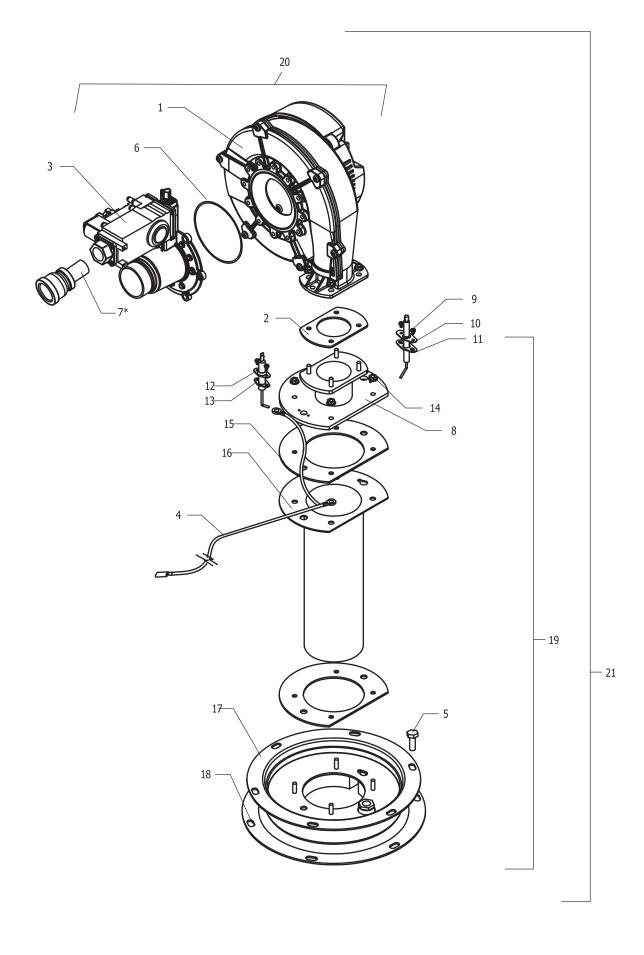




Item	Description	Model EF120T5003N
1	Blower w/Gasket	415-53065-00
2	Blower Transition Gasket	239-53444-00
3	Venturi & Gas Valve Assembly	243-53479-01
4	Ground Wire	239-53462-00
5	Screw 5/16-18 x 3/4 (5 Req'd)	239-32970-00
6	Venturi Gasket ◊	239-53064-00
7	Gas Piping assembly*	243-53497-00
8	Transition Tube Blower to Burner	239-53088-00
9	Screw - #8-32 x 1/4 (4 Req'd)	239-43272-00
10	Spark Rod	233-53079-00
11	Gasket Spark Rod	239-43370-00
12	Flame Sensor w/Gasket	415-53438-00
13	Gasket Flame Sensor	239-43371-00
14	Nut Hex Washer 1/4-20 serrated (4 req'd for Trans Tube)	239-43297-00
15	Gasket Burner (2 Req'd)●	239-53304-00
16	Burner w/Gasket	265-53399-00
17	Burner Mounting Assembly	239-53028-00
18	Combustion Assembly Gasket	239-53445-00
19	Burner Assembly *	243-53477-00
20	Blower and Gas Valve Assembly *	243-53481-01
21	Assy-Complete Combustion System*	243-53483-01


 $^{\ast}$  Ordering a complete assembly may increase delivery time. Please order the specific component required for the  $\Diamond$  Included with Item 1 & 3


Included with Items 17 & 21

 
\* To be purchased seperatly



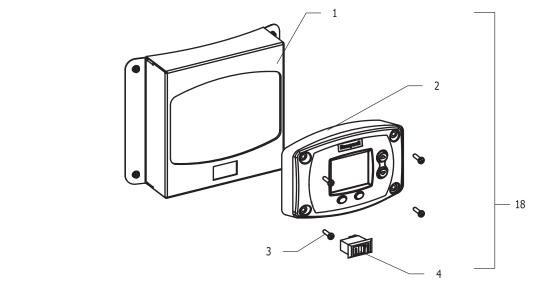



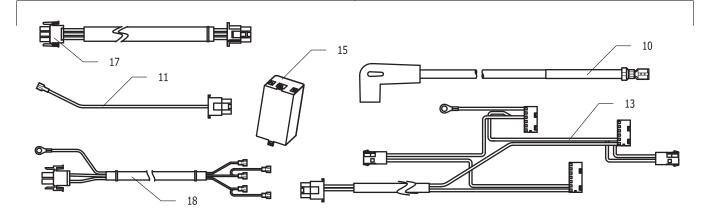

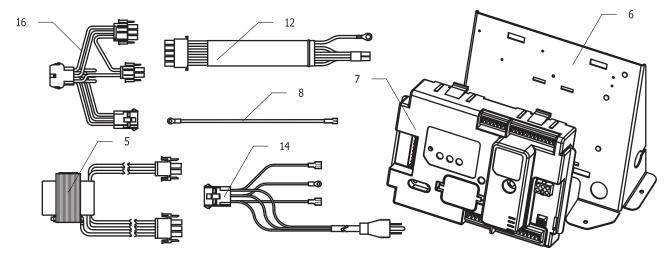



		Model
Item	Description	EF120T5003N
1	Display Mount	239-50508-00
2	Control Display-Honeywell Integrated Control	415-48231-00
3	Screw-#8-18 X .75 for Control Display (4 req'd)	239-41104-00
4	Main Power Switch	239-50586-00
5	Transformer 120V to 24V	233-50559-00
6	Control Panel	239-50514-00
7	Integrated Control Board	233-53470-00
8	Ground Wire	239-38951-91
9	T-Stat Sensor Harness	239-53458-00
10	High Voltage Spark Cable	239-50887-00
11	Flame Sensor Wire	239-48237-00
12	Blower Modulation Harness	239-48170-00
13	Ignition Control Harness	239-53460-00
14	Power Cord Harness	239-53464-00
15	Power Anode Module	239-46229-00
16	Power Switch Harness	239-53459-00
17	Blower Power Harness	239-53465-00
18	Display Assembly*	243-51213-00
19	Control Assembly*	243-53474-01

\* Ordering a complete assembly may increase delivery time. Please order the specific component required for the



NOTES



NOTES





Ambler, PA

For U.S. and Canada field service, contact your professional installer or local Bradford White sales representative.

Sales/800-523-2931

Technical Support/800-334-3393 Email/techserv@bradfordwhite.com

Warranty/**800-531-2111** Email/**warranty@bradfordwhite.com** 

Service Parts/800-538-2020 Email/Parts@bradfordwhite.com

International: international@bradfordwhite.com



Halton Hills, Ontario, Canada

Sales & Technical Support/866-690-0961 905-203-0600

Fax/905-636-0666

Email

Warranty/**bwccwarranty@bradfordwhite.com** Technical Support/**BWCCTech@bradfordwhite.com** Parts/**orders@bradfordwhitecanada.com** Orders/**ca.orders@bradfordwhite.com** 

www.bradfordwhite.com