

PURPOSE:

To replace the stop body stem assembly or components.

TOOLS REQUIRED:

- Slotted screwdriver
 - Adjustable wrench
1. Remove the bonnet nut from the existing stop body.
 2. Remove the stem assembly from the existing stop body.
 3. The two versions of stop body components **are not** interchangeable. Carefully compare the existing and replacement components.
 4. Install the replacement components that match the existing stem assembly.
 5. Discard the unused parts.

