


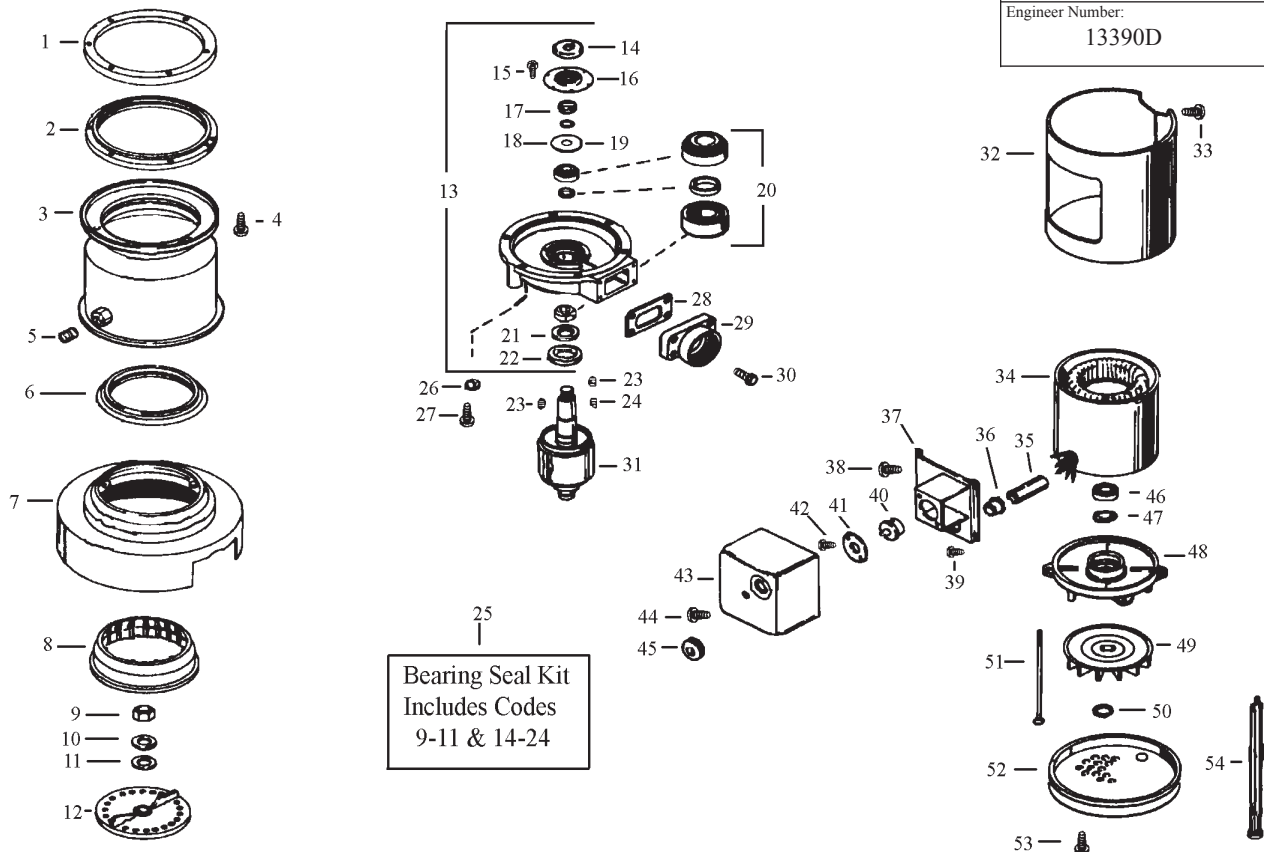

ORDER BY PART NUMBER, NOT CODE NUMBER

CODE NO.	PART NO.	NO. REQ.	DESCRIPTION	CODE NO.	PART NO.	NO. REQ.	DESCRIPTION
1	11004	1	Mounting Flange	28	11457	1	Outlet Gasket
2	11016	1	Mounting Gasket	29	13998	1	Flange Outlet
3	11232	1	Upper Body Assy	30	3130	4	Outlet Flange Bolt
4	1491	6	Mounting Screw	31	13270AZZ	1	Rotor & Shaft Assy
5	11227	1	Pipe, Plug				(Incl. code 46)
6	11008	1	Shredder Gasket	32	11721ZZ	1	Trim Band
7	11725ZZ	1	Body & Cover Assy	33	1836A	2	Screw
8	11250ZZ	1	Stationary Shredder	34	13079A	1	Stator Assy
9	11255	1	Nut	35	12357ZZ	1	Insulation Tubing
10	11256	1	Washer	36	12384	1	Bushing
11	12143	1	Fiber Washer	37	12433BZZ	1	Bracket Assy(Mounting)
12	13273ZZ	1	Rotor Shredder Assy	38	11448	4	Screw
13	13320	1	Upper End Bell Assy	39	2466A	1	Ground Screw
			(Incl. Codes 9-11 & 14 - 24)	40	13422AC	1	Overload Protector
14	13266	1	Shield	41	12378	1	Overload Clamp
15	1269	6	Tapping Screw	42	1836A	2	Tapping Screw
16	13260	1	Seal Assy	43	13396GZZ	1	Box, Terminal Assy
17	13265	1	Spacer Sleeve				(Incl. code 44)
18	12859	1	O-Ring	44	12383	1	Overload Grommet
19	11729	1	Slinger	45	12381	1	Screw
20	12638	1	Bearing Assy, Upper	46	12415	1	Lower Bearing
21	11821	1	Support Washer	47	13678	1	Spring Washer
22	13398	1	Oil and Water Retainer	48	11672	1	Lower End Frame
23	11320	2	Woodruff Key	49	12395	1	Fan
24	11322	1	Woodruff Key	50	12635	1	Retaining Ring
25	13281A	1	Bearing Seal Kit	51	8039	4	Thru Bolt
			(Incl. codes 9 -11 & 14 - 24)	52	11748	1	Bottom Cover,
26	11444	6	Lock Washer	53	8221	3	Screw
27	11524	6	Screw	54	11757A	3	Foot Tube Assy