Residential New Construction

Diagram 100	Gas/Electric Equipment with 1H/1C. One wired temperature sensor in the bedroom hallway.
Diagram 101	Gas/Electric Equipment with 1H/1C. Two wired temperature sensors with one sensor in the master bedroom and the second in the bedroom hallway.
Diagram 102	Gas/Electric or Heat Pump Equipment with 2H/1C or 1H/2C. One wired temperature sensor in the bedroom hallway.
Diagram 103	Gas/Electric or Heat Pump Equipment with 2H/1C or 1H/2C. One wired temperature sensor in the bedroom hallway. WiFi thermostat for home connectivity.
Diagram 104	Gas/Electric or Heat Pump Equipment with 2H/1C or 1H/2C. Two wired temperature sensors with one sensor in the master bedroom and the second sensor in the bedroom hallway. WiFi thermostat for home connectivity.
Diagram 105	Using multiple dampers to define the sleeping or living spaces.

Replacement and Add-On

Diagram 200	Gas/Electric Equipment with 1H/1C. One wired temperature sensor in the bedroom hallway.
Diagram 201	Gas/Electric Equipment with 1H/1C. Two wired temperature sensors with one sensor in the master bedroom hallway and the second sensor in the bedroom hallway.
Diagram 202	Gas/Electric Equipment with 1H/1C. One wired temperature sensor in the bedroom hallway. WiFi thermostat for home connectivity.
Diagram 203	Gas/Electric Equipment with 1H/1C. One wireless, battery powered temperature sensor in the bedroom hallway . Wireless temperature sensor eliminates adding any new wiring in the sleeping or living space.
Diagram 204	Using multiple Plug and Play dampers to define the sleeping and living spaces

	C365T11	C365T21	C365T21WF	C365C32	C365C32WF	WH11	WH32
G/E with 1H/1C	Yes	Yes	Yes	Yes	Yes	Yes	Yes
G/E or HP with 2H/1C	No	Yes	Yes	Yes	Yes	No	Yes
G/E or HP with 1H/2C	No	Yes	Yes	Yes	Yes	No	Yes
G/E or HP with 2H/2C Conv or Dual Fuel HP	No	No	No	Yes	Yes	No	Yes
WiFi Connectivity	No	No	Yes	No	Yes	NA	NA
1 or 2 Wired Sensors	Yes	Yes	Yes	NA	NA	Yes	Yes
1 or 2 Wireless Sensors	No	No	No	NA	NA	Yes	Yes


Comfort³⁶⁵ **RNC Installation Diagram 100** Equipment: Gas/Electric, 1Heat/1Cool Notes: One Wired Temperature Sensor in the Sleeping Space **Temperature Sensor Modulating Damper** Model TS510W Damper with Actuator Model R80CT-XX Installed in Upstairs/Sleeping Space Controlling Upstairs/Sleeping Space Airflow **Modulating Damper** Damper with Actuator Model R80CT-XX Controlling Downstairs/Living Space Airflow Comfort³⁶⁵ U COM OPN HEAT **HVAC Equipment** SYSTEM AUTO R FAN С С 5 W W **Comfort365 Thermostat** Model C365T11 Installed in the Downstairs Living Space Number of wires. Part Number Description Quantity Comfort365 Programmable Thermostat with Airflow Control, C365T11 1 Gas/Electric equipment, 1Heat/1Cool. Temperature Sensor with Switch Plate **TS510W** 1 for Single Sensor Installation. Damper with Modulating 3-Wire Actuator, -inch Diameter. R80CT-1 Controls Airflow to Sleeping Space. Damper with Modulating 3-Wire Actuator, -inch Diameter. R80CT-1 Controls Airflow to Living Space.

Comfort³⁶⁵

RNC Installation Diagram 101


Equipment: Gas/Electric, 1Heat/1Cool

Notes: Temperature Sensors installed in Master Bedroom and Bedroom Hallway

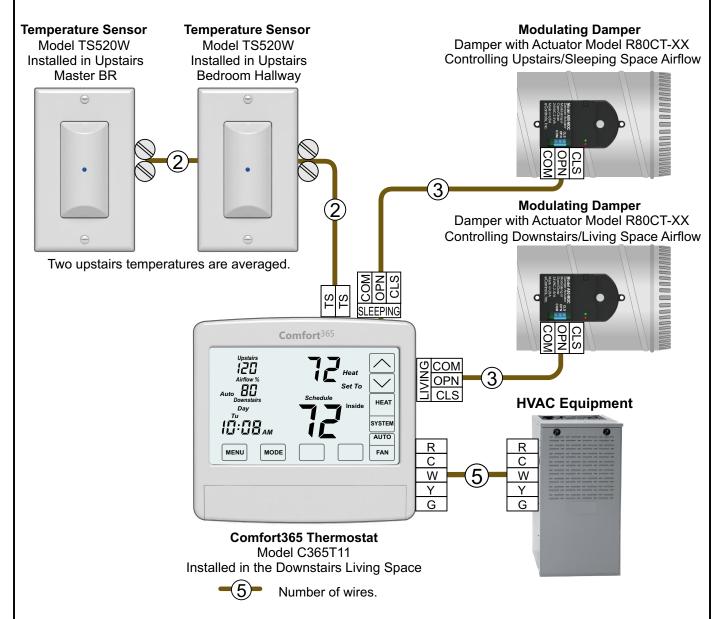

Part Number	Description	Quantity
C365T11	Comfort365 Programmable Thermostat with Airflow Control, Gas/Electric equipment, 1Heat/1Cool.	1
TS520W	Temperature Sensor with Switch Plate for Dual Sensor Installation. Install in master bedroom.	1
TS520W	Temperature Sensor with Switch Plate for Dual Sensor Installation. Install in bedroom hallway.	1
R80CT-	Damper with Modulating 3-Wire Actuator, -inch Diameter. Controls Airflow to Sleeping Space.	1
R80CT-	Damper with Modulating 3-Wire Actuator, -inch Diameter. Controls Airflow to Living Space.	1

Comfort 365 RNC Installation Diagram 102 Equipment: Gas/Electric or Heat Pump, 2Heat/1Cool or 1Heat/2Cool Notes: One Wired Temperature Sensor in the Sleeping Space Temperature Sensor Modulating Damper Damper with Actuator Model R80CT-XX

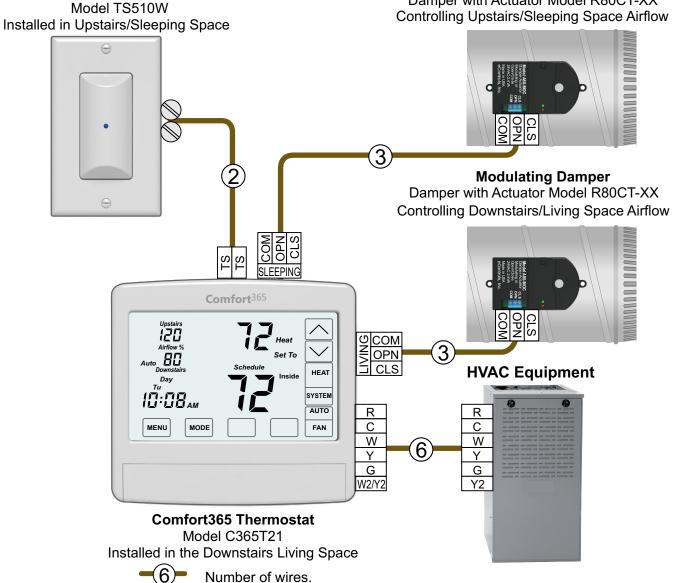

Part Number	Description	Quantity
C365T21	Comfort365 Programmable Thermostat with Airflow Control, Gas/Electric or Heat Pump equipment, 2Heat/1Cool ot 1Heat/2Cool.	1
TS510W	Temperature Sensor with Switch Plate for Single Sensor Installation. Install in bedroom hallway.	1
R80CT-	Damper with Modulating 3-Wire Actuator, -inch Diameter. Controls Airflow to Sleeping Space.	1
R80CT-	Damper with Modulating 3-Wire Actuator, -inch Diameter. Controls Airflow to Living Space.	1


Comfort³⁶⁵ RNC Installation Diagram 103 Equipment: Gas/Electric or Heat Pump, 2Heat/1Cool or 1Heat/2Cool Notes: One Temperature Sensor and WiFi Thermostat for Internet Connectivity. **Modulating Damper Temperature Sensor** Damper with Actuator Model R80CT-XX Model TS510W Controlling Upstairs/Sleeping Space Airflow Installed in Upstairs/Sleeping Space 0 3 **Modulating Damper** Damper with Actuator Model R80CT-XX Controlling Downstairs/Living Space Airflow SOM Comfort³⁶⁵ Device Comfort³⁶⁵ COM OPN **HVAC** Equipment SYSTEM AUTO С С FAN **WOB** 0 (6)Υ Υ G G W2/Y2 **Comfort365 Thermostat** Model C365T21WF Installed in the Downstairs Living Space Number of wires. Part Number Description Quantity Comfort365 Programmable WiFi Thermostat with Airflow Control, C365T21WF 1 Gas/Electric or Heat Pump equipment, 2Heat/1Cool or 1Heat/2Cool. Temperature Sensor with Switch Plate for Single Sensor Installation. **TS510W** 1 Install in bedroom hallway. Damper with Modulating 3-Wire Actuator, -inch Diameter. R80CT-1 Controls Airflow to Sleeping Space. Damper with Modulating 3-Wire Actuator, -inch Diameter. R80CT-1 Controls Airflow to Living Space.

Comfort³⁶⁵


RNC Installation Diagram 104

Equipment: Gas/Electric or Heat Pump, 2Heat/1Cool or 1Heat/2Cool

Notes: Two Temperature Sensors and WiFi Thermostat for Internet Connectivity.

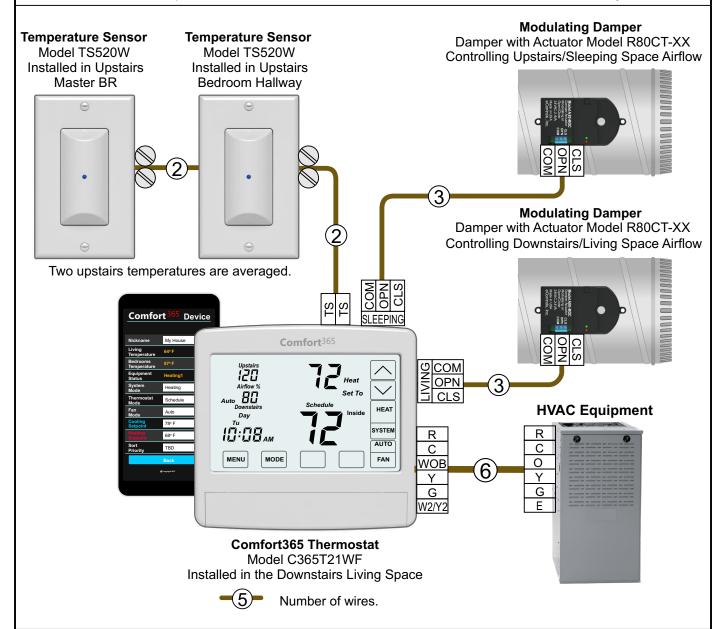

Part Number	Description	Quantity
C365T21WF	Comfort365 Programmable WiFi Thermostat with Airflow Control, Gas/Electric or Heat Pump equipment, 2Heat/1Cool or 1Heat/2Cool.	1
TS520W	Temperature Sensor with Switch Plate for Dual Sensor Installation. Installed in master bedroom.	1
TS520W	Temperature Sensor with Switch Plate for Dual Sensor Installation. Installed in bedroom hallway.	1
R80CT-	Damper with Modulating 3-Wire Actuator, -inch Diameter. Controls Airflow to Sleeping Space.	1
R80CT-	Damper with Modulating 3-Wire Actuator, -inch Diameter. Controls Airflow to Living Space.	1

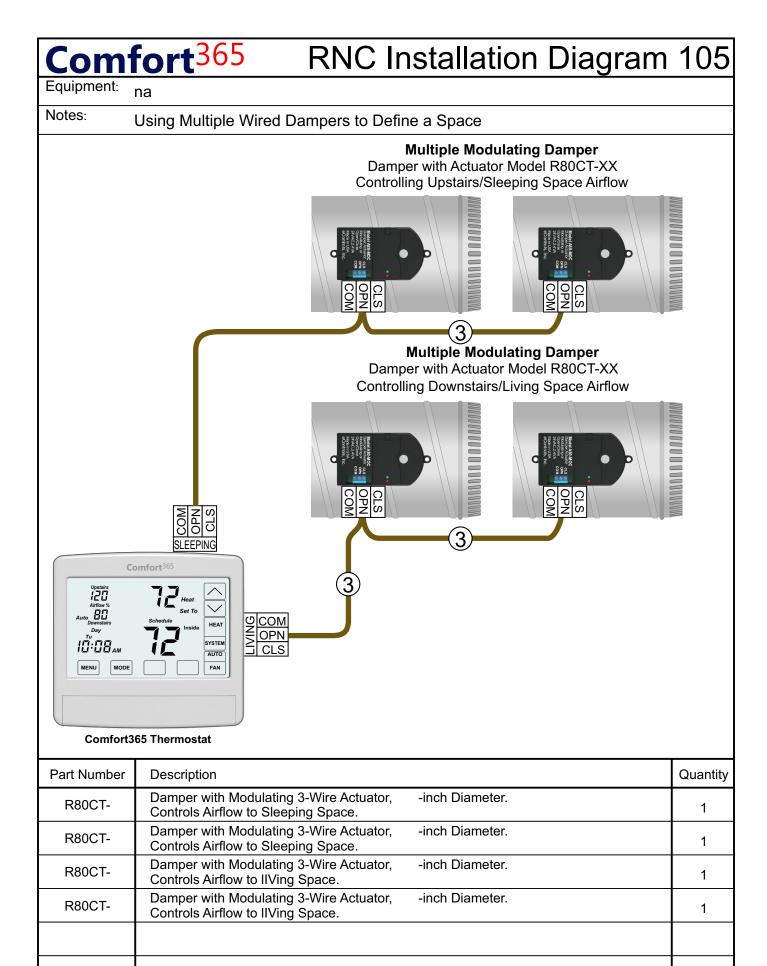

Comfort³⁶⁵ **AOR Installation Diagram 200** Equipment: Gas/Electric, 1Heat/1Cool Notes: Single Wired Temperature Sensor **Temperature Sensor Modulating Damper** Damper with Actuator Model R80CJ-XX Model TS510W Controlling Upstairs/Sleeping Space Airflow Installed in Upstairs/Sleeping Space **Modulating Damper** Damper with Actuator Model R80CJ-XX Controlling Pownstairs/Living Space Airflow (P&P) Comfort³⁶⁵ (P&P) **HVAC** Equipment SLEEP LIVING AUTO 5V 5V R GND <u>GND</u> С SA SA W W SB Existing SB G G thermostat Wiring **Comfort365 Thermostat** Model C365C32 **Comfort365 Wiring Hub** Installed in the Downstairs Living Space WH11 Installed at equipment Number of wires. P&P Plug&Play cable.

Part Number	Description	Quantity
C365C32	Comfort365 Programmable Communicating Thermostat with Airflow Control, Gas/Electric or Heat Pump equipment, 3Heat/2Cool.	1
WH11	Wiring Hub, Gas/Electric , 1Heat/1Cool.	1
TS510W	Temperature Sensor with Switch Plate for Single Sensor Wired Installation. Install in bedroom hallway.	1
R80CJ-	Damper with Modulating Plug and Play Actuator, -inch Diameter. Controls Airflow to Sleeping Space. Cable included with damper,	1
R80CJ-	Damper with Modulating Plug and Play Actuator, -inch Diameter. Controls Airflow to Living Space. Cable included with damper,.	1

Comfort³⁶⁵ **AOR Installation Diagram 201** Equipment: Gas/Electric, 1Heat/1Cool Notes: **Dual Wired Temperature Sensor** Temperature Sensor **Modulating Damper Temperature Sensor** Damper with Actuator Model R80CJ-XX Model TS520W Model TS520W Controlling Upstairs/Sleeping Space Airflow Installed in bedroom Hallway Installed in Master BR **Modulating Damper** Damper with Actuator Model R80CJ-XX Controlling Pownstairs/Living Space Airflow (P&P) Comfort³⁶⁵ (P&P) **HVAC** Equipment SLEEP LIVING AUTO 5V 5V R GND <u>GND</u> С С SA SA W W SB Existing SB Υ G G thermostat Wiring **Comfort365 Thermostat** Model C365C32 **Comfort365 Wiring Hub** Installed in the Downstairs Living Space WH11 Installed at equipment Number of wires. Plug&Play cable.


Part Number	Description	Quantity
C365C32	Comfort365 Programmable Communicating Thermostat with Airflow Control, Gas/Electric or Heat Pump equipment, 2Heat/2Cool.	1
WH11	Wiring Hub, Gas/Electric , 1Heat/1Cool.	1
TS520W	Temperature Sensor with Switch Plate for Dual Sensor Wired Installation.	1
TS520W	Temperature Sensor with Switch Plate for Dual Sensor Wired Installation.	1
R80CJ-	Damper with Modulating Plug and Play Actuator, -inch Diameter. Controls Airflow to Sleeping Space. Cable included with damper,	1
R80CJ-	Damper with Modulating Plug and Play Actuator, -inch Diameter. Controls Airflow to Living Space. Cable included with damper,.	1

Comfort³⁶⁵

AOR Installation Diagram 202

Equipment: Gas/Electric, 1Heat/1Cool

Notes: Single Wired Temperature Sensor with WiFi Thermostat

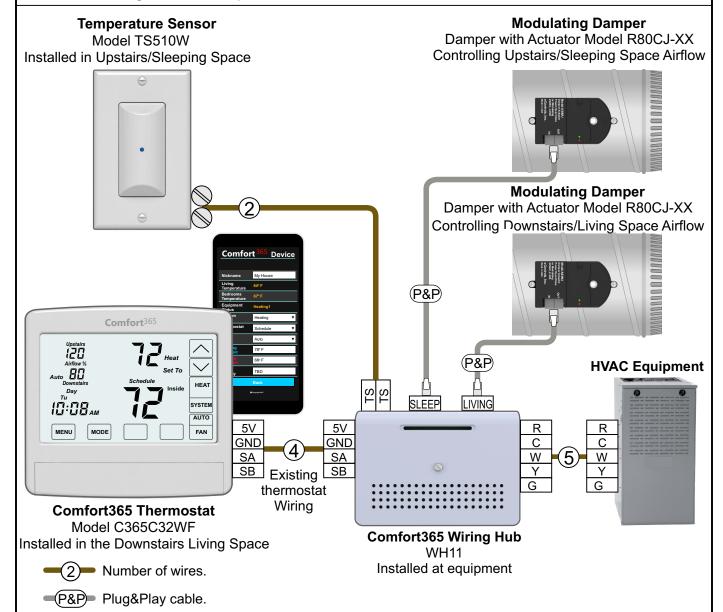

Part Number	Description	Quantity
C365C32WF	Comfort365 Programmable Communicating WiFi Thermostat with Airflow Control, Gas/Electric or Heat Pump equipment, 2Heat/2Cool.	1
WH11	Wiring Hub, Gas/Electric , 1Heat/1Cool.	1
TS510W	Temperature Sensor with Switch Plate for Single Sensor Wired Installation.	1
R80CJ-	Damper with Modulating Plug and Play Actuator, -inch Diameter. Controls Airflow to Sleeping Space. Cable included with damper,	1
R80CJ-	Damper with Modulating Plug and Play Actuator, -inch Diameter. Controls Airflow to Living Space. Cable included with damper.	1

Comfort³⁶⁵ **AOR Installation Diagram 203** Equipment: Gas/Electric, 1Heat/1Cool Notes: Single Wireless, Battery Powered Temperature Sensor **Modulating Damper** Wireless, Battery Powered Damper with Actuator Model R80CJ-XX **Temperature Sensor** Controlling Upstairs/Sleeping Space Airflow Model TS5WL Installed in Upstairs/Sleeping Space Comfort³⁶⁵ **Modulating Damper** Damper with Actuator Model R80CJ-XX Controlling Pownstairs/Living Space Airflow (P&P) eLink Plugin Radio Comfort³⁶⁵ Model ELR1 (P&P) **HVAC** Equipment SLEEP LIVING SYSTEM AUTO 5V 5V R R GND GND С С SA SA W W SB Existing SB Υ G G thermostat Wiring **Comfort365 Thermostat** Model C365C32 Comfort365 Wiring Hub Installed in the Downstairs Living Space WH11 Installed at equipment Number of wires. P&P Plug&Play cable.

Part Number	Description	Quantity
C365C32	Comfort365 Programmable Communicating Thermostat with Airflow Control, Gas/Electric or Heat Pump equipment, 3Heat/2Cool.	1
WH11	Wiring Hub, Gas/Electric , 1Heat/1Cool.	1
TS5WL	Wireless, Battery Powered, Temperature Sensor for Single or Dual Sensor Wireless Installation.	1
ELR1	eLink Radio Module for use with Wireless Temperature Sensor. Plugs into Wiring Hub.	1
R80CJ-	Damper with Modulating Plug and Play Actuator, -inch Diameter. Controls Airflow to Sleeping Space. Cable included with damper,	1
R80CJ-	Damper with Modulating Plug and Play Actuator, -inch Diameter. Controls Airflow to Living Space. Cable included with damper,.	1




AOR Installation Diagram 204

Equipment: na

Notes: Using Multiple Plug and Play Dampers to Define a Space

Modulating Damper


Damper with Actuator Model R80CJ-XX Controlling Upstairs/Sleeping Space Airflow

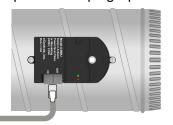

Modulating DamperS

(P&P)

DamperS with Actuator Model R80CJ-XX Controlling Downstairs/Living Space Airflow

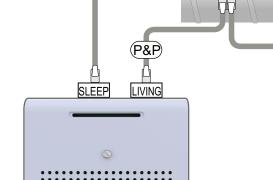

(P&P)

P&P Plug&Play cable.

(P&P)

Comfort365 Wiring Hub

WH11 Installed at equipment

Part Number	Description	Quantity
R80CJ-	Damper with Modulating Plug and Play Actuator, -inch Diameter. Controls Airflow to Sleeping Space. Cable included with damper,	1
R80CJ-	Damper with Modulating Plug and Play Actuator, -inch Diameter. Controls Airflow to Living Space. Cable included with damper,.	1
R80CJ-	Damper with Modulating Plug and Play Actuator, -inch Diameter. Controls Airflow to Living Space. Cable included with damper,.	1
R80CJ-	Damper with Modulating Plug and Play Actuator, -inch Diameter. Controls Airflow to Living Space. Cable included with damper,.	1