



Pro Series C33

Combination Primary and Backup Sump Pump System

Instruction Manual & Safety Warnings

PAIR OF PUMPS

Table of Contents

Important Safety Warnings and Instructions

Electrical precautions	1
Battery preparation	1
Battery precautions	1

Introduction

Items included in system	2
Additional items needed	2
System specifications	2

Installing the Pipe and Pump

Battery Instructions

System Connections

Connecting the backup pump	5
Installing the battery fluid sensor	5
Connecting the battery	6
Connecting the primary pump	6

Product Operation

Float switches	7
Controllers	7
1/8" weep holes	7

Understanding the Warning Lights and Alarms

Silencing the alarm during an emergency	7
Battery fluid low	7,8
Battery corroded or defective	8
Cleaning battery terminals	8
Replacing the battery	9
Not receiving AC power	10
Fuse alarm	10
Backup pump activated	10
Replacing the backup pump	11
Replacing the primary pump	12
Battery power level	13
Remote alarm	13

Testing the System

Testing the backup float switch	13
Testing the primary float switch	14

Maintenance Check List

Parts & Service Information

Technical support	14
-------------------	----

Replacement Parts Diagram & List

Troubleshooting Guide

Warranty



Replacement Parts List

PS -C33 Description

Controller for backup pump
Dual float switch with controller for AC pump
1/3 HP AC sump pump
PHCC 2400 backup pump
Battery box
PVC "Y" fitting
Battery cap with hole
Sump foot
Instructions
Battery fill bottle
Stainless steel screw, #10-24 x 1-1/2" *
45° PVC pipe fitting, 1-1/2" *
Pipe adapter for backup pump, 1-1/2" FTP x 1-1/2" slip *
Wire tie for float switch, 11" *
Stainless steel hose clamp, 2-1/2" diameter *
Check valve, 1-1/2" MPT x 1-1/2" SLIP *
No-hub coupling, 1-1/2" *

*Stock items available in plumbing department

Call 800-991-0466, option 3 to order parts.

Part No.

PHCC-2400-CON1
DFC1
S3033-GL
1011010
1113003
1120007
1125000
1143000
1806065
BF
1100021
1200008
1120009
1122000
1122002
1141001
1142000

