


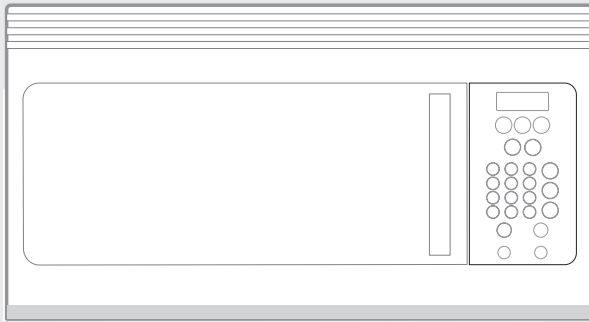

UNIVERSAL/MULTIFLEX

Factory Parts Catalog

Product No.	MWV150KBA	MWV150KWA
Market	North America	North America
Color	black	white
Volts	120	120
Watts	950	950
Wiring Diagram	316495070	316495070
Owner's Guide	316495058	316495058
Installation Instructions	316495064	316495064



Electrolux Major Appliances
North & Latin America
P.O. BOX 212378
AUGUSTA, GA 30917


Publication No.
5995541447
09/05/28
(EN/SERVICE/)
099

OVER-RANGE MICROWAVE

Model No.
MWV150K

Copyright © 2009 Electrolux Home Products, Inc.
All rights reserved.

OVEN, CABINET

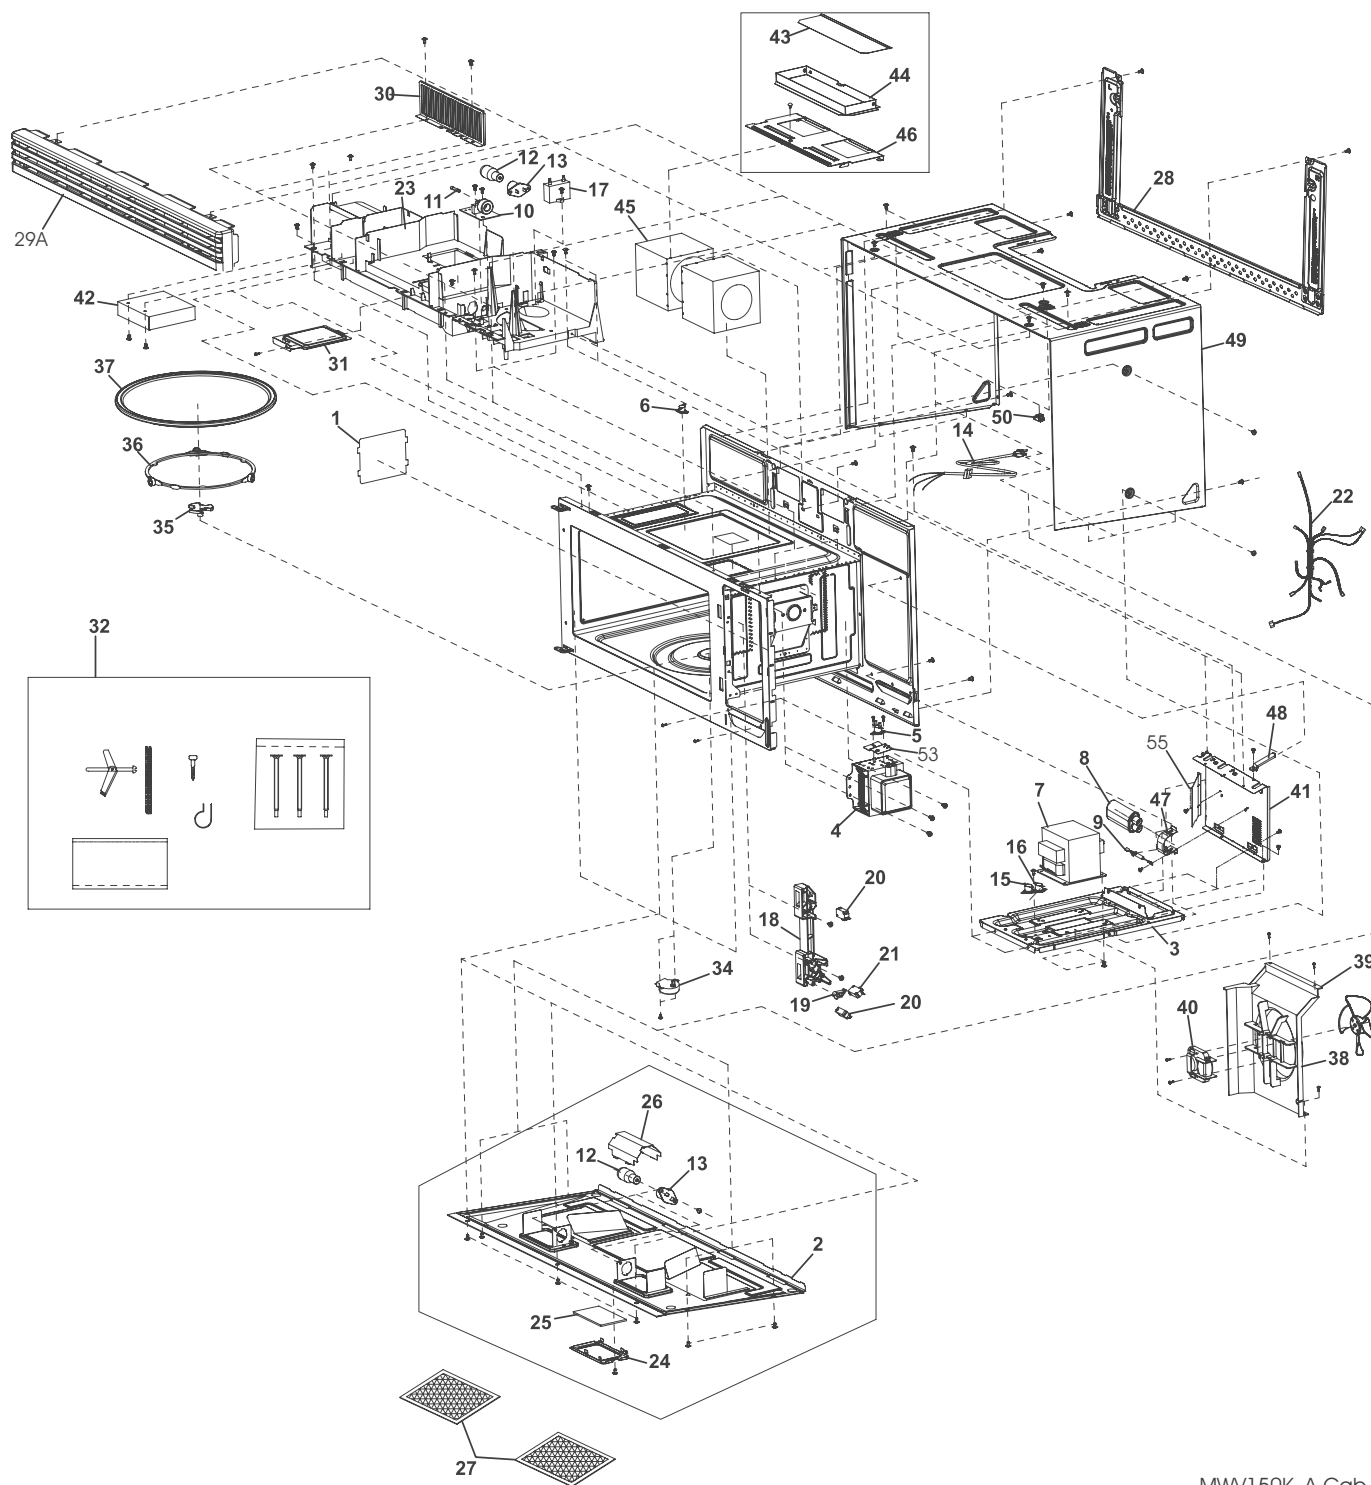


MWV150K_A-Cab

OVEN,CABINET

Model Index: **A** MWV150K (MWV150KBA)
B MWV150K (MWV150KWA)

POS. NO	PART NO.		DESCRIPTION
1	5304464061	A B	Cover, waveguide
2	5304472440	A B	Cover, unit base
3	5304464063	A B	Base, transformer, right side
4 #	5304472445	A B	Magnetron, high voltage
5 #	5304464073	A B	Thermostat, cutout, magnetron
6 #	5304464074	A B	Thermostat, cutout, oven cavity
7 #	5304472446	A B	Transformer, power, HV
8 #	5304464253	A B	Capacitor, high voltage
9 #	5304472472	A B	Diode, high voltage
10 #	5304472447	A B	Filter, noise, electronic
11 #	5304464087	A B	Fuse
12	5304464090	A B	Lamp
13 #	5304464091	A B	Lampholder, socket
14 #	5304464092	A B	Power Cord, electric
15 #	5304464093	A B	Thermostat, cutout, transformer
16 #	5304464094	A B	Thermostat, cutout, vent motor
17 #	5304464095	A B	Capacitor, start
18	5304464096	A B	Latch Hook
19 #	5304464097	A B	Switch, lever
20 #	5304464099	A B	Switch, interlock
21 #	5304464098	A B	Switch, monitor
22 #	5304472448	A B	Wiring Harness, main
23	5304464101	A B	Duct, air
24	5304464102	A B	Frame, lens holder
25	5304464103	A B	Lens, cooktop lamp, glass
26	5304464104	A B	Cover, lamp
27 #	5304464105	A B	Filter, grease, 5" X 7 1/2"
28	5304464255	A B	Plate, mounting, rear
29	5304472449	A -	Grille, exhaust, black
29	5304464136	- B	Grille, exhaust, white
30	5304464256	A B	Cover, control shield, right
31	5304464111	A B	Cover, lamp, oven cavity
32	5304464112	A B	Hardware Kit, installation
34 #	5304464113	A B	Motor, turntable
35	5304472450	A B	Coupler, turntable/motor
36	5304464115	A B	Support, turntable ring
37	5304472062	A B	Tray, turntable, glass
38	5304464117	A B	Duct, cooling fan
39 #	5304464257	A B	Fan Blade, cooling fan
40 #	5304464118	A B	Motor, cooling fan
41	5304472451	A B	Duct, hood intake, right side
42	5304472452	A B	Vent, air outlet
43	5304464119	A B	Damper, door
44	5304464120	A B	Frame, damper housing
45 #	5304464121	A B	Motor, hood/vent fan
46	5304472453	A B	Cover, vent motor
47	5304464123	A B	Retainer, capacitor strap
48	5304464124	A B	Spacer
49	5304472455	A -	Cabinet, outer casing, black
49	5304472460	- B	Cabinet, outer casing, white
50	5304464598	A B	Mounting Nut Kit
53	5304472439	A B	Bracket, thermostat
55	5304472454	A B	Vent, air, magnetron
*	5304472456	A -	Screw Kit, black
*	5304472461	- B	Screw Kit, white
*	5304464577	A B	Filter, charcoal, OPTIONAL ACCESSORY

CONTROL PANEL,DOOR,MISC.

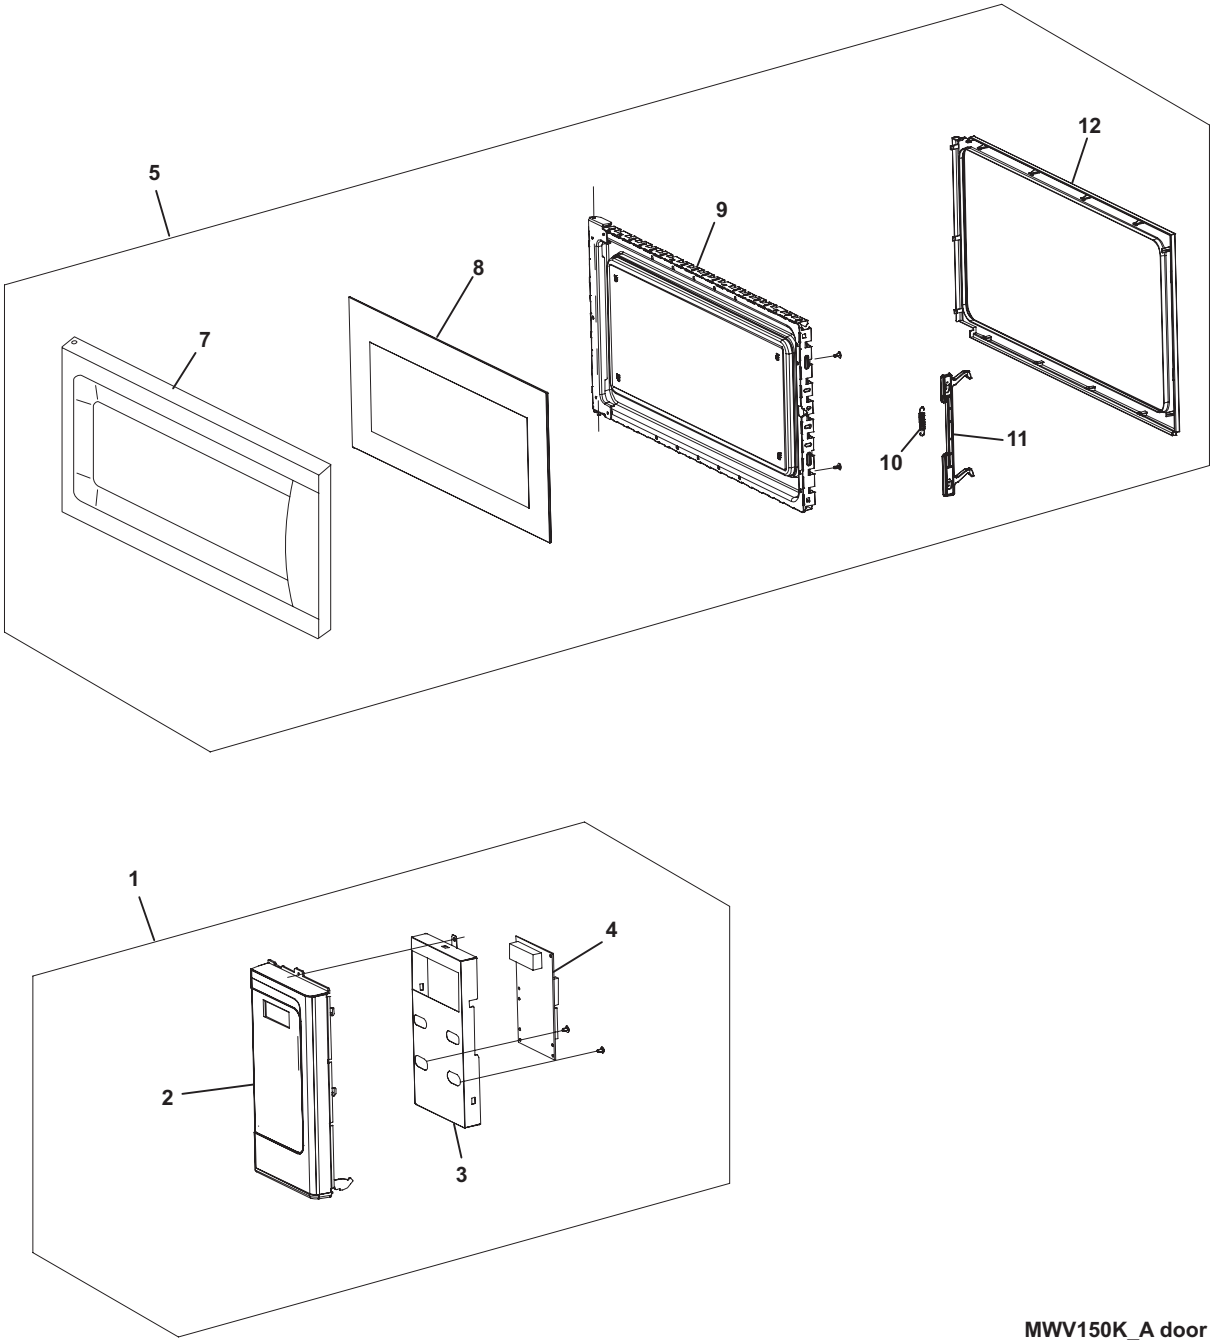

MWV150K_A door

CONTROL PANEL,DOOR,MISC.

Model Index: **A** MWV150K (MWV150KBA)
 B MWV150K (MWV150KWA)

POS. NO	PART NO.	DESCRIPTION	
1 #	5304472441	A -	Control Assembly, black
1 #	5304472457	- B	Control Assembly, white
2	5304472442	A -	Frame, control panel, black
2	5304472458	- B	Frame, control panel, white
3	5304464065	A B	Panel, control mount, bracket
4 #	5304472467	A B	Control Board, printed circuit
5	5304472468	A -	Door Assembly, black
5	5304472469	- B	Door Assembly, white
7	5304472470	A -	Panel, outer door, black
7	5304472471	- B	Panel, outer door, white
8	5304472443	A B	Panel, glass, black, outer door
9	5304472444	A -	Panel, inner door, black
9	5304472459	- B	Panel, inner door, white
10	5304464069	A B	Spring, door latch
11 #	5304464070	A B	Latch, door
12	5304464071	A B	Choke Cover, inner door

WIRING SCHEMATIC

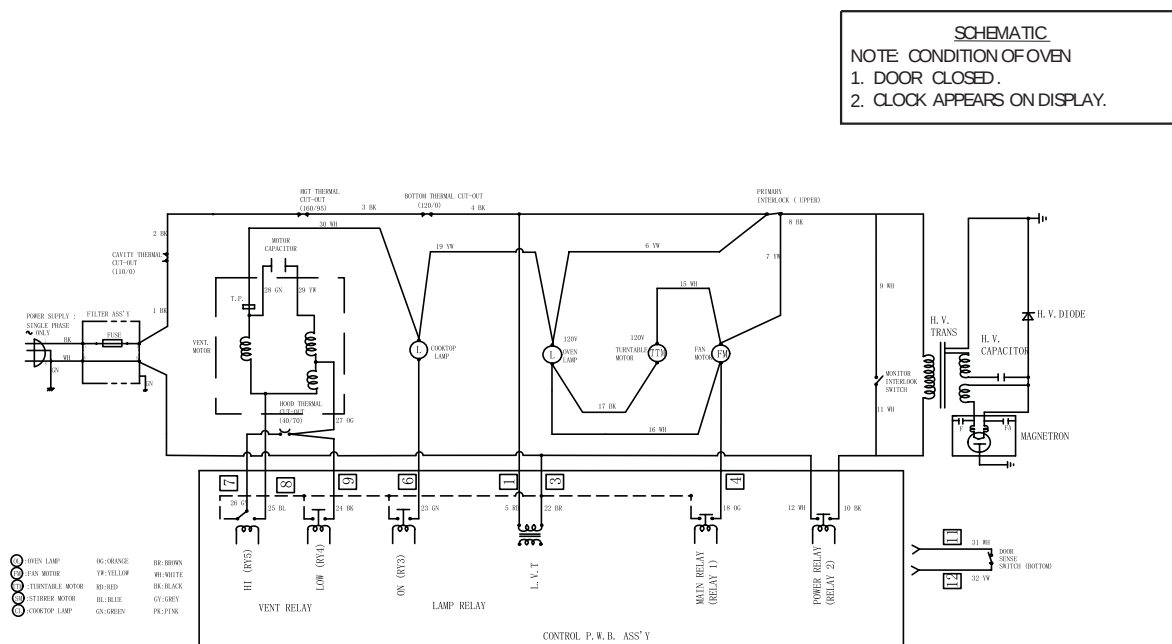


Figure O-1. Oven Schematic - OFF Condition

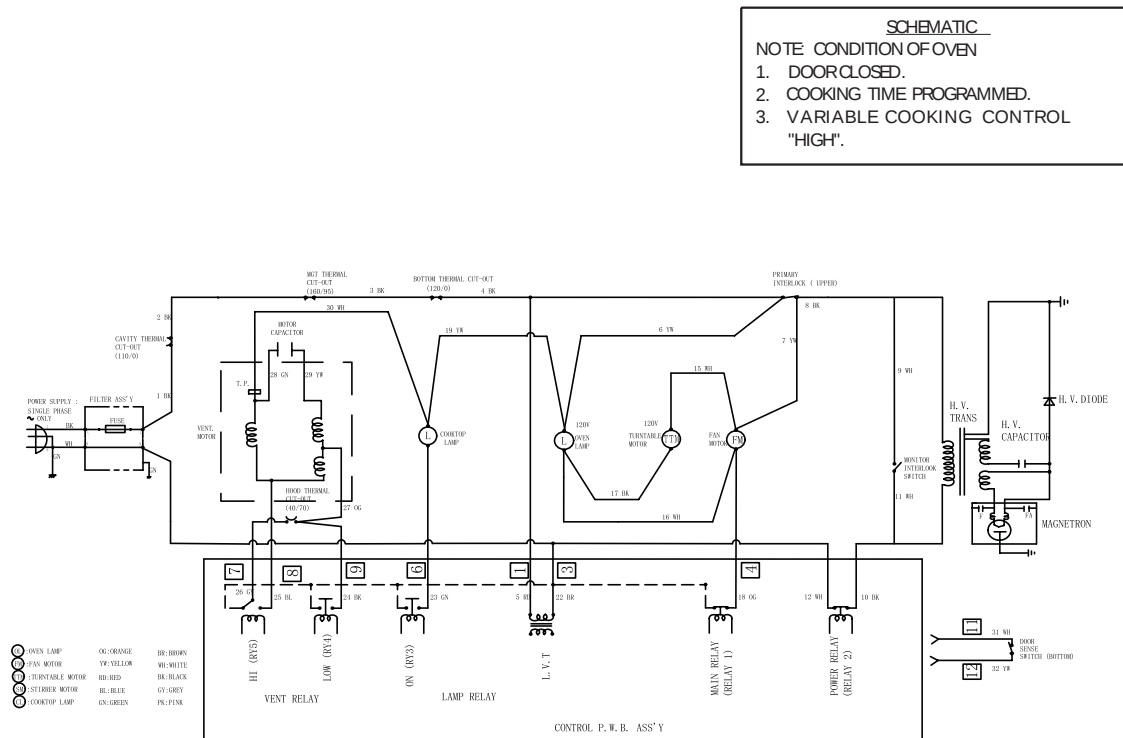


Figure O-2. Oven Schematic-Cooking Condition