

Standard Bore Flanged Ball Valves

Series 7150, 730S & 7300

3" , 4" & 6" (DN 80, 100 & 150)
Class 150 & 300

Installation, Maintenance and
Operating Instructions

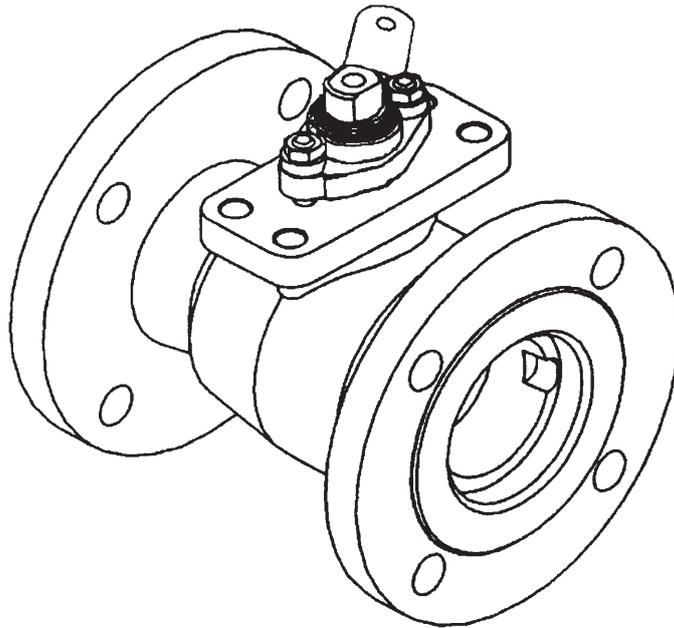


TABLE OF CONTENTS

1. GENERAL.....	3
2. INSTALLATION	3
3. MAINTENANCE	3
3.1 Disassembly.....	3
3.2 Assembly	4
4. ACTUATOR MOUNTING	5
5. SERVICE/SPARE PARTS	5

READ THESE INSTRUCTIONS FIRST!

These instructions provide information about safe handling and operation of the valve.
If you require additional assistance, please contact the manufacturer or manufacturer's representative.
Addresses and phone numbers are printed on the back cover.
See also www.metso.com/valves for the latest documentation.

SAVE THESE INSTRUCTIONS!

1. GENERAL

This instruction manual contains important information regarding the installation, operation and maintenance of the Jamesbury® 3", 4" & 6" (DN 80, 100 & 150) Class 150 & 300 Standard Bore Series 7150, 730S & 7300 Flanged Ball Valves. Please read these instructions carefully and save them for further reference.

WARNING:

FOR YOUR SAFETY, IT IS IMPORTANT THAT THE FOLLOWING PRECAUTIONS BE TAKEN PRIOR TO REMOVAL OF THE VALVE FROM THE LINE OR BEFORE ANY DISASSEMBLY:

1. WEAR ANY PROTECTIVE CLOTHING OR EQUIPMENT NORMALLY REQUIRED WHEN WORKING WITH THE FLUID INVOLVED.
2. DEPRESSURIZE THE LINE AND CYCLE THE VALVE AS FOLLOWS:
 - A. PLACE THE VALVE IN THE OPEN POSITION AND DRAIN THE LINE.
 - B. CYCLE THE VALVE TO RELIEVE RESIDUAL PRESSURE IN THE BODY CAVITY BEFORE REMOVAL FROM THE LINE.
 - C. AFTER REMOVAL AND BEFORE ANY DISASSEMBLY, CYCLE THE VALVE AGAIN SEVERAL TIMES.
3. SEAT AND BODY RATINGS - THE PRACTICAL AND SAFE USE OF THIS PRODUCT IS DETERMINED BY BOTH THE SEAT AND BODY RATINGS. READ THE NAME TAG AND CHECK BOTH RATINGS. THIS PRODUCT IS AVAILABLE WITH A VARIETY OF SEAT MATERIALS. SOME OF THE SEAT MATERIALS HAVE PRESSURE RATINGS THAT ARE LESS THAN THE BODY RATINGS. ALL OF THE BODY AND SEAT RATINGS ARE DEPENDENT ON VALVE TYPE AND SIZE, SEAT MATERIAL, AND TEMPERATURE. DO NOT EXCEED THESE RATINGS.

2. INSTALLATION

Refer to the **MAINTENANCE** Section for packing/v-ring set adjustment.

If there is weepage past the packing/v-ring set upon installation, it means the valve may have been subject to wide temperature variations in shipment. Leak-tight performance will be restored by a simple packing adjustment described in the **MAINTENANCE** Section.

Flow through this *Jamesbury* valve can be in either direction. It is recommended, however, that the valve be installed with the insert facing upstream.

IMPORTANT: The valve should be tightened between flanges using appropriate gaskets and fasteners for the service, in compliance with applicable piping codes and standards.

3. MAINTENANCE

Although Metso's *Jamesbury* valves are designed to work under severe conditions, proper preventative maintenance can significantly help to prevent unplanned downtime and in real terms reduce the total cost of ownership. Metso recommends inspecting valves at least every five (5) years. The inspection and maintenance frequency depends on the actual application and process condition.

Routine maintenance consists of tightening the bonnet stud nuts (**Item 18 in Figure 5**) periodically to compensate for stem seal wear.

Overhaul maintenance consists of replacing seats and seals. A standard repair kit consisting of these parts may be obtained through your Metso Distributor.

NOTE: Repair kits include thrust bearing (70), secondary stem seal (71), two seats (7), body gasket (65), packing/v-ring set (69), and spring (36).

3.1 Disassembly

Tools needed to disassemble *Jamesbury* valves such as the "insert field wrench" mentioned in step 5 and shown in (**Figure 6**), may be ordered as (MA0026426) for 3" & 4" (DN 80 & 100) Series 7000, and (MA0126468) for 6" (DN 150) Series 7000 from your local Metso Distributor.

NOTE: If complete disassembly becomes necessary, replacement of all seats and seals is recommended. Refer to the Repair Kit chart (**See Table 1**).

1. Follow the steps in the **WARNING** Section before performing any work on the valve.
2. Open the valve.
3. Remove the handle screw (35), holding the handle to the stem.
4. Remove the handle (31).




TABLE 1 – REPAIR KITS*

Seat Material	Valve Size				
	3" (DN 80) 7150/7300	4" (DN 100) 7150	4" (DN 100) 7300	6" (DN 150) 7150	6" (DN 150) 7300
PTFE	RKN-174 TTT	RKN-175TTT	RKN-176TTT	RKN-196TTT	RKN-197TTT
FILLED PTFE	RKN-174 MTT	RKN-175MTT	RKN-176MTT	RKN-196MTT	RKN-197MTT
PEEK	RKN-174 LGG	RKN-175LGG	RKN-176LGG	RKN-196LGG	RKN-197LGG
PFEP	RKN-174 FTT	RKN-175FTT	RKN-176FTT	RKN-196FTT	RKN-197FTT
PFA SEATS & SEALS	RKN-174 BPT	RKN-175BPT	RKN-176BPT	RKN-196BPT	RKN-197BPT
XTREME®	RKN-174 XTZ	RKN-175XTZ	RKN-176XTZ	RKN-196XTZ	RKN-197XTZ
* For grounded valves, grounding washers listed below are also needed when ordering. (One per valve)					
	3" (DN 80)		4" (DN 100)		6" (DN 150)
Class 150	004 0847 60		004 0847 60		004 0848 60
Class 300	004 0847 60		004 0848 60		004 0849 60

5. The insert design requires that the insert be unthreaded in a counterclockwise motion using the following method using the insert field wrench: Assemble the field wrench as follows, (**refer to Figure 6**):
 - A. Place driver (A) into the insert slots.
 - B. Put the plate (C) on top of the driver (A).
 - C. Place the studs (E) through the plate (C) and flange holes. Thread the nuts (F) onto the stud below the flange.
 - D. On the top side of the plate (C) put a flat washer (G), die spring (H), flat washer (G), and nut (F). Tighten to slightly compress springs.
6. Place a pipe or rod through the driver (A) and loosen the insert by turning counterclockwise.
7. Remove the tool and lift out the insert.
8. Place the valve in the vertical position with the insert end up.
9. Lift out the body gasket (65), seat (7), and ball (3). Rotate the stem so that the ball is in the closed position for removal. The spring (36), which is between the bottom of the stem (5) and ball (3), may fall out at this time. If the spring does fall out with the ball, remove it from the stem to prevent it from being lost.
10. Carefully remove the bottom seat (7) out of the body, **BEING CAREFUL NOT TO SCRATCH THE BODY SEALING SURFACE BEHIND THE SEAT.**
11. Remove the retaining ring (34), spring (33), and the indicator stop (32).
12. Remove the bonnet stud nuts (18), stop bushing (37), compression plate (9).
13. Press the stem (5) from the top into the valve body and remove it through the insert end of the body.
14. Remove and discard the thrust bearings (70), and secondary stem seal (71), **BEING CAREFUL NOT TO SCRATCH ANY SEALING SURFACES IN THE BODY.**
15. Remove the packing/v-ring set (69), **BEING CAREFUL NOT TO SCRATCH ANY SEALING SURFACE INSIDE THE STEM BORE.**
16. If the valve is to be grounded, clean packing bore with crocus cloth or equivalent, to a bare metal surface.
1. Clean all valve components.
2. Inspect all components for damage before reassembling the valve. Look for damage to the seating areas, stem, body, and body cap, and look for wear in the bearing areas. Replace any damaged parts.
3. Carefully clean and polish the ball sealing surface. It should be free of all scratches and grooves.
4. If the ball is slightly damaged, it may be possible to smooth the sealing surface with crocus cloth or equivalent. If deep scratches are present, replace the ball.
5. Slide one valve seat (7) sideways into the body (1) to below the stem bore, and tilt it into place so that the proper surface (**see Figure 4**) will be adjacent to the ball (3), being careful not to cut or scratch the seat.
6. From the inside, insert the thrust bearing (70), secondary stem seal (71), and the second of two thrust bearings into the stem bore.
7. Insert the stem (5) through the insert end of the body (1), being careful not to scratch the thrust bearing, and press it gently up into the stem bore until resistance is felt from the thrust bearing. Holding the stem in place from the bottom, insert the packing/v-ring set (69) (**See Figure 3 for proper v-ring orientation**), over the stem (5). If valve is to be statically grounded, remove one middle v-ring, replace the header ring and place grounding washer on top.
8. Place compression Plate (9) over studs (14). Place a stop bushing (37) and a bonnet stud nut (18) on each bonnet stud and tighten nuts alternately so that the compression plate (9) remains parallel with the body bonnet. Tighten down the nuts until the packing/v-ring set is fully seated, then tighten the nuts an additional 1/4 turn.
9. Screw the insert (2) into the body until it is fully seated, and then mark its position as shown in (**Figure 1**). Counting the number of turns, remove the insert.
10. Place the valve in a vertical position, insert end up, on a clean surface such as a folded rag or a piece of cardboard. Place the spring (36) in the hole in the bottom of the stem (5). Insert the ball (3) rotating it onto the stem (5) in the closed position, being careful not to dislodge the spring from the stem. If necessary, turn the stem blade to align with the ball slot. Make certain that the stem blade is in the middle of the ball slot, i.e., equal distance from the ends of the slot. Rotate the ball if necessary. (**See Figure 4.**)
11. Place the second seat (7) into the insert (2) with the proper surface adjacent to the ball.
12. Insert the body gasket (65) into the body, and gently press it into the groove.
13. Apply a lubricant compatible with the flowing medium to the insert threads and screw the insert (2) into the body.

3.2 Assembly

It is advisable to replace seats and seals if complete disassembly and reassembly become necessary. Refer to the Repair Kit chart (**Table 1**). A good lubricant compatible with the flow medium **MUST** be applied to the insert threads to prevent galling during assembly.

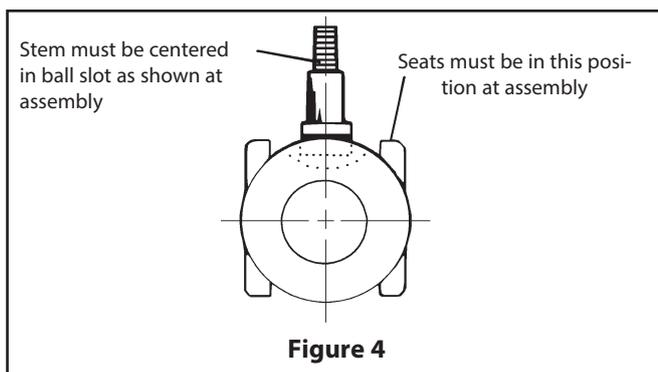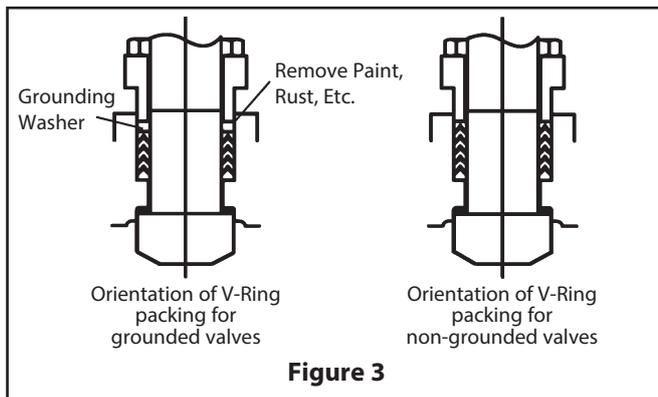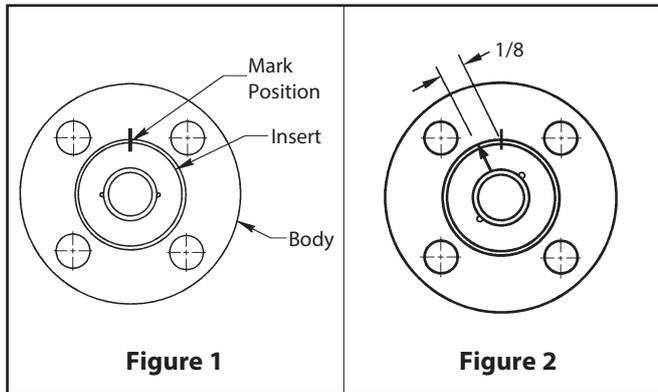

The tightening of the insert should be done using the insert field wrench. The insert must be tightened the same number of turns as in Step 9, insuring that the marks are no more than 1/8" (3.18 mm) apart, as shown in (Figure 2).

14. Place the indicator stop (32) over the stem (5) and down flush with the compression plate (9).
15. Place the spring (33) over the stem (5) on top of the indicator stop (32). Secure the spring and indicator stop by placing the retaining ring (34) over the stem (5) until it is flush with the shoulder on the stem.
16. Place the handle (31) on the stem and fasten with the handle screw (35) securely.

17. Cycle the valve slowly with a gentle back and forth motion to build gradually to the full quarter turn. By cycling slowly, the seat lips will seat against the ball. Take care to avoid scratching the ball O.D.

18. If the valve is to be grounded, test as follows:

- A. Using an ohmmeter accurate to $\pm 10\%$, check continuity between top of the stem and body base metal. Also check between the ball and the body base metal. Take care to avoid scratching the ball O.D.
- B. Resistance in either the open, half open, or closed position should not exceed 10 ohms using a source not exceeding 12 volts.

4. ACTUATOR MOUNTING

When these valves are equipped with an actuator, and the actuator is removed to service the valve, proper alignment of the actuator driver and valve stem is essential when the actuator is remounted. In case of valves and actuators connected with a split no-play (clamped) coupling, tighten the coupling bolts before final tightening of the valve bracket bolts.

5. SERVICE/SPARE PARTS


We recommend that valves be directed to our service centers for maintenance. The service centers are equipped to provide rapid turn-around at a reasonable cost and offer new valve warranty with all reconditioned valves.

NOTE: When sending goods to the service center for repair, do not disassemble them. Clean the valve carefully and flush the valve internals. Include the material safety datasheet(s) (MSDS) for all media flowing through the valve. Valves sent to the service center without MSDS datasheet(s) will not be accepted.

For further information on spare parts and service or assistance visit our web-site at www.metso.com/valves.


NOTE: When ordering spare parts, always include the following information:

- a. Valve catalog code from identification plate,
- b. If the valve is serialized – the serial number (from identification plate)
- c. From **Figure 5**, the ballooned part number, part name and quantity required.

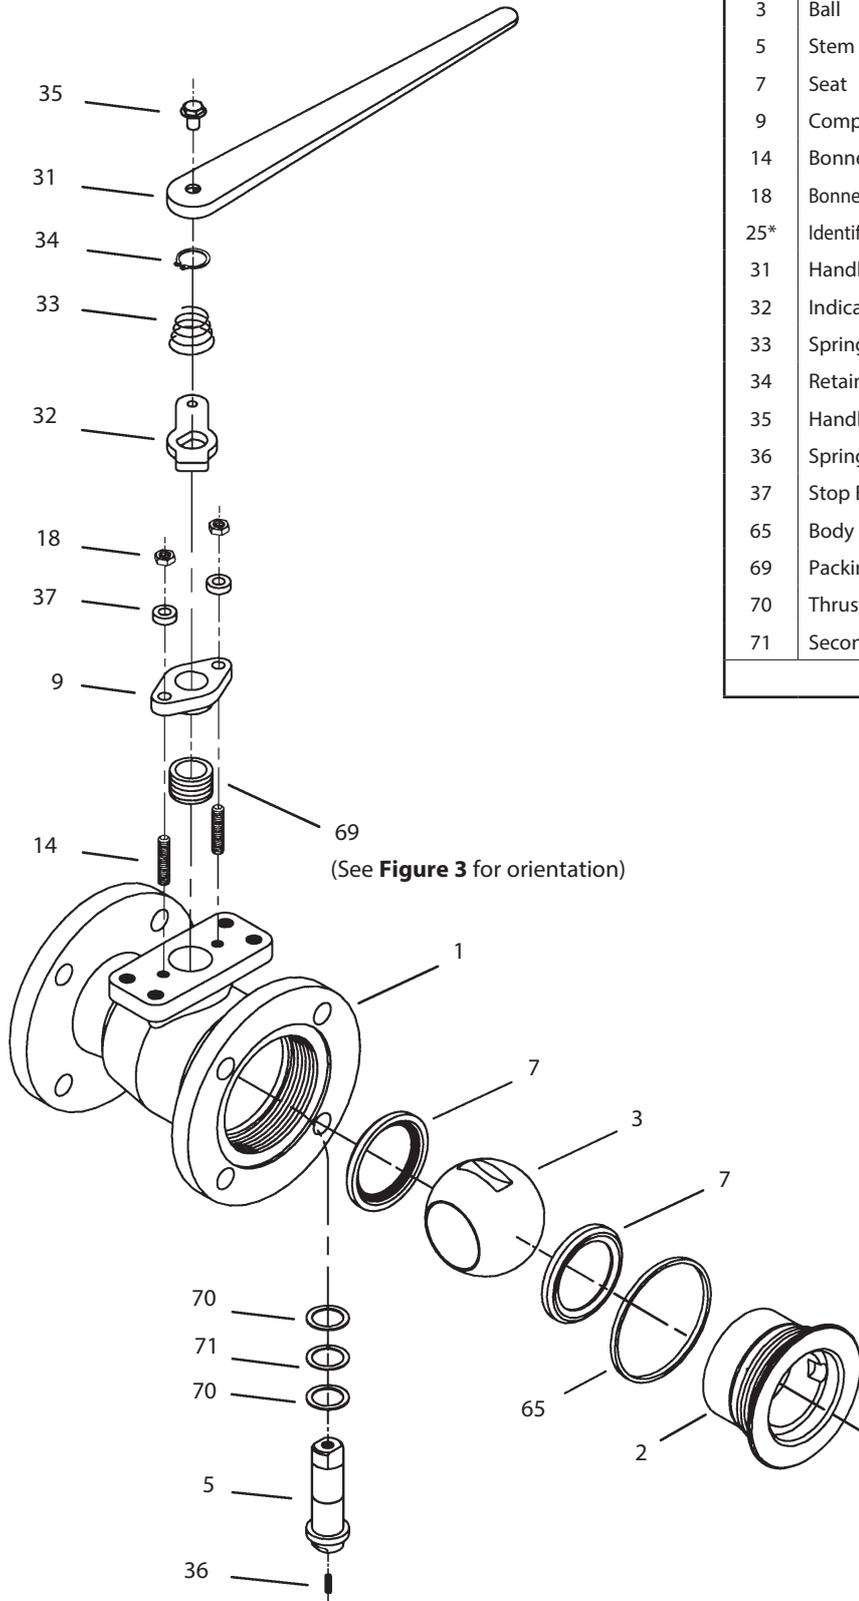

VALVE PARTS		
ITEM	PART NAME	QTY.
1	Body	1
2	Insert	1
3	Ball	1
5	Stem	1
7	Seat	2
9	Compression Plate	1
14	Bonnet Stud	2
18	Bonnet Stud Nut	2
25*	Identification Tag	1
31	Handle	1
32	Indicator Stop	1
33	Spring	1
34	Retaining Ring	1
35	Handle Screw	1
36	Spring	1
37	Stop Bushing	2
65	Body Gasket	1
69	Packing/V-Ring Set	1
70	Thrust Bearing	2
71	Secondary Stem Seal	1
* Not Shown		

Figure 5

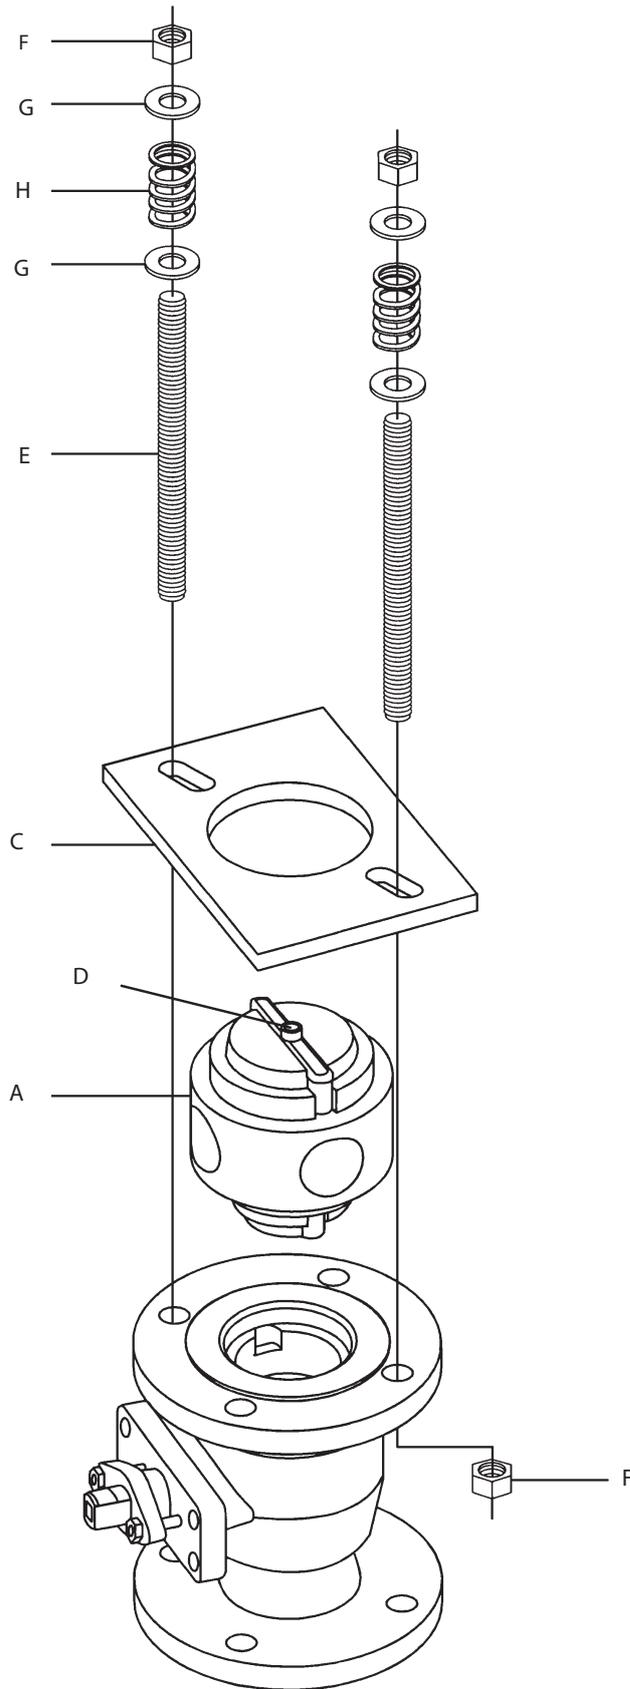

INSERT FIELD WRENCH

PARTS LIST

3" & 4" (DN 80 & 100) =

Kit# 40-044-0154-00,

6" (DN 150) =

Kit# 40-044-0155-500

ITEM	PART NAME	QTY
A	Driver	1
C	Plate	1
D	Socket-Head Cap Screw	2
E	Threaded Rod	2
F	Hex Nut	4
G	Flat Washer	4
H	Die Spring	2

Figure 6

Subject to change without prior notice.

Metso Flow Control Inc.

Europe, Vanha Porvoontie 229, P.O. Box 304, FI-01301 Vantaa, Finland. Tel. +358 20 483 150. Fax +358 20 483 151

North America, 44 Bowditch Drive, P.O. Box 8044, Shrewsbury, M A 01545, USA. Tel. +1 508 852 0200. Fax +1 508 852 8172

South America, Av. Independência, 2500-Iporanga, 18087-101, Sorocaba-São Paulo, Brazil. Tel. +55 15 2102 9700. Fax +55 15 2102 9748

Asia Pacific, 238B Thomson Road, #17-01 Novena Square Tower B, Singapore 307685. Tel. +65 6511 1011. Fax +65 6250 0830

China, 11/F, China Youth Plaza, No.19 North Rd of East 3rd Ring Rd, Chaoyang District, Beijing 100020, China. Tel. +86 10 6566 6600. Fax +86 10 6566 2583

Middle East, Roundabout 8, Unit AB-07, P.O. Box 17175, Jebel Ali Freezone, Dubai, United Arab Emirates. Tel. +971 4 883 6974. Fax +971 4 883 6836

www.metso.com/valves

