

# INSTALLATION, OPERATION, & MAINTENANCE **MANUAL**

BFMM PVB4A 1-2012



1/2" - 2"

**Pressure Vacuum Breaker (PVB) Backflow Preventer**

Model PVB4A



# TABLE OF CONTENTS

## Pressure Type Vacuum Breaker 1/2" – 2"

| Section                           | Page |
|-----------------------------------|------|
| I Description and Operation ..... | 3    |
| II Installation .....             | 3    |
| III Trouble Shooting Guide .....  | 4    |
| IV Maintenance Instructions ..... | 5    |
| V Testing Procedures .....        | 6-7  |

## Parts List

|                             |      |
|-----------------------------|------|
| Parts List (1/2"- 2") ..... | 8-10 |
|-----------------------------|------|

## Repair Kits

|                              |    |
|------------------------------|----|
| Repair Kits (1/2"- 2") ..... | 11 |
|------------------------------|----|

# PRESSURE TYPE VACUUM BREAKER 1/2" – 2"

## I. DESCRIPTION AND OPERATION

The Apollo PVB4A Series Pressure Type Vacuum Breaker consists of a replaceable check valve cartridge and a unique atmospheric vent bonnet/float assembly located between two resilient seated shut-off valves. The modular design allows for unprecedented ease of inspection and maintenance.

During normal flow conditions, the check valve remains open and the float seals on the bonnet assembly. A minimum supply pressure of 10 psig is normally required to fully shut the float. As the line pressure falls to 1 psig, a spring-loaded atmospheric vent valve opens, breaking the vacuum and thereby preventing back-siphonage. In the event of exposure to short-term freezing temperatures, a spring-loaded relief valve in the float protects the PVB body and internal components from damage. As the temperature increases above freezing, the relief valve automatically reseats. During normal operating conditions, the relief valve will not discharge.

*NOTE: The freeze resistant feature is for a short term dip in temperature. The PVB should be winterized for extended periods below freezing.*

## II. INSTALLATION


Pressure vacuum breaker assembly's critical level (CL is marked in raised lettering on the body of the PVB) should be installed at least 12 inches above the highest piping or outlet downstream of the device and with the supply line connected to the bottom of the device. Install the device in an accessible location to facilitate periodic field-testing and any required maintenance. Contact local water authorities for installation/service requirements.

Flush upstream piping thoroughly to remove foreign matter prior to installation. Use pipe dope sparingly on external threads only. When initially pressurizing the device, some spillage of water from the air inlet may occur.


To winterize the valve:

1. Secure the water source at a location that will not freeze.
2. Open #1 and #2 test cocks to drain the PVB.
3. Place the inlet and outlet isolation ball valves in the halfway open/shut position.
4. If possible, blow the lines clear with pressurized air.

**Figure 1**  
(FLOWING CONDITION)

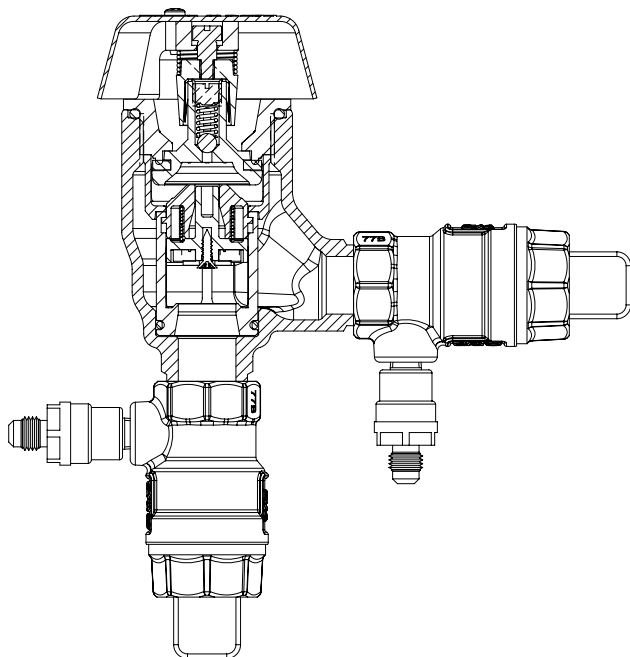

**Figure 2**  
(NO FLOW CONDITION)

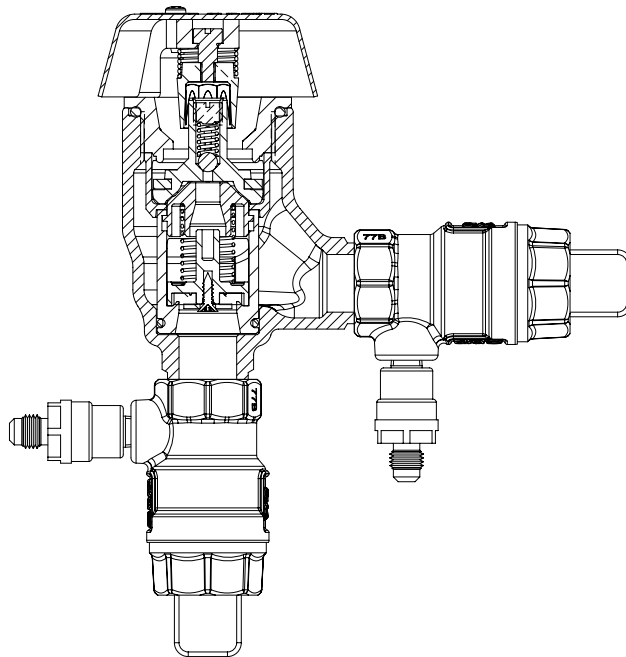

## III. TROUBLE SHOOTING

| SYMPTOM                                                      | CAUSE                                                                                                                     | CORRECTIVE ACTION                                                                                                                                                               |
|--------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1. Air inlet fails to open or opens below 1 psig.            | <ul style="list-style-type: none"> <li>a. Float not moving freely.</li> <li>b. Float disc sticking to seat.</li> </ul>    | <ul style="list-style-type: none"> <li>a. Inspect for fouling debris or deposits.</li> <li>b. Clean float seat area on bonnet and replace float disc/turn disc over.</li> </ul> |
| 2. Air inlet fails to close.                                 | <ul style="list-style-type: none"> <li>a. Float not moving freely.</li> <li>b. Float disc fouled with debris.</li> </ul>  | <ul style="list-style-type: none"> <li>a. Inspect for fouling debris or deposits.</li> <li>b. Clean float seat area on bonnet and remove debris.</li> </ul>                     |
| 3. Check valve fails to hold 1 psig.                         | <ul style="list-style-type: none"> <li>a. Check valve fouled with debris.</li> <li>b. Check valve seat damage.</li> </ul> | <ul style="list-style-type: none"> <li>a. Remove, clean, or replace check valve.</li> <li>b. Replace seat</li> </ul>                                                            |
| 4. Water continues to flow from test cock #2 during test #2. | <ul style="list-style-type: none"> <li>a. #1 shut-off valve not completely closed</li> </ul>                              | <ul style="list-style-type: none"> <li>a. Close #1 shut-off valve.</li> </ul>                                                                                                   |

## IV. MAINTENANCE INSTRUCTIONS 1/2" – 2"

### A. Disassembly

1. Close #2 shut-off valve, then close #1 shut-off valve.
2. Bleed pressure from device by opening test cocks #1 and #2.
3. Remove the air inlet canopy by loosening the two screws, rotating the canopy to the left, and lifting up.
4. Unscrew and remove the bonnet and float assembly. **DO NOT USE CANOPY TO UNSCREW BONNET! DAMAGE TO THE CANOPY MAY OCCUR.**
5. Remove float cage.
6. Push down and turn the spring retainer 90° to remove. Remove the spring. Remove the poppet from the check seat.

**CAUTION: Do not use pliers or other tools, which may damage or scratch the plastic stem.**

7. Holding the poppet assembly in one hand, remove screw and retaining washer.
8. Remove the seat disc.
9. All parts should be carefully inspected for any damage or excessive wear and thoroughly rinsed in clean water prior to reassembly. Replace worn parts as necessary.
10. Normally, the check seat need not be removed. If removal is required, rock it back and forth while pulling outward.

### B. Assembly

1. If the check seat was removed, install the new o-ring and lubricate with Apollo supplied lubricant, DOW 111, or equal. Line up the seat with the bore and push it firmly into place.
2. Install new disc in poppet and secure with washer and screw.
3. Place and center the poppet assembly in the check seat.
4. Install the spring onto the poppet, ensure that it is centered around the raised spring pad.
5. Install the spring retainer onto the spring by pushing down into the grooves of the check seat and turning 90°. Ensure spring retainer pops up about .1" and locks into the lugs. **CAUTION: Ensure the spring retainer orientation matches that in the parts list drawing or the device's flow will be significantly restricted.**
6. Install float cage and float. See drawing for correct orientation.
7. Apply a thin coat of Apollo supplied lubricant, DOW 111 or equal onto o-ring, screw bonnet into body.
8. Test device to insure proper installation.
9. Install air inlet canopy.

## V. TESTING PROCEDURES

**Equipment Required:** Differential Pressure Test Kits 40-200-TKU or 40-200 TK5U.

**NOTE:** *These procedures may or may not be approved in all jurisdictions. Consult your local water purveyor for acceptable test procedures.*

### Test Setup

1. Obtain permission to shut off the water supply.
2. Determine the direction of flow.
3. Identify and “blow out” test cocks and install appropriate adapters (if necessary).
4. All test kit valves are closed.

**IMPORTANT:** THE TEST KIT AND HOSE MUST BE HELD AT THE SAME LEVEL AS THE PVB DURING TESTS 1 AND 2.

#### TEST NO. 1

**DOES THE AIR INLET VALVE OPEN WHEN THE PRESSURE IN THE BODY IS AT LEAST 1 PSI ABOVE ATMOSPHERIC PRESSURE? IS THE AIR INLET VALVE FULLY OPEN WHEN WATER DRAINS FROM THE BODY?**

1. Remove air inlet valve canopy.
2. Connect a hose between test cock #2 and the high side connection on the test kit. Open test cock #2.
3. Bleed the high side by opening bleed high valve (high and bypass valves on a 3-valve test kit). Close the bleed high valve (high valve on 3-valve test kit).
4. Close #2 shut off valve, and then close #1 shut off valve.
5. **SLOWLY** open the bleed high valve (high valve on 3-valve test kit) no more than 1/4 turn, dropping the pressure slowly. Record pressure reading when the air inlet valve opens. It should be 1PSI or higher. If the air inlet valve does not open go to step #8.
6. Fully open the bleed high valve (high valve on 3-valve test kit). Check if the air inlet valve is fully open. Close the bleed high valve (high valve on a 3-valve test kit).
7. Close test cock #2. Disconnect the high hose from test cock #2. Open shut off valve #1. Proceed to Test #2.
8. The #1 shut off valve is leaking. Open and close shut off valve #1 to attempt a better seal. Repeat step #6. If step #6 cannot be passed go to step #9.
9. **SLOWLY** open test cock #1 until the gauge reading starts dropping. Record the pressure reading when the air inlet valve opens. (It should be 1 PSI or higher.) Return to step #7. If test cock #1 is fully open and the air inlet valve has not opened, shut off valve #1 must be repaired or replaced.

#### TEST NO. 2

**DOES THE CHECK VALVE SEAL IN THE DIRECTION OF FLOW WHEN THE INLET PRESSURE IS 1 PSI ABOVE ATMOSPHERIC PRESSURE? – PRESSURE TIGHT #1 SHUT-OFF VALVE**

1. Connect high side hose to test cock #1. Open test cock #1.
2. Bleed the high side by opening the bleed high valve (high valve on a 3-valve test kit). Close the bleed high valve (high valve on a 3-valve test kit).
3. Close shut off valve #1 then open test cock #2.
4. Record the gauge reading when water stops draining from test cock #2. It should be 1 PSI or higher.
5. Close all test cocks. Open both shut off valves. Remove all test equipment. Replace air inlet valve canopy. Drain test kit.


## V. TESTING PROCEDURES (continued)

### TEST NO. 3


#### LEAKY #1 SHUT-OFF VALVE

1. Connect a bleed-off valve assembly (not included with test kit) to test cock #1.
2. Connect high side hose to the bleed-off valve. Open test cock #1.
3. Bleed the high side by opening the bleed high valve (high valve on a 3-valve test kit). Close the bleed high valve (high valve on a 3-valve test kit).
4. Close shut off valve #1, then open test cock #2.
5. Slowly open the bleed-off valve at test cock #1 until the water flow stops draining from test cock #2. Record the gauge reading. (It should be 1 PSI or higher.) If the flow from test cock #2 cannot be stopped by opening the bleed-off valve, shut off valve #1 must be repaired or replaced.
6. Close all test cocks. Open both shut off valves. Remove all test equipment. Replace air inlet valve canopy. Drain test kit.

**Figure 3**

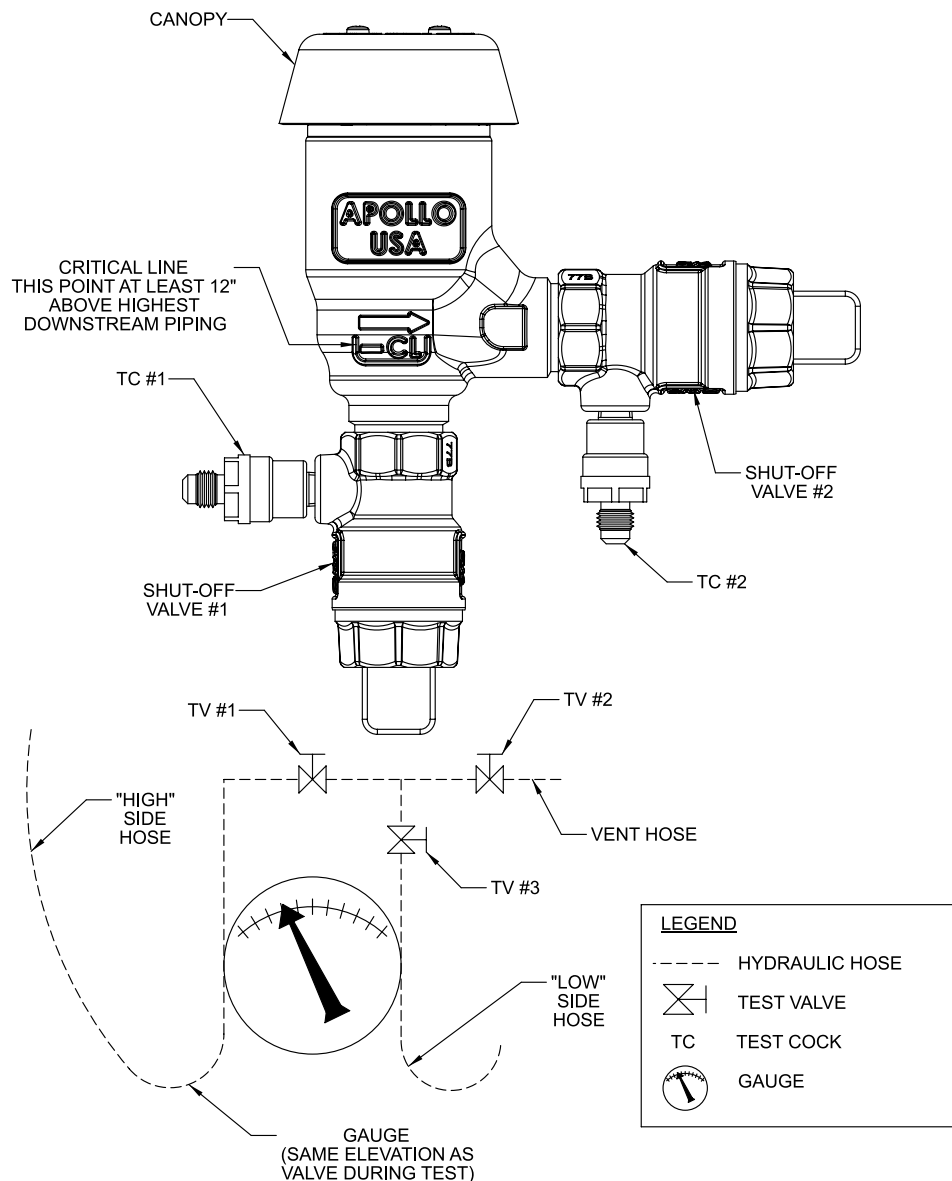

## PARTS LIST (1/2" - 2")

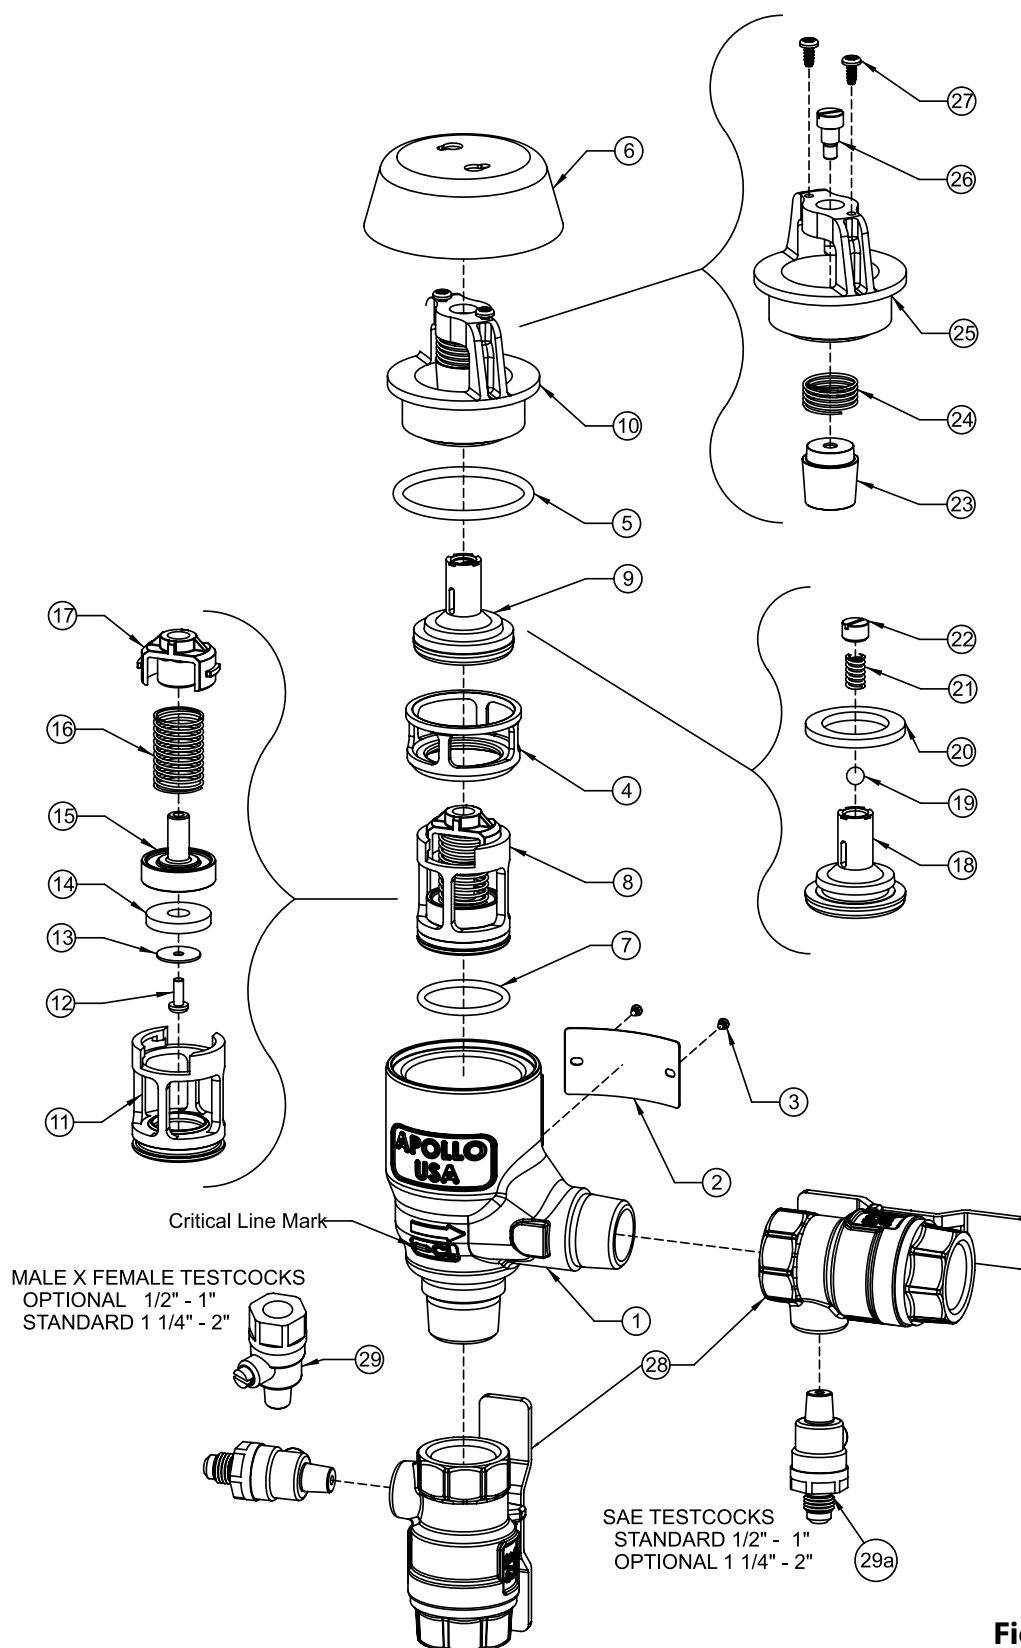

## PVB4A Parts List

| Item # | Description                  | Qty. | Part Number     |      |           |        |           |           |
|--------|------------------------------|------|-----------------|------|-----------|--------|-----------|-----------|
|        |                              |      | 1/2"            | 3/4" | 1"        | 1-1/4" | 1-1/2"    | 2"        |
| 1      | Body                         | 1    | Consult Factory |      |           |        |           |           |
| 2      | Label Plate                  | 1    | Consult Factory |      |           |        |           |           |
| 3      | Label Plate Tacks            | 2    | I-2614-00       |      |           |        |           |           |
| 4      | Float Cage                   | 1    | F-3844-00       |      | F-3840-00 |        | F-3870-00 | F-3873-00 |
| 5      | Bonnet O-Ring                | 1    | D-4812-00       |      | D-4883-00 |        | D-4887-00 | D-4858-00 |
| 6      | Canopy                       | 1    | F-3842-00       |      | F-3838-00 |        | F-3868-00 | F-3871-00 |
| 7      | Check Module O-Ring          | 1    | D-4880-00       |      | D-4744-00 |        | D-4882-00 | D-4884-00 |
| 8      | Check Mod S-Assy (see below) | 1    | W-9075-05       |      | W-9003-05 |        | W-9074-05 | W-9159-05 |
| 9      | Float FR S-Assy (see below)  | 1    | W-9101-05       |      | W-9096-05 |        | W-9178-05 | W-9181-05 |
| 10     | Bonnet S-Assy (see below)    | 1    | W-9099-05       |      | W-9094-05 |        | W-9176-05 | W-9179-05 |

Individual parts are only available for bulk sales. Please refer to the appropriate repair kits on page 11.

## Check Module Sub-Assembly Parts List

| Item # | Description           | Qty. | Part Number |      |           |        |           |           |
|--------|-----------------------|------|-------------|------|-----------|--------|-----------|-----------|
|        |                       |      | 1/2"        | 3/4" | 1"        | 1-1/4" | 1-1/2"    | 2"        |
| 11     | Check Seat            | 1    | L-7815-00   |      | L-7727-00 |        | L-7813-00 | L-7979-00 |
| 12     | Screw                 | 1    | B-3279-00   |      |           |        | B-1750-00 |           |
| 13     | Disc Retaining Washer | 1    | E-2372-00   |      | E-2841-00 |        | E-2933-00 | E-2860-00 |
| 14     | Seat Disc             | 1    | D-4771-00   |      | D-4743-00 |        | D-4770-00 | D-4853-00 |
| 15     | Poppet                | 1    | K-4491-00   |      | K-4471-00 |        | K-4483-00 | K-4511-00 |
| 16     | Spring                | 1    | A-2505-00   |      | A-2503-00 |        | A-2510-00 | A-2511-00 |
| 17     | Spring Retainer       | 1    | L-7814-00   |      | L-7726-00 |        | L-7812-00 | L-7980-00 |

Individual parts are only available for bulk sales. Please refer to the appropriate repair kits on page 11.

## Float, Freeze Resistant Sub-Assembly Parts List

| Item # | Description     | Qty. | Part Number |      |           |        |           |           |
|--------|-----------------|------|-------------|------|-----------|--------|-----------|-----------|
|        |                 |      | 1/2"        | 3/4" | 1"        | 1-1/4" | 1-1/2"    | 2"        |
| 18     | Float           | 1    | K-4508-00   |      | K-4496-00 |        | K-4516-00 | K-4518-00 |
| 19     | Ball            | 1    | I-6183-00   |      |           |        |           |           |
| 20     | Seal            | 1    | D-4811-00   |      | D-4784-00 |        | D-4859-00 | D-4860-00 |
| 21     | Spring          | 1    | A-1968-00   |      |           |        |           |           |
| 22     | Spring Retainer | 1    | B-3214-00   |      |           |        |           |           |

Individual parts are only available for bulk sales. Please refer to the appropriate repair kits on page 11.

## Bonnet Sub-Assembly Parts List

| Item # | Description       | Qty. | Part Number |      |           |           |        |           |
|--------|-------------------|------|-------------|------|-----------|-----------|--------|-----------|
|        |                   |      | 1/2"        | 3/4" | 1"        | 1-1/4"    | 1-1/2" | 2"        |
| 23     | Float Guide       | 1    | K-4494-00   |      |           |           |        |           |
| 24     | Float Spring      | 1    | A-2491-00   |      | A-2489-00 | A-2501-00 |        | A-2502-00 |
| 25     | Valve Bonnet      | 1    | F-3843-00   |      | F-3839-00 | F-3869-00 |        | F-3872-00 |
| 26     | Float Guide Screw | 1    | B-3213-00   |      |           | B-3281-00 |        |           |
| 27     | Canopy Screws     | 2    | B-3232-00   |      |           |           |        |           |

Individual parts are only available for bulk sales. Please refer to the appropriate repair kits on pages 11.

## Inlet and Outlet Shut-Off Valves

| Item # | Description                                                   | Qty. | Part Number   |            |            |            |            |            |
|--------|---------------------------------------------------------------|------|---------------|------------|------------|------------|------------|------------|
|        |                                                               |      | 1/2"          | 3/4"       | 1"         | 1-1/4"     | 1-1/2"     | 2"         |
| 28     | 02 Inlet and Outlet NPT Ball Valve with "T" Handle (Standard) | 2    | 77B-103-85    | 77B-104-83 | 77B-105-83 | 77B-106-83 | 77B-107-83 | 77B-108-83 |
|        | 04 Inlet and Outlet Union Ball Valve w/ "T" Handle (Option)   |      | Not Available | W-9525-05  | W-9526-05  | W-2303-05  | W-2304-05  | W-2305-05  |

## Replacement Handles for Ball Valve Shut-Off Valves (02 & 04 options)

|               |               |           |               |
|---------------|---------------|-----------|---------------|
| "T" Handle    | W-9732-00     | W-9864-00 | W-9734-00     |
| Lever Handle  | Not Available |           | W-9366-00     |
| Locking "T"   | Not Available | W-2394-00 | Not Available |
| Locking Lever | Not Available |           | W-9686-00     |

*Stainless steel handles are standard on all Apollo® backflow devices.*

| Item # | Description                | Qty. | Part Number          |      |    |                      |        |    |
|--------|----------------------------|------|----------------------|------|----|----------------------|--------|----|
|        |                            |      | 1/2"                 | 3/4" | 1" | 1-1/4"               | 1-1/2" | 2" |
| 29     | Test Cock M x F (81 metal) | 2    | 78-290-01 (Optional) |      |    | 78-291-01 (Standard) |        |    |
| 29a    | Test Cock SAE (81 metal)   |      | 78-292-01 (Standard) |      |    | 78-293-01 (Optional) |        |    |

## REPAIR KITS PVB4A 1/2" – 2"

| PVB Check Complete Kit |                         | QTY | Size             |                  |                 |                   |
|------------------------|-------------------------|-----|------------------|------------------|-----------------|-------------------|
|                        |                         |     | 1/2" – 3/4"      | 1"               | 1-1/4" – 1-1/2" | 2"                |
|                        | Repair Kit Model Number |     | <b>RK4A12CMC</b> | <b>RK4A34CMC</b> | <b>RK4A1CMC</b> | <b>RK4A112CMC</b> |
| <b>Item #</b>          | Ordering Number         |     | 4A-003-02        | 4A-004-02        | 4A-005-02       | 4A-007-02         |
| not Shown              | O-Ring Lubricant        |     | I-9016-00        |                  |                 |                   |
| 8                      | Check Module S-Assy     | 1   | W-9075-05        | W-9003-05        | W-9074-05       | W-9159-05         |
| 7                      | Check Module O-Ring     | 1   | D-4880-00        | D-4744-00        | D-4882-00       | D-4884-00         |
| 5                      | Bonnet O-Ring (for PVB) | 1   | D-4812-00        | D-4883-00        | D-4887-00       | D-4858-00         |
| extra part(s)          | Cap O-Ring (for DC/RP)  | 1   | D-4881-00        | D-4812-00        | D-4884-00       | D-4885-00         |

| PVB Float and Check Rubber Kit |                         | QTY | Size              |                  |                    |                  |
|--------------------------------|-------------------------|-----|-------------------|------------------|--------------------|------------------|
|                                |                         |     | 1/2" – 3/4"       | 1"               | 1-1/4" – 1-1/2"    | 2"               |
|                                | Repair Kit Model Number |     | <b>RK4A34PVBR</b> | <b>RK4A1PVBR</b> | <b>RK4A112PVBR</b> | <b>RK4A2PVBR</b> |
| <b>Item #</b>                  | Ordering Number         |     | 4A-004-06         | 4A-005-06        | 4A-007-06          | 4A-008-06        |
| not Shown                      | O-Ring Lubricant        |     | I-9016-00         |                  |                    |                  |
| 5                              | Bonnet O-Ring           | 1   | D-4812-00         | D-4883-00        | D-4887-00          | D-4858-00        |
| 20                             | Float Seat Disc         | 1   | D-4811-00         | D-4784-00        | D-4859-00          | D-4860-00        |
| 14                             | Check Module Seat Disc  | 1   | D-4771-00         | D-4743-00        | D-4770-00          | D-4853-00        |
| 7                              | Check Module O-Ring     | 1   | D-4880-00         | D-4744-00        | D-4882-00          | D-4884-00        |

| PVB Float and Bonnet Complete Kit, Top Half of PVB |                         | QTY | Size               |                   |                     |                   |
|----------------------------------------------------|-------------------------|-----|--------------------|-------------------|---------------------|-------------------|
|                                                    |                         |     | 1/2" – 3/4"        | 1"                | 1-1/4" – 1-1/2"     | 2"                |
|                                                    | Repair Kit Model Number |     | <b>RK4A34PVBFB</b> | <b>RK4A1PVBFB</b> | <b>RK4A112PVBFB</b> | <b>RK4A2PVBFB</b> |
| <b>Item #</b>                                      | Ordering Number         |     | 4A-004-07          | 4A-005-07         | 4A-007-07           | 4A-008-07         |
| not Shown                                          | O-Ring Lubricant        |     | I-9016-00          |                   |                     |                   |
| 5                                                  | Bonnet O-Ring           | 1   | D-4812-00          | D-4883-00         | D-4887-00           | D-4858-00         |
| 10                                                 | Bonnet S-Assy           | 1   | W-9099-05          | W-9094-05         | W-9176-05           | W-9179-05         |
| 9                                                  | Float S-Assy            | 1   | W-9101-05          | W-9096-05         | W-9178-05           | W-9181-05         |
| 4                                                  | Float Cage              | 1   | F-3844-00          | F-3840-00         | F-3870-00           | F-3873-00         |
| 6                                                  | Canopy                  | 1   | F-3842-00          | F-3838-00         | F-3868-00           | F-3871-00         |

| PVB Complete Internals Kit |                         | QTY | Size              |                  |                    |                  |
|----------------------------|-------------------------|-----|-------------------|------------------|--------------------|------------------|
|                            |                         |     | 1/2" – 3/4"       | 1"               | 1-1/4" – 1-1/2"    | 2"               |
|                            | Repair Kit Model Number |     | <b>RK4A34TPVB</b> | <b>RK4A1TPVB</b> | <b>RK4A112TPVB</b> | <b>RK4A2TPVB</b> |
| <b>Item #</b>              | Ordering Number         |     | 4A-004-11         | 4A-005-11        | 4A-007-11          | 4A-008-11        |
| not Shown                  | O-Ring Lubricant        |     | I-9016-00         |                  |                    |                  |
| 8                          | Check Module S-Assy     | 1   | W-9075-05         | W-9003-05        | W-9074-05          | W-9159-05        |
| 7                          | Check Module O-Ring     | 1   | D-4880-00         | D-4744-00        | D-4882-00          | D-4884-00        |
| 5                          | Bonnet O-Ring           | 1   | D-4812-00         | D-4883-00        | D-4887-00          | D-4858-00        |
| 10                         | Bonnet S-Assy           | 1   | W-9099-05         | W-9094-05        | W-9176-05          | W-9179-05        |
| 9                          | Float S-Assy            | 1   | W-9101-05         | W-9096-05        | W-9178-05          | W-9181-05        |
| 4                          | Float Cage              | 1   | F-3844-00         | F-3840-00        | F-3870-00          | F-3873-00        |
| 6                          | Canopy                  | 1   | F-3842-00         | F-3838-00        | F-3868-00          | F-3871-00        |



# SALES & CUSTOMER SERVICE:

Phone: (704) 841-6000

Fax: (704) 841-6020

www.apollovalves.com

|                      | AGENCY                              | AREAS COVERED                                                   | EMAIL                           | PHONE        | FAX          |
|----------------------|-------------------------------------|-----------------------------------------------------------------|---------------------------------|--------------|--------------|
| SOUTHEAST REGION     | Mid South Marketing, Inc.           | VA/MD/Washington, D.C./WV-East                                  | midsouth7@aol.com               | 804-213-3801 | 804-213-3802 |
|                      | Pro Marketing, Inc.                 | NC/SC/TN-East                                                   | sales@promarketinginc.net       | 864-578-4334 | 864-578-4889 |
|                      | Spirit Group                        | FL (except Panhandle)                                           | info@spiritgroupinc.com         | 407-291-6035 | 407-299-0378 |
|                      | Tim Morales & Associates, Inc.      | AL/FL Panhandle                                                 | sales@timmorales.com            | 251-602-8333 | 251-602-8339 |
|                      | White Wolf Group                    | GA                                                              | info@whitewolfgroupinc.com      | 800-401-4870 | 888-908-9372 |
| SOUTHERN REGION      | BWC Inc.                            | LA (Commercial Products)                                        | chuck@bwcassoc.com              | 504-734-0229 | 504-734-3711 |
|                      | Marathon Flow Control               | TX, OK, KS except Northeast, LA (Industrial)                    | sales@marathonflowcontrol.com   | 214-201-0100 | 214-201-0104 |
|                      | Southern Marketing Group            | MS/TN-West/AR/Bowie Cty.-TX                                     | SMG49@bellsouth.net             | 901-547-0042 | 901-547-0035 |
| MIDWESTERN REGION    | FourMation Sales                    | MN/ND/SD/WI-West                                                | ryan@fourmationsales.com        | 763-420-6900 | 763-420-6993 |
|                      | Marshall-Rodeno Heartland           | NE/IA (Except River Counties)                                   | trodeno@marshallrodeno.com      | 303-575-6701 | 303-575-6706 |
|                      | Midwest Spec                        | KY/OH/PA-West/WV-West                                           | glsales@mwspec.com              | 330-538-0406 | 330-538-0410 |
|                      | New Tech Marketing                  | Northern-IL/WI-East/IN/MI-UP/IA-River Counties                  | sales@new-techmarketing.com     | 630-378-4300 | 630-378-0343 |
|                      | New Tech Marketing                  | MO/Southern IL/Northeast Kansas                                 | ntm112@aol.com                  | 618-394-0329 | 618-394-0427 |
|                      | V.E. Sales Co., Inc.                | MI (Except Upper Peninsula)                                     | tomv@vesalesinc.com             | 586-774-7760 | 586-774-1490 |
| WESTERN REGION       | Elmco Duddy                         | CA - South                                                      | tduddy@elmcoduddy.com           | 626-333-9942 | 626-855-4811 |
|                      | Gordon & Associates                 | WA, OR, AK, Northern counties ID                                | laura@gordonandassoc.com        | 360-566-1470 | 360-566-1478 |
|                      | HC Fletcher                         | CA - North (AB 1953 compliant product)                          | apollosales@hcfletcher.com      | 800-432-7047 | 949-660-9072 |
|                      | Marshall-Rodeno Associated          | CO/WY/MT/ID-SE/UT/NV-NE/NM/El Paso-TX                           | trodeno@marshallrodeno.com      | 303-575-6701 | 303-575-6706 |
|                      | Romatec                             | CA - North PVF (non AB 1953)                                    | apollo@romatec.com              | 877-530-3530 | 661-588-3534 |
|                      | Southwest Valves                    | CA (Waterworks and Fire Protection)                             | d.burell@southwestvalve.com     | 559-261-2703 | 559-261-2711 |
|                      | Southwestern Industrial Sales Co.   | AZ/Nevada-SW                                                    | eduardop@sw-ind.com             | 480-458-5838 | 480-458-5843 |
|                      | Spec Management Group               | HI                                                              | msmarch4@cox.net                | 949-481-4225 | 949-487-0990 |
| NORTHEAST REGION     | Conroy & Griese Sales, Inc.         | NY-East/NJ-North                                                | iezz52@aol.com                  | 856-663-4440 | 856-663-6644 |
|                      | Keith Engle & Associates            | OEM accounts                                                    | keith.enge@verizon.net          | 610-827-9560 | 610-827-9561 |
|                      | Layden Company                      | NY-Upstate/PA-East/DE/NJ-South                                  | joejr@laydencompany.com         | 610-363-6657 | 877-529-3361 |
|                      | Urell, Inc.                         | MA/New England States                                           | conbraco@urell.com              | 617-923-9500 | 617-926-9414 |
| IRRIGATION ONLY REPS | Active Sales Northwest, Inc.        | OR, WA, Western ID                                              | skactive@aol.com                | 541-726-0320 | 541-726-1148 |
|                      | Biz Sales Company                   | OH, KY, MI, IN, parts of PA, WV, WI                             | dzavelson@bizpvf.com            | 216-595-2888 | 216-595-2899 |
|                      | Fourmation Sales                    | MN/ND/SD/WI-West                                                | dean@fourmationsales.com        | 763-262-4700 | 763-262-4740 |
|                      | Hall Marketing                      | AL, LA                                                          | hallmarketing@bellsouth.net     | 228-547-4637 | 228-832-6666 |
|                      | J&J Midwest Sales                   | NE, IA, MO, KS                                                  | john@jandjmidwestsales.com      | 314-422-8419 |              |
|                      | Jim Benton & Associates             | AL, FL Panhandle                                                | jim@bentonandassoc.com          | 205-664-1221 | 205-664-1277 |
|                      | John Hart                           | FL                                                              | jhart@lascofittings.com         | 772-595-7773 | 772-489-4305 |
|                      | Larry Perkins                       | TX - Southern                                                   | lperkins@lascofittings.com      | 936-443-1096 |              |
|                      | Marel Enterprises                   | New England, NY, DE, MD, VA, DC, parts of PA & WV               | marelenterprise@gmail.com       | 631-271-1718 | 631-427-8558 |
|                      | Marshall-Rodeno Associated          | CO/WY/MT/ID-SE/UT/NV-NE                                         | trodeno@marshallrodeno.com      | 303-575-6701 | 303-575-6706 |
|                      | NSC Marketing Group Inc.            | OK                                                              | nsc_tulsa@sbcglobal.net         | 918-627-5340 | 918-664-1408 |
|                      | Pro Marketing, Inc.                 | NC/SC/TN-East                                                   | sales@promarketinginc.net       | 864-578-4334 | 864-578-4889 |
|                      | Sherman Dobbs                       | TX - Northern                                                   | sdobbs@lascofittings.com        | 469-442-8510 | 972-417-9733 |
|                      | Southern Marketing Group            | MS/TN-West/AR/Bowie Cty.-TX                                     | SMG49@bellsouth.net             | 901-547-0042 | 901-547-0035 |
|                      | Spec Management Group               | CA-South                                                        | msmarch4@cox.net                | 949-481-4225 | 949-487-0990 |
|                      | VPC Sales                           | AZ                                                              | chudson@vpcsales.com            | 661-257-3923 | 661-257-3928 |
| CANADA               | Agences J. Pierre Sylvain, Inc.     | Quebec                                                          | agencespsylvain@golden.net      | 450-655-9588 | 450-641-2737 |
|                      | Barclay Sales Ltd.                  | British Columbia                                                | bbarclay@barclaysales.com       | 604-945-1010 | 604-945-3030 |
|                      | Conbraco Industries, Canada         | 178 Pennsylvania Ave., Unit 1, Concord, Ontario L4K 4B1         | conbraco.canada@conbraco.com    | 905-761-6161 | 905-761-6666 |
|                      | D & M Mechanical Sales              | Ontario/East                                                    | don@dandmsales.ca               | 613-384-7084 | 613-384-3407 |
|                      | Dynamic Agencies, Ltd.              | Saskatchewan                                                    | doug.dynamicage@sasktel.net     | 306-343-1901 | 306-343-1901 |
|                      | J. Levandier Sales, Inc.            | Nova Scotia, New Brunswick, Prince Edward Island & Newfoundland | service@jlevandiersales         | 506-858-1615 | 506-858-1084 |
|                      | Kern Industries, Ltd.               | Alberta-North                                                   | kernind@telusplanet.net         | 780-451-2056 | 780-454-6687 |
|                      | Kern Industries Calgary, Ltd.       | Alberta-South                                                   | marty.yucytus@kernindustries.ca | 403-730-7791 | 403-239-8179 |
|                      | Key to the North Sales Agency, Inc. | Ontario-North                                                   | hmehe@keytothenorth.ca          | 705-524-6714 | 705-566-0148 |
|                      | Task Controls, Inc.                 | Ontario                                                         | infotoronto@taskcontrols.com    | 416-291-3004 | 416-754-3481 |
|                      | Tom Beggs Agencies Ltd.             | Manitoba/NW Ontario                                             | tba@mts.net                     | 204-953-1900 | 204-774-6915 |