



# FLOOR REGISTER INSTALLATION

## BEFORE INSTALLING

We recommend consulting a professional if you are unfamiliar with installing hardware fixtures. Signature Hardware accepts no liability for any damage to the home, or personal injury during installation.

Observe all local building codes.

Unpack and inspect the register for damage. If damage is found, contact our Customer Relations team at 1-866-855-2284.

## IMPORTANT INFORMATION

All of Signature Hardware's registers are listed on our website by air duct size, which is the industry standard. To determine which register size to order, remove the old register and measure the air duct opening.

For standard floor registers, the louver frame fits into the air duct opening in the floor, and the lip rests on the surface of the floor.


## TOOLS AND MATERIALS:



Screwdriver

## INSTALLATION

1. Remove the old floor register. If the existing register is screwed to the floor, use a screwdriver to remove the screws that hold the register in place.

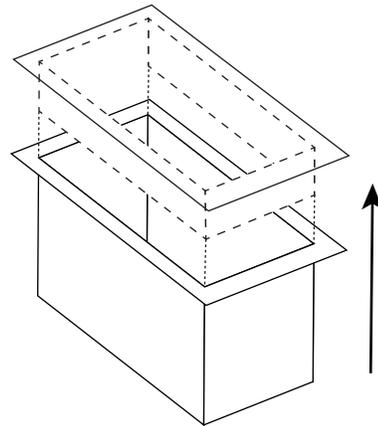

2. Insert the new floor register. The louver frame will fit into the air duct opening, while the lip of the register will sit on top of the floor. In general, it is not necessary to secure the register to the floor with screws or mounting clips.

