




PIPE TOOLS & VISES
SINCE 1896

REED PNEUMATIC UPC

Catalog Number	Item Code	Pipe Diameter	
		in - nom.	O.D. mm
UPC616A	07512	6 - 16	150 - 450
UPC636A	07510	6 - 36	150 - 1000
UPC648A	07511	6 - 48	150 - 1300

BEFORE OPERATING OR PERFORMING MAINTENANCE, SEE OWNER'S MANUAL AND UPC 636-3 SERVICE BULLETIN PROVIDED WITH EACH UNIT

UPC AIR MOTOR PREVENTIVE MAINTENANCE

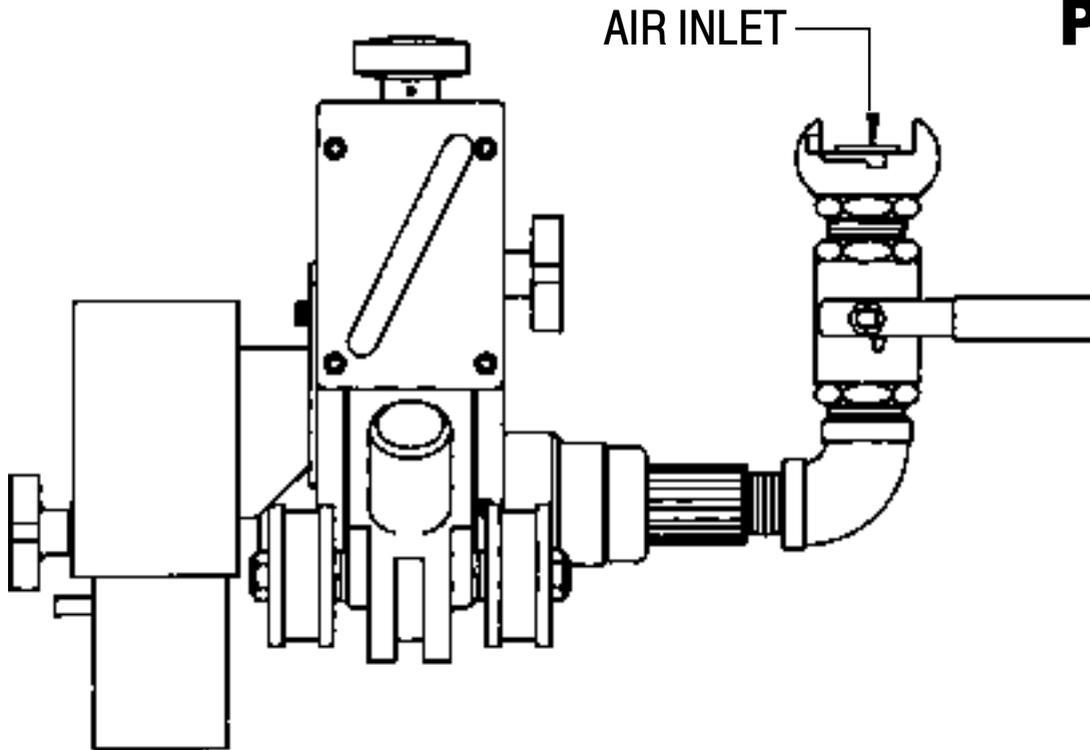


RIGHT VIEW

NOTE 1
USE THE SPECIFICALLY TAILORED FILTER-REGULATOR-LUBRICATOR. (REED #97584)
All air motors are sensitive to contamination and require clean air and proper lubrication. Be certain the filter is not clogged and the lubricator is delivering 3 to 6 drops per minute.

NOTE 2
OBSERVE THE LUBRICATION INSTRUCTIONS
Lightly grease gearing after day's use. Turn the unit over, rotate the exhaust collar to align the 1/4" hole on the centerline, then access the grease fitting inside the 1/4" hole.. Also pour a teaspoon of Non Fluid Oil* air lube in the air inlet before each new air hookup and after each day's use. *Non Fluid Oil Corp. (Reed #97583)

NOTE 3
READ THE COMPLETE OWNER'S MANUAL AND SERVICE BULLETINS PROVIDED WITH EACH UNIT BEFORE OPERATING.

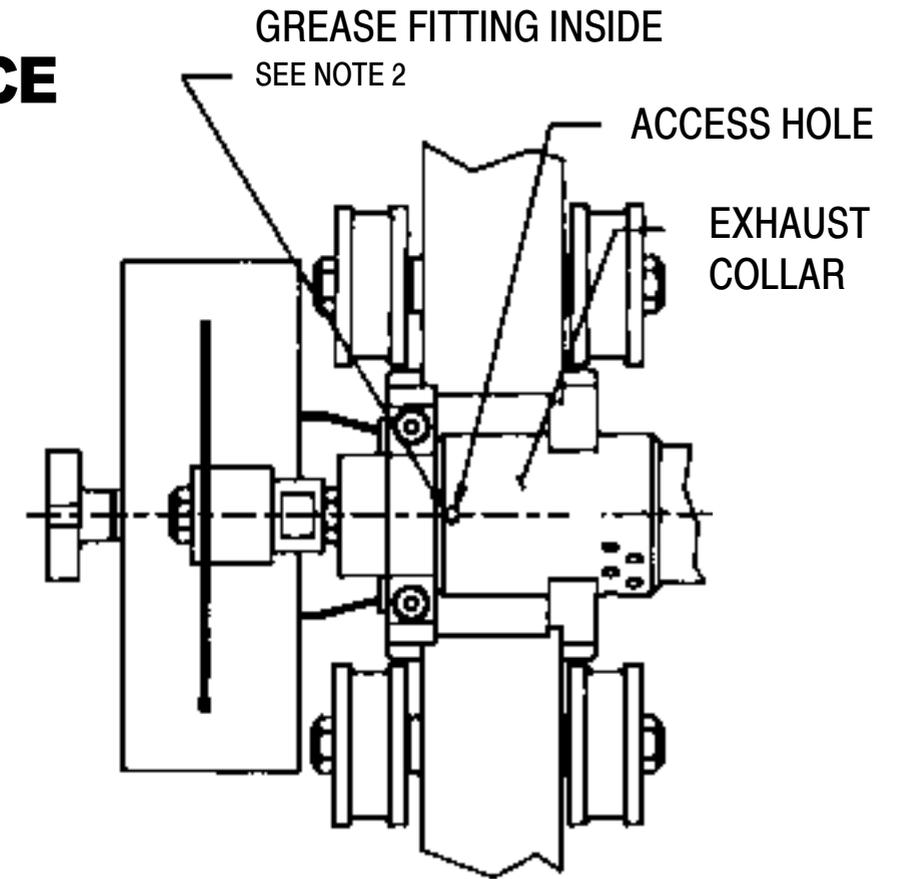

BOTTOM VIEW