



# LUPAKO TAP OPERATING INSTRUCTIONS

1

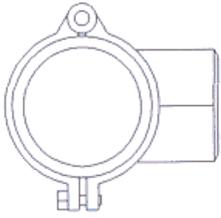


ATTACH SADDLE TO MAIN  
"ALWAYS FOLLOW SADDLE MANUFACTURER'S INSTRUCTIONS"

2

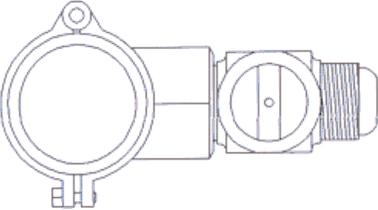


ATTACH CORPORATION TO SADDLE  
"ALWAYS FOLLOW CORPORATION MANUFACTURER'S INSTRUCTIONS"

3

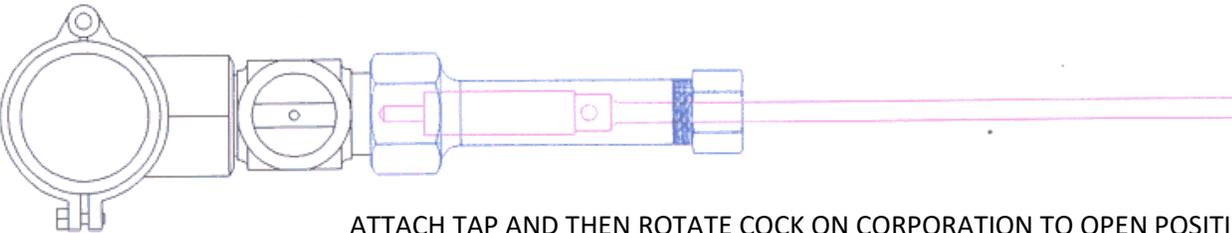


ATTACH TAP AND THEN ROTATE COCK ON CORPORATION TO OPEN POSITION  
ENSURE YOU HAVE THE CORRECT FITTING TAP FOR THE CORPORATION YOU ARE USING,  
AND IT IS SECURELY FASTENED

4

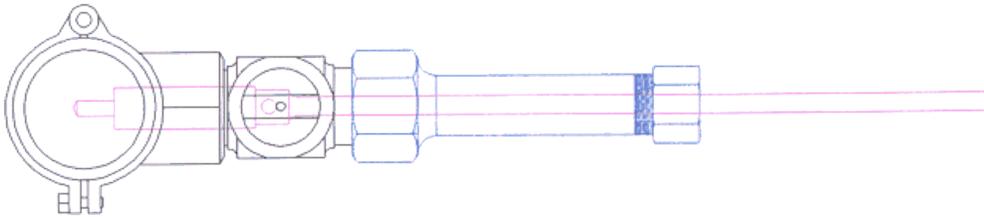


SLOWLY DRILL THROUGH ONE WALL OF THE MAIN. SLUG IS TRAPPED BETWEEN SAW.  
"ALWAYS FOLLOW PIPE MANUFACTURER'S INSTRUCTIONS"

5

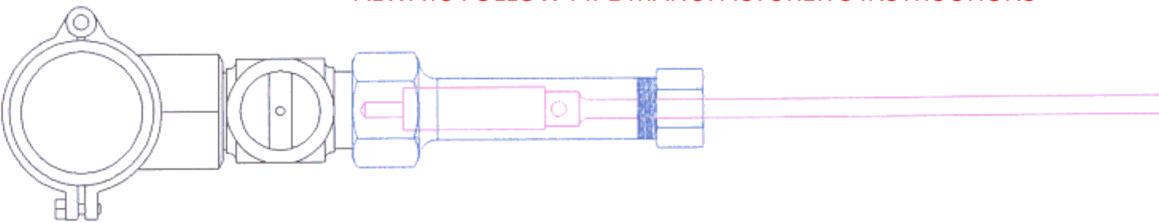

RETRACT HOLE SAW AND CLOSE THE COCK ON THE CORPORATION

6

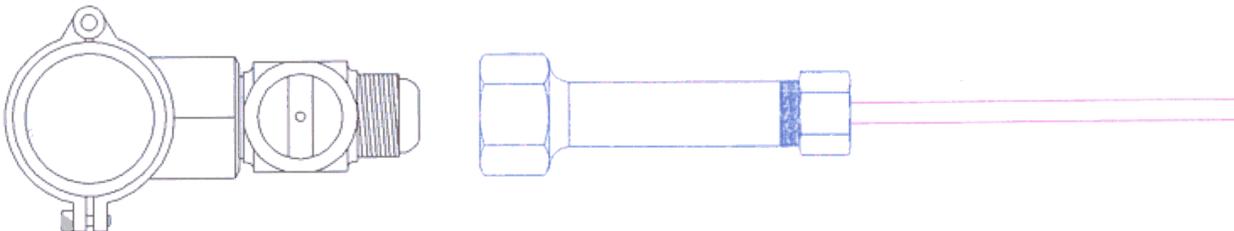

REMOVE TAP. CORPORATION IS READY FOR USE!