## INSTALLATION INSTRUCTIONS



Rev 01/11 Form No. IIB65.101

For more information contact...

### WOODFORD MANUFACTURING COMPANY

2121 Waynoka Road, Colorado Springs, Colorado 80915 • Phone: (800) 621-6032 • Fax: (800) 765-4115

 
To view our complete product line visit: <a href="www.woodfordmfg.com">www.woodfordmfg.com</a> or email: <a href="mailto:sales@woodfordmfg.com">sales@woodfordmfg.com</a>

A Division of WCM Industries, Inc.

### Model B65 & B67


# **Box Type - Automatic Draining Wall Hydrant**








Model B67 with Double Check Backflow Preventer

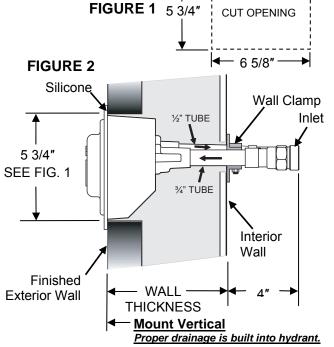

### FIGURE 3

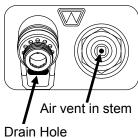



EXAMPLE: B65 or B67 installed in a block wall.

The hydrant must be properly installed and operated to insure drainage. Improperly installed or operated hydrants may freeze and burst in freezing weather.

### **INSTALLATION INSTRUCTIONS:**

- 1. Before installation, flush supply line to remove any debris.
- 2. Cut a 5 3/4" X 6 5/8" opening through the wall in the desired location. *FIGURE 1*
- 3. Apply silicone or equivalent behind the box flange to seal and help support hydrant. FIGURE 2
- 4. Insert the box and faucet assembly from the outside. *FIGURE 2*
- 5. The top box flange must be installed in the horizontal position and level. *Do not install in vertical position. FIGURE 2*

Note: Proper drainage is built into hydrant: (½" tube must slope slightly down toward inlet.) (¾" tube must be level.)

- 6. The hydrant Inlet must be located in a warm area of the building interior. *FIGURE 2*
- 7. Install adjustable Wall Clamp over water tubes and slide snug to interior wall. *FIGURE 2*
- 8. The operating stem air vent *must not* be plugged to ensure proper draining. *FIGURE* 3

Note: For solder connection, open hydrant to full open position before soldering. Excessive heat can damage valve seat rubber.

#### **OPERATING INSTRUCTIONS:**

Use Tee Key to lock/unlock door and operate hydrant. To **OPEN**, turn stem counter-clockwise To **CLOSE** and **DRAIN**, turn stem clockwise until seated and water drains out the drain hole.