



Change AP310 Filter

1. Shut off valve before (inlet) filter head.
Hint: Open faucet after filter or depress water dispenser to relieve any internal pressure.
2. Grasp cartridge and rotate clockwise.
(There may be small discharge of water)
3. Gently pull cartridge straight out and discard.
4. Align tabs of new cartridge with head and insert into head.
5. Rotate counter-clockwise until stops.
6. Open inlet shut-off valve and flush for 5 minutes.