


Installation Instructions

WIRING DIAGRAM:

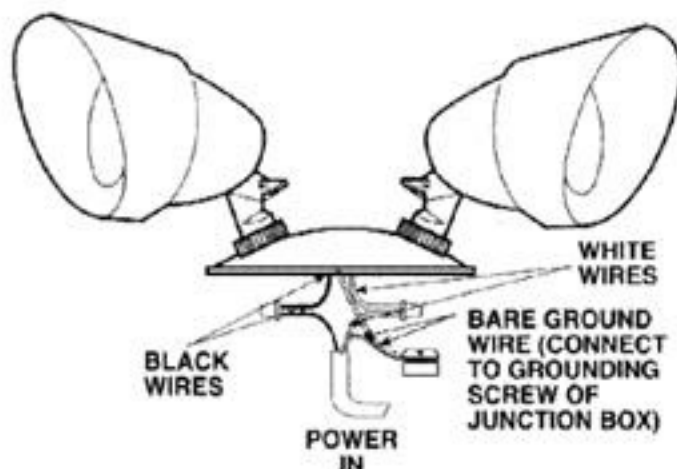

CAUTION:

TURN OFF ELECTRICITY, remove fuse or switch off circuit breaker.

THERE IS A RISK OF FIRE AND ELECTRICAL SHOCK. INSTALL IN ACCORDANCE WITH NATIONAL AND LOCAL ELECTRICAL CODES USING A QUALIFIED ELECTRICIAN.

USE OUTDOORS ONLY. Mount fixture at least 18 inches from any combustible material.

FIXTURE INSTALLATION:

1. Make sure electricity is turned OFF.
2. Thread arm through mounting cover and secure with locknut.
3. Put weatherproof gasket in position under cover.
4. Attach cover to junction box.
5. Connect wires as shown in diagram.
6. Aim floodlight in direction desired and tighten locknut and arm bottom.
7. Turn on power.

LAMP REPLACEMENT:

1. Use Type "T4" 75 watt bi-pin lamp. RAB catalog # LQ75-G. Use 75 watt lamp Maximum.
2. Disconnect power and let lamp cool if it was in operation.
3. Unscrew hood.
4. **IMPORTANT: DO NOT TOUCH LAMP WITH BARE HANDS.** Touching lamp with bare hands will cause premature lamp failure. Use gloves or cloth to hold lamp. Push lamp into socket.
5. Replace hood, reconnect power.

Thank you for buying RAB lighting fixtures. Our aim is to design the best quality products so you can get the done right. We'd like to hear your comments. Call us at 888-RAB-1000, attention Marketing Department.

IMPORTANT

READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN INSTRUCTIONS FOR FUTURE REFERENCE.

EASY INSTALLATION & PRODUCT HELP

Fax Back
Faxed Tips & Specs,
24 hours/day.
888 RAB-1236

www.rabweb.com
Visit our internet site for
color product photos
and installation tips.

Tech Help Line
Call our friendly experts.
8AM - 5PM ET Mon. - Fri.
888 RAB-1000

e-mail
Your questions and requests
will be answered promptly.
sales@rabweb.com



RAB Electric Manufacturing Inc.
170 Ludlow Avenue Northvale, New Jersey 07647 U.S.A.

THESE INSTRUCTIONS DO NOT COVER ALL DETAILS
VARIATIONS IN EQUIPMENT, NOR DO THEY PROVIDE
EVERY POSSIBLE CONTINGENCY TO BE MET IN CON-
TINUED WITH INSTALLATION, OPERATION OR MAINTENANCE.