

Owners Manual Model 4400BF Floor Mount Tubular Bottle Filler Fountain 0 0 INSTALLER 4400BF Fountains are among the easiest to install Fountains on the market today. To assure you install these models easily and correctly, PLEASE READ THESE SIMPLE INSTRUCTIONS BEFORE STARTING THE INSTALLATION. CHECK YOUR INSTALLATION FOR COMPLIANCE WITH PLUMBING, ELECTRICAL, AND OTHER APPLICABLE CODES. After installation, leave these instructions with the Fountain for future reference. IMPORTANT ALL SERVICE TO BE PERFORMED BY AN AUTHORIZED SERVICE PERSON **IMPORTANT! INSTALLER PLEASE NOTE.** THE GROUNDING OF ELECTRICAL EQUIPMENT SUCH AS TELEPHONE. COMPUTERS. ETC. TO WATER LINES

THE GROUNDING OF ELECTRICAL EQUIPMENT SUCH AS TELEPHONE, COMPUTERS, ETC. TO WATER LINES IS A COMMON PROCEDURE. THIS GROUNDING MAY BE IN THE BUILDING OR MAY OCCUR AWAY FROM THE BUILDING. THIS GROUNDING CAN CAUSE ELECTRICAL FEEDBACK INTO A FOUNTAIN, CREATING AN ELEC-TROLYSIS WHICH CAUSES A METALLIC TASTE OR AN INCREASE IN THE METAL CONTENT OF THE WATER. THIS CONDITION IS AVOIDABLE BY USING THE PROPER MATERIALS AS INDICATED. ANY DRAIN FITTINGS PROVIDED BY THE INSTALLER SHOULD BE MADE OF PLASTIC TO ELECTRICALLY ISOLATE THE FOUNTAIN FROM THE BUILDING PLUMBING SYSTEM.

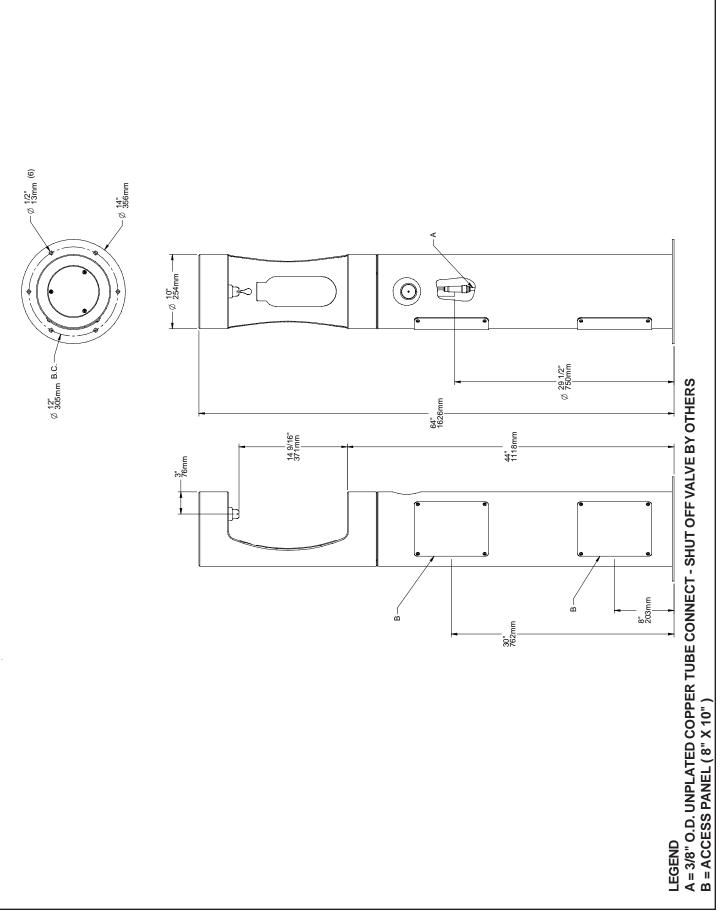



4400BF FOUNTAIN

- 1. This fountain is to be mounted on a smooth, flat, finished surface with adequate support structure. NOTE: Mounting structure must be capable of supporting 300 lb. load on fountain.
- 2. Refer to rough-in for plumbing.
- 3. Install shut-off valve on water supply. (Valve not furnished)
- 4. Locate and install fountain using 3/8" minimum screws or bolts. (Screws or bolts not furnished)
- 5. Prior to installing the Bottle Filler to the fountain, insert drain tube (Item # 5) by positioning the short end of drain pipe through the mounting plate of bottle filler. Install filler onto fountain and secure with mounting hardware.
- 6. Connect water supply and fountain drain. Water connection and drain must comply with local codes.
- 7. Turn on water supply and check all connections for leaks.
- **CAUTION**: This fountain is rated for inlet water pressure of 20-105 PSI. A pressure reducing regulator should be used if the inlet water supply exceeds 105 PSI. Any damage caused by reason of connecting this product to supply line pressures lower than 20 psig or higher than 105 psig is not covered by warranty.
- 8. Water supply 3/8" O.D. unplated copper tube. Waste 1-1/4" IPS. Contractor to supply waste trap and service stop valve in accordance with local code.
- 9. Connecting lines to be made of unplated copper and should be thoroughly flushed to remove all foreign matter before being con nected to fountain. This fountain is manufactured in such a manner that it does not in any way cause taste, odor, color, or sediment problems.
- 10. Connect fountain to supply line with a shut-off valve and install a 3/8" unplated copper water line between the valve and the cooler. Remove any burrs from outside of water line. Push the tubes straight into the fittings until they reach a positive stop, approximately 3/4" (See Fig. 2). DO NOT SOLDER TUBES INSERTED INTO THE STRAINER AS DAMAGE TO THE O-RINGS MAY RESULT.

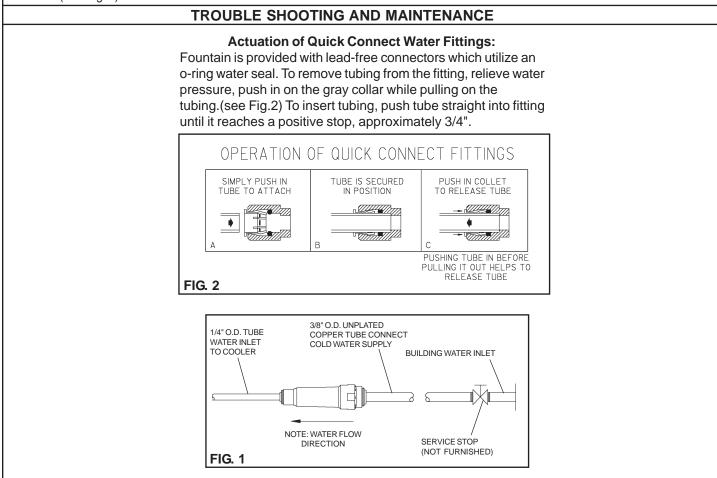

ITEMIZED PARTS LIST		
ITEM NO.	PART NO.	DESCRIPTION
1	28955C	Cover - Round Plate
2	45931C	Outdoor Bottle Filler Drain Plug
3	45832C	Access Panel
4	55996C	In - Line Strainer
5	66815C	Tube - Drain
6	98532C	Kit - "O" Rings and Fittings
7	98677C	Kit - Gasket
8	98678C	Kit - 1.0 GPM Regulator (BF Only)
9	98679C	Kit - Nozzle
10	98680C	Kit - Aerator
11	98681C	Kit - Bottle Filler Trim
12	98682C	Kit - Push Button
13	98683C	Kit - Plastic Drain
14	98685C	Kit - 4400 Series Hardware
15	98686C	Kit - Bottle Filler Waterway
16	P05031	Aerator

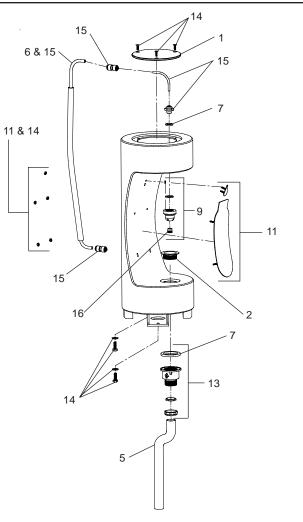

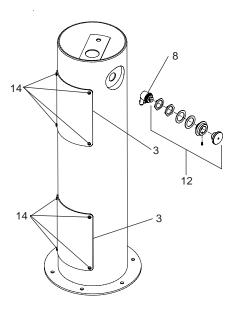

PRINTED IN U.S.A.

FOR PARTS CONTACT YOUR LOCAL DISTRIBUTOR OR CALL 1.800.260.6640