



- Turn off hot and cold water supplies before beginning.
- Connect FLEXIBLE SUPPLIES (1, 2) directly to wall supplies. Connection on fitting supplies are 3/8" compression. Connect left supply (Marked with a Red Stripe) to Hot and right supply (Marked with Blue Stripe) to Cold wall supply. Use adjustable wrench to tighten connections. Do not over tighten.
- Faucet supplies are 21" long from faucet base.
- Note: If additional supply length is required, installer must purchase additional parts separately.
- Important: If SUPPLY HOSES (1, 2) are too long, loop as illustrated to avoid kinking.

INSTALL WEIGHTS

3


With HAND SPRAY (1) seated in SPOUT (2), install WEIGHT (3) onto HOSE (4) 18 inches from the underside of the sink deck and secure with SCREW (5).




Move HANDLE (1) into "off" position.

REMOVE

Turn on water supplies. Check connections for leaks. (See Section 5)

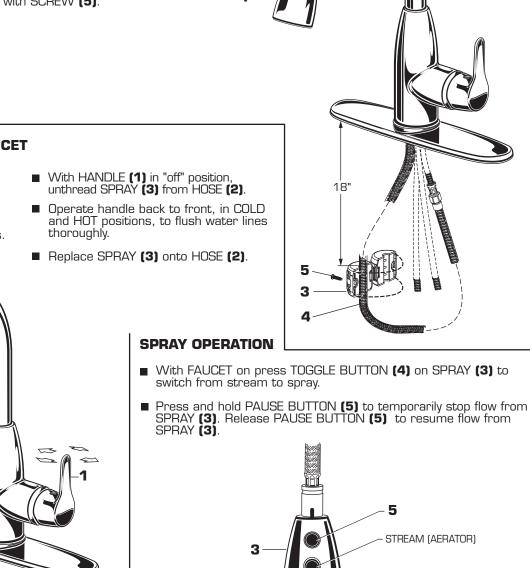

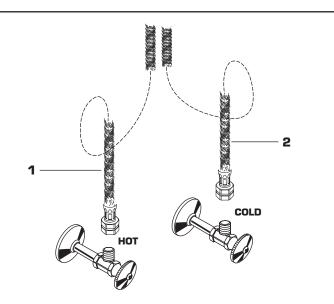

18"

5


Δ

SPRAY

STREAM (AERATOR)

2

M965036 Rev. 1.4

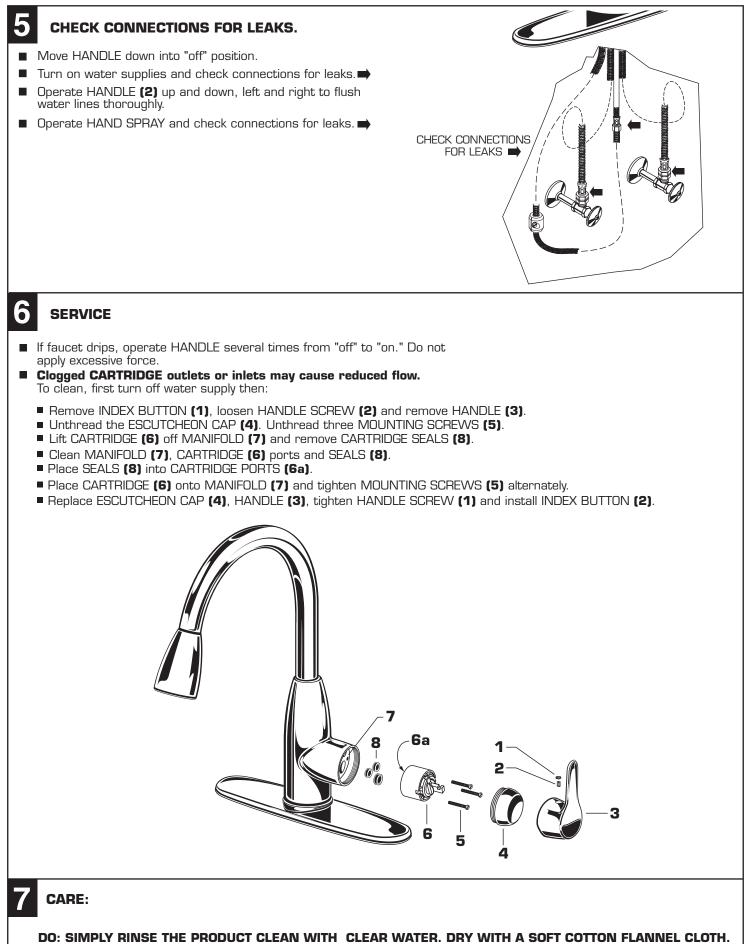

DO NOT: DO NOT CLEAN THE PRODUCT WITH SOAPS, ACID, POLISH, ABRASIVES, HARSH CLEANERS, OR A CLOTH WITH A COARSE SURFACE.

