

American Standard

# Installation Instructions

4285.551  
4285.551F15

## PORTSMOUTH™ DUAL CONTROL HIGH-ARC KITCHEN FAUCET

*Thank you for selecting American Standard...  
the benchmark of fine quality for over 100 years.*

*To ensure that your installation proceeds smoothly—  
please read these instructions carefully before you begin.*



Certified to comply with ASME A112.18.1M

M965459 Rev. 1.2

### RECOMMENDED TOOLS



Channel Locks



Adjustable Wrench



Plumbers' Putty or Caulking

## 1 INSTALL FAUCET and SPRAY


**CAUTION** Turn off water at main supply.

### INSTALL FAUCET

- Place FAUCET (1) in position on sink or mounting surface.
- Assemble and tighten LOCKNUTS (2) from underside of sink or mounting surface. Hand tighten to secure FAUCET (1).

### INSTALL SPRAY


- Place the HOLDER (4) into the appropriate mounting hole. Assemble the SPRAY HOLDER WING NUT (5) onto the shank of SPRAY HOLDER (4) from below and hand tighten.
- Feed SPRAY HOSE (6) through HOLDER (4) so SPRAY (3) sits in HOLDER (4).
- From underneath sink, attach COUPLING NUT (7) of SPRAY HOSE (6) to HOSE SHANK (9). Tighten COUPLING NUT (7) firmly.

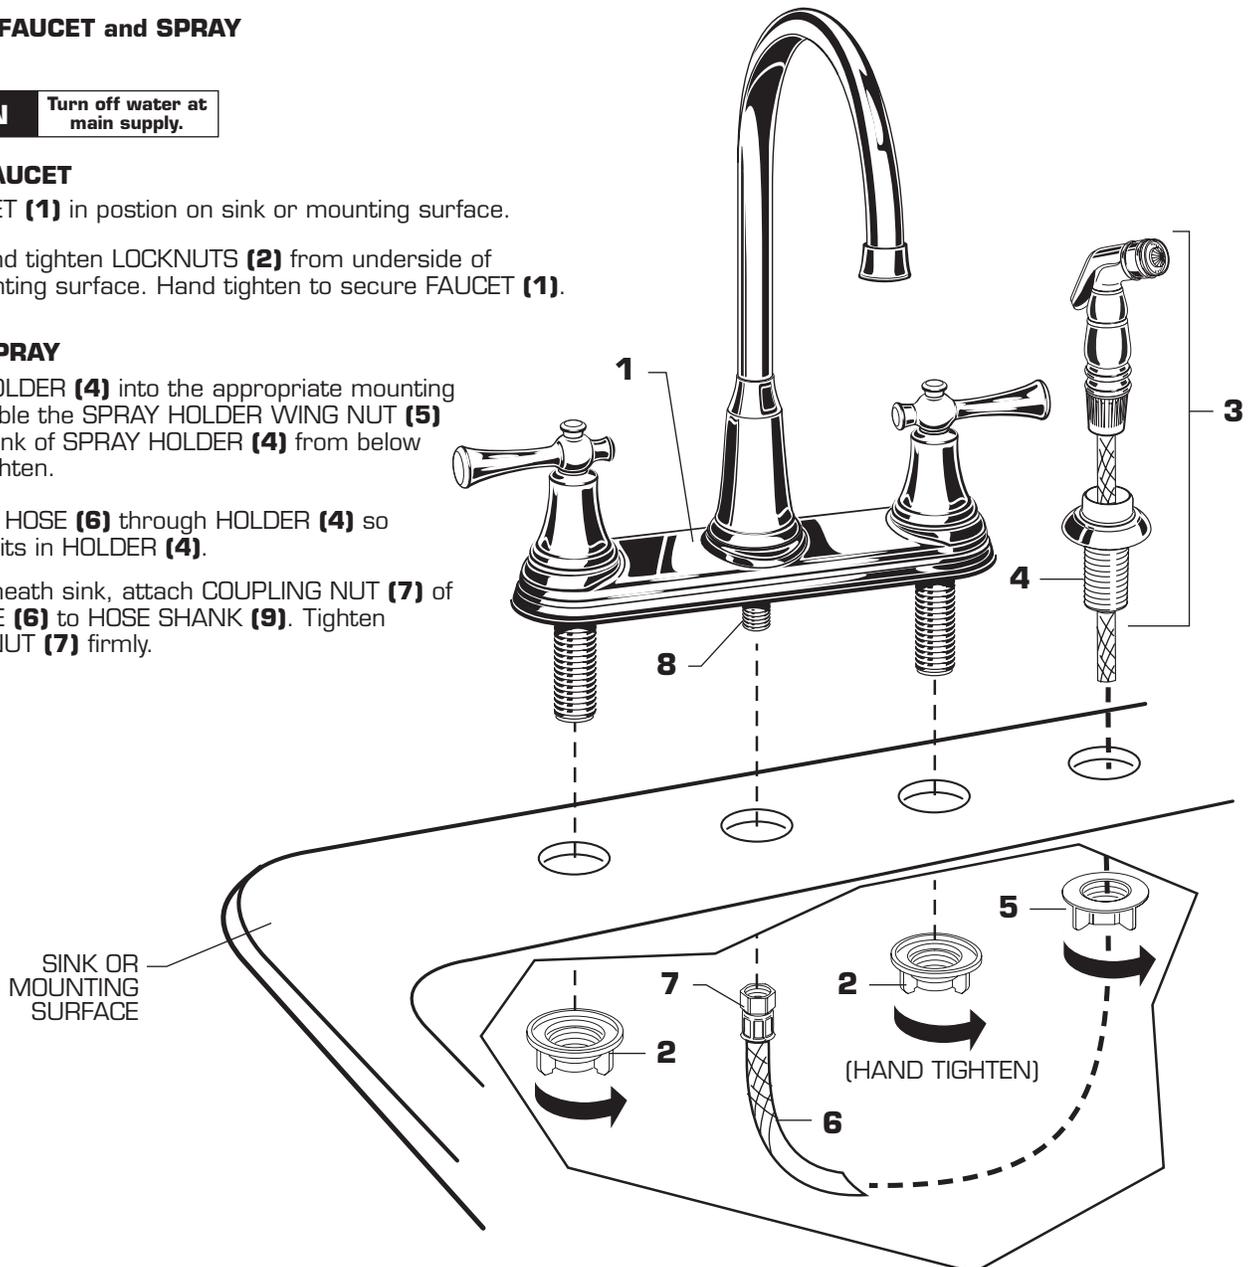

## 2 MAKE WATER SUPPLY CONNECTIONS


**NOTE: FLEXIBLE SUPPLIES OR BULL-NOSE RISERS MUST BE PURCHASED SEPARATELY.**

- Connect water supply to FAUCET (1) with 1/2" IPS FLEXIBLE SUPPLIES (2) or 3/8" O.D. BULL-NOSE RISERS (3).
- Use adjustable wrench to tighten connections. Do not over tighten. For BULL-NOSE RISERS (3), be careful not to kink copper supply when bending. Use of tubing cutter may be required to cut to proper length.

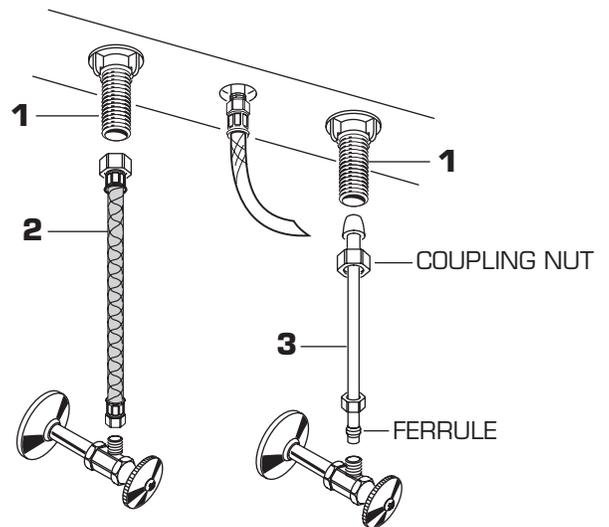


## 3 TEST INSTALLED FITTING

- With HANDLES (1) in OFF position, turn on WATER SUPPLIES (2) and check all connections for leaks. ➔
- Remove AERATOR (3).
- Operate both HANDLES (1) to flush water lines thoroughly.
- Rotate SPOUT (5) in both directions.
- Replace AERATOR (3).
- Direct SPRAY (4) into sink and activate. Check hose connections for leaks.

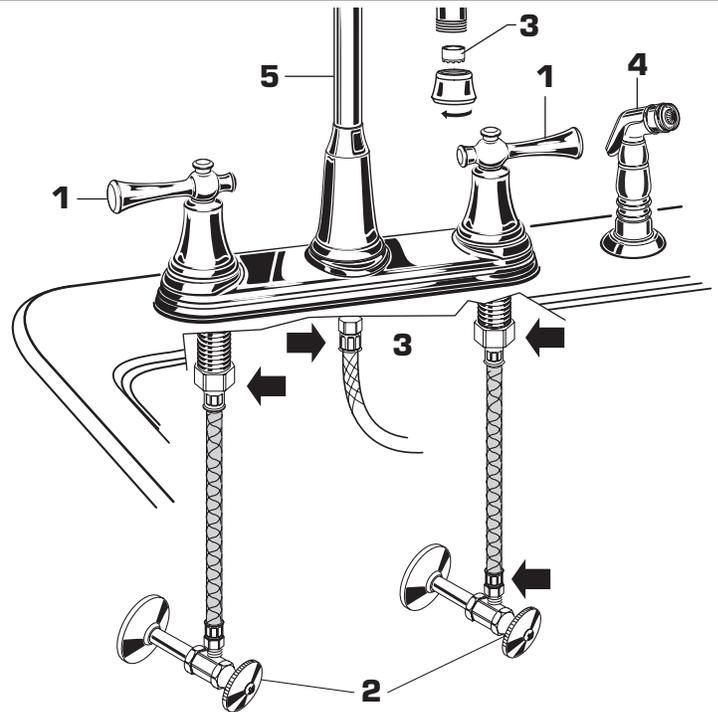

## 4 SERVICE

- To change direction of handle rotation, proceed as follows:
  - Turn valve to OFF position.
  - Pull out INDEX CAP (1) and remove HANDLE SCREW (2).
  - Pull off HANDLE (3).
  - Pull off STEM ADAPTER (4).
  - Remove SPRING CLIP (6).
  - Lift STOP WASHER (5), turn 90° and replace.
  - Replace SPRING CLIP (6) and STEM ADAPTER (4).
  - Reinstall HANDLE ASSEMBLY (1, 2 & 3).
- If spout drips, operate handles several times from OFF to ON position. Do not force - handles turn only 90°.

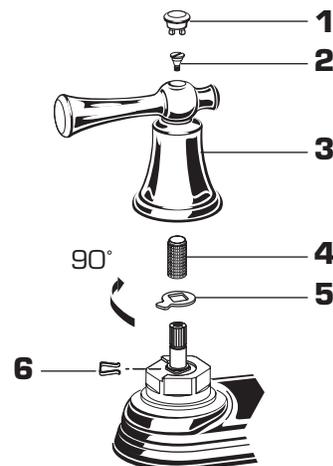

## 5 CARE:

**DO: SIMPLY RINSE THE PRODUCT CLEAN WITH CLEAR WATER. DRY WITH A SOFT COTTON FLANNEL CLOTH.**

**DO NOT: DO NOT CLEAN THE PRODUCT WITH SOAPS, ACID, POLISH, ABRASIVES, HARSH CLEANERS, OR A CLOTH WITH A COARSE SURFACE.**

*American Standard*

**PORTSMOUTH™  
DUAL CONTROL HIGH-ARC  
KITCHEN FAUCET**

**MODEL NUMBER**

**4285.551  
4285.551F15**

**M909610-YYY0A**  
INDEX BUTTON

**918555-0070A**  
HANDLE SCREW


**M909430-YYY0A**  
HANDLE ASSEMBLY

**918049-0070A**  
ADAPTER

**994053-0070A**  
VALVE

**M923057-0070A**  
PUTTY PLATE

**065800-0070A**  
ATTACHMENT NUT

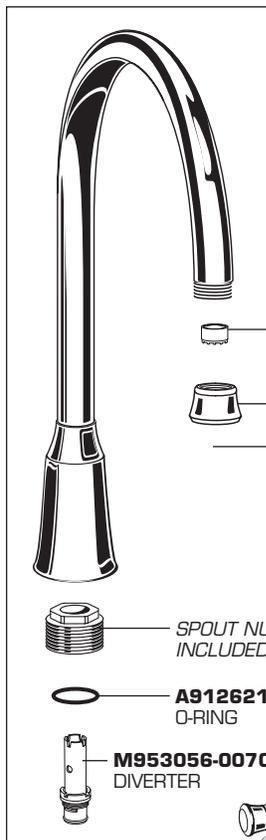

**M964401-YYY0A**  
SPOUT KIT

**M910260-0070A (2.2 GPM)  
M910286-0070A (1.5 GPM)**  
AERATOR

**M911231-YYY0A**  
AERATOR RING


**SPOUT NUT NOT INCLUDED IN SPOUT KIT**

**A912621-0070A**  
O-RING

**M953056-0070A**  
DIVERTER

**M953668-YYY0A**  
HANDSPRAY & HOSE

**M953040-YYY0A**  
SPRAY HOLDER

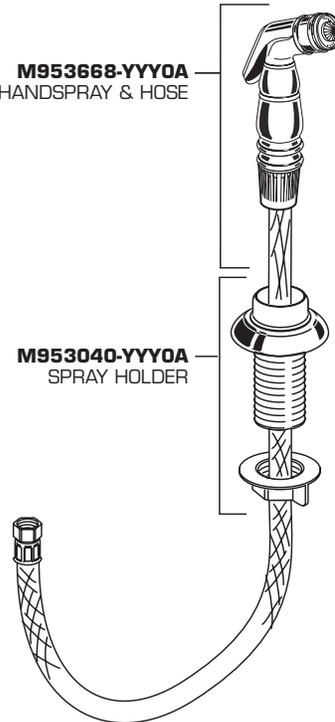

Replace the YYY with  
Appropriate finish code

|                   |     |
|-------------------|-----|
| CHROME            | 002 |
| STAINLESS STEEL   | 075 |
| OIL RUBBED BRONZE | 224 |



**HOT LINE FOR HELP**

For toll-free information and answers to your questions, call:  
1-800-442-1902  
Weekdays 8:00 a.m. to 6:00 p.m. EST  
IN CANADA 1-800-387-0369 (TORONTO 1-905-306-1093)  
Weekdays 8:00 a.m. to 7:00 p.m. EST  
IN MEXICO 01-800-839-1200

Product names listed herein are trademarks of American Standard Inc.  
© AS America, Inc. 2013