Rem[™] Pressure Balanced Shower Valve Trim Kit

Model D35100500

To be used with D35000500.191 Pressure Balanced Shower Valve

Thank you for selecting DXV by American Standard. To ensure that your installation proceeds smoothly, please read these instructions carefully before you begin.





RECOMMENDED TOOLS AND MATERIALS

Most of the procedures require the use of common tools and materials, which are available from hardware and plumbing, supply stores. It is essential that the tools and materials be on hand before work is begun.

Hex Wrench (Supplied)






Regular Screwdriver

ROUGHING-IN DIMENSIONS:

• For reference

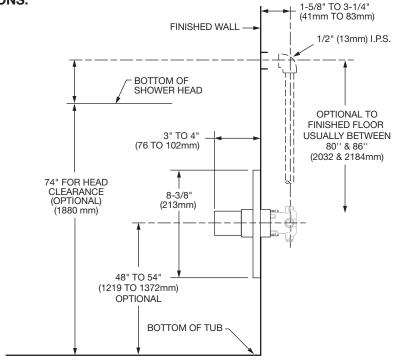

In the United States:

DXV by American Standard One Centennial Avenue Piscataway, New Jersey 08855 Attention: Director of Customer Care

For residents of the United States, warranty information may also be obtained by calling the following toll free number: (800) 227-2734 www.DXV.com

In Canada:

DXV by American Standard 5900 Avebury Road Mississauga, Ontario L5R 3M3 Canada

Toll Free: 1-800-387-0369 Local: 905-306-1093 Fax: 1-800-395-1498 www.DXV.ca

In Mexico:

DXV by American Standard Via Morelos 330 Col. Santa Clara Coatitla Ecatepec, Estado de México 55540

Toll Free: 01-800-8391200 www.DXV.mx

- When finished tiling the wall, remove PLASTER GUARD (1).
- Figure 1. Push CAP (2) over VALVE CARTRIDGE until seated against stop.


1b

• Figure 2. Mount ESCUTCHEON HOLDER (3) and gasket to valve body with SCREWS (4). Mount ESCUTCHEON SUPPORT (5) to ESCUTCHEON HOLDER (3) with SCREWS (6).

1c


• Figure 3. Install ESCUTCHEON (7) onto CAP (2) and push flush against finished wall. Escutcheon (7) will snap fit onto ESCUTCHEON SUPPORT (5).

Figure 3.

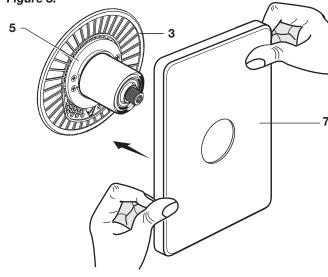

2 **INSTALL HANDLE**

- Install HANDLE ADAPTER (1) onto VALVE STEM (3) and secure with SCREW (4).
- Align LEVER HANDLE (5) so lever is facing down and tighten SET SCREW (6) with hex wrench to secure LEVER HANDLE (5).

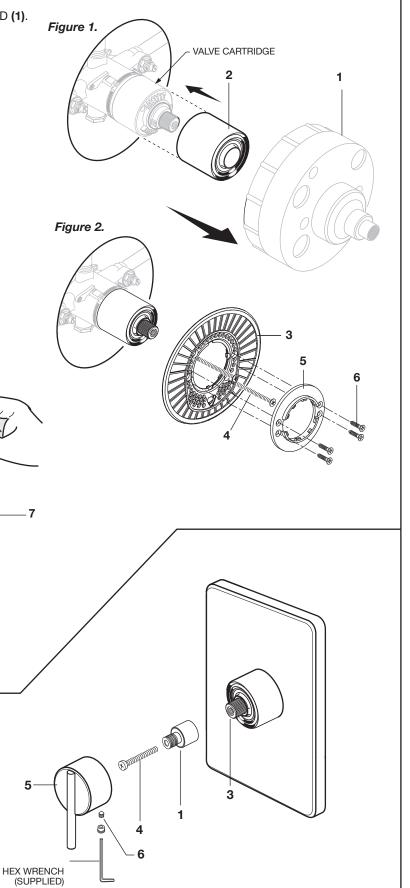


ADJUST HOT LIMIT STOP (MUST BE DONE PRIOR TO TRIM INSTALLATION)


By restricting HANDLE rotation and limiting the amount of hot water allowed to mix with the cold, the HOT LIMIT SAFETY STOP (1) reduces risk of accidental scalding. To set the maximum hot water temperature of your faucet, all you need to do is adjust the setting on the HOT LIMIT SAFETY STOP (1).

• Turn CARTRIDGE STEM (2) to the OFF position (coldest setting) before making adjustment to HOT LIMIT STOP (1). Use a flat blade screwdriver to pry free the HOT LIMIT SAFETY STOP (1). Pull forward and rotate counterclockwise one number to limit hot water temperature.

Use ARROW (3) on CARTRIDGE (4) and NUMBERS (5) on HOT LIMIT STOP (1)

for indication.

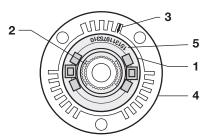

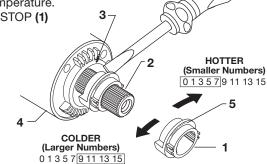

4 TEST INSTALLED FAUCET

- Turn VALVE "off".
- With HANDLE in "off" position, turn on water supplies and check all connections for leaks.
- Operate HANDLE and flush water lines thoroughly.

