



- 1. Turn off water supply.
- 2. Snap out button, remove screw.
- 3. Remove handle together with yoke by lifting up and back.
- 4. Unscrew retainer ring.
- 5. Replace screw into cartridge assembly.
- 6. Remove cartridge assembly by gripping the head of the screw with pliers and pulling up.
- 7. Insert new cartridge assembly into faucet body.
- 8. Screw in the retainer ring hand tight.
- 9. Insert handle pivot into pivot groove of retainer ring. Pivot handle down so that stem goes into the yoke. Replace screw and snap in button.

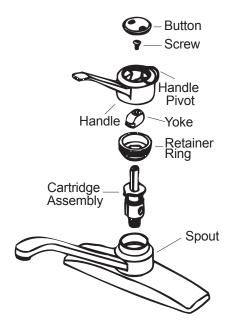

INSTRUCTIONS FOR LAVATORY FAUCETS:

- 1. Turn off water supply.
- 2. Remove button, screw & handle.
- 3. Unscrew collar nut.
- 4. Pull cartridge assembly from faucet body.
- Insert new cartridge assembly into faucet body and tighten collar nut.
- 6. Reassemble in reverse order.

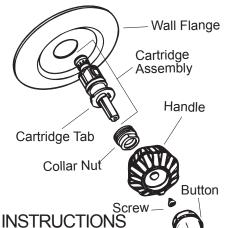

FOR TUB/SHOWER:

- 1. Turn off water supply.
- 2. Remove button, screw & handle.
- 3. Remove wall flange and sleeve.
- 4. Unscrew collar nut.
- 5. Pull cartridge assembly form valve body.
- Insert new cartridge assembly into valve body and tighten collar nut.
- 7. Reassemble in reverse order.

Manufactured for/ Fabrique pour/ Fabricado para: Lincoln Products Industry, CA 91748 © Copyright 2010