SERVICE AND TECHNICAL SUPPORT MANUAL Single Stage, ECM Blower Motor 35" Tall, High Efficiency Condensing Gas Furnace (F/G)9MXE

Save this manual for future reference.

Safety Labeling and Signal Words

3

4 4

4

9

10 10

10

10

10 12 13

13 14 14

14

16 17

18

18

18 19

DANGER, WARNING, CAUTION, and NOTE The signal words DANGER, WARNING, CAUTION, and NOTE are used to identify levels of hazard seriousness. The signal word DANGER is only used on product labels to signify an immediate hazard. The signal words WARNING, CAUTION, and NOTE will be used on product labels and throughout this manual and other manual that may apply to the product.

DANGER – Immediate hazards which will result in severe personal injury or death.

WARNING – Hazards or unsafe practices which could result in severe personal injury or death.

CAUTION – Hazards or unsafe practices which may result in minor personal injury or product or property damage.

NOTE – Used to highlight suggestions which will result in enhanced installation, reliability, or operation.

TABLE OF CONTENTS

START-UP CHECK SHEET START-UP, ADJUSTMENT, AND SAFETY CHECK PRIME CONDENSATE TRAP WITH WATER PURGE GAS LINES
ADJUST TEMPERATURE RISE
ADJUST BLOWER OFF DELAY (HEAT MODE)
ADJUST COOLING AIRFLOW
CHECK SAFETY CONTROLS
CHECK SAFETY CONTROLS
SERVICE AND MAINTENANCE PROCEDURES
RETRIEVING STORED FAULT CODES
COMPONENT SELF-TEST
CARE AND MAINTENANCE
CLEANING AND/OR REPLACING AIR FILTER
BLOWER MOTOR AND WHEEL MAINTENANCE
CLEANING BURNERS AND FLAME SENSOR
FLUSHING COLLECTOR BOX AND DRAINAGE SYSTEM CLEANING CONDENSATE DRAIN AND TRAP
CLEANING CONDENSATE DRAIN AND TRAP
WINTERIZATION
SERVICE LABEL
WIRING DIAGRAM
TROUBLESHOOTING GUIDE – FLOW CHART
SEQUENCE OF OPERATION
PARTS REPLACEMENT INFORMATION GUIDE
PRODUCT NOMENCLATURE

Signal Words in Manuals

The signal word **WARNING** is used throughout this manual in the following manner:

WARNING

The signal word **CAUTION** is used throughout this manual in the following manner:

CAUTION

Signal Words on Product Labeling

Signal words are used in combination with colors and/or pictures or product labels.

▲ Safety–alert symbol

When you see this symbol on the unit and in instructions or manuals, be alert to the potential for personal injury.







Use of the AHRI Certified TM Mark indicates a manufacturer's participation in the program. For verification of certification for individual products, go to www.ahridirectory.org.

SAFETY CONSIDERATIONS

Improper installation, adjustment, alteration, service, maintenance, or use can cause explosion, fire, electrical shock, or other conditions which may cause death, personal injury, or property damage. Consult a qualified installer, service agency, or your distributor or branch for information or assistance. The qualified installer or agency must use factory-authorized kits or accessories when modifying this product. Refer to the individual instructions packaged with the kits or accessories when installing.

Follow all safety codes. Wear safety glasses, protective clothing, and work gloves. Use quenching cloth for brazing operations. Have fire extinguisher available. Read these instructions thoroughly and follow all warnings or cautions included in literature and attached to the unit. Consult local building codes, the current editions of the National Fuel Gas Code (NFCG) NFPA 54/ANSI Z223.1, and the National Electrical Code (NEC) NFPA 70.

In Canada refer to the current editions of the National standards of Canada CAN/CSA–B149.1 and .2 Natural Gas and Propane Installation Codes, and Canadian Electrical Code CSA C22.1.

Recognize safety information. This is the safety-alert symbol

 \triangle . When you see this symbol on the unit and in instructions or manuals, be alert to the potential for personal injury. Understand these signal words; DANGER, WARNING, and CAUTION. These words are used with the safety-alert symbol. DANGER identifies the most serious hazards which **will** result in severe personal injury or death. WARNING signifies hazards which **could** result in personal injury or death. CAUTION is used to identify unsafe practices which **may** result in minor personal injury or product and property damage. NOTE is used to highlight suggestions which **will** result in enhanced installation, reliability, or operation.

WARNING

PERSONAL INJURY, AND/OR PROPERTY DAMAGE HAZARD

Failure to carefully read and follow this warning could result in equipment malfunction, property damage, personal injury and/or death.

Installation or repairs made by unqualified persons could result in equipment malfunction, property damage, personal injury and/or death.

The information contained in this manual is intended for use by a qualified service technician familiar with safety procedures and equipped with proper tools and test instruments.

Installation must conform with local building codes and with the Natural Fuel Gas Code (NFCG) NFPA 54/ANSI Z223.1, and National standards of Canada CAN/CSA-B149.1 and .2 Natural Gas and Propane Installation Codes.

WARNING

ELECTRICAL SHOCK HAZARD

A

A

Failure to follow this warning could cause personal injury or death.

Before performing service or maintenance operations on unit, always turn off main power switch to unit and install lockout tag. Unit may have more than one power switch.

WARNING

CARBON MONOXIDE POISONING AND FIRE HAZARD

Failure to follow safety warnings could result in personal injury, death, and/or property damage.

This furnace is not designed for use in mobile homes, trailers or recreational vehicles.

CUT HAZARD

Failure to follow this caution may result in damage personal injury.

Sheet metal parts may have sharp edges or burrs. Use care and wear appropriate protective clothing, safety glasses and gloves when handling parts and servicing furnaces.

START-UP CHECK SHEET For ECM Models (F/G)9MXE

(This sheet is optional. Keep for future reference.)

Date of Start-Up:		nd Adjustments
Dealer Name:	Section).	
Address:	Heating Check	
City, State(Province), Zip or Postal Code:	Measured Line Pressure During Heat	
	Measured Manifold Pressure: Heat	
Phone:	Temperature of Supply Air: Heat	
Owner Name:	Temperature of Return Air:	
Address:	Temperature Rise (Supply – Return): Heat	
City, State(Province), Zip or Postal Code:	In Rise Range (see furnace rating plate)?	
	Static Pressure (Ducts) High Heat: Supply	
	Return	
Model Number:	The Blower Speed Tap used for: Heat	
Serial Number:	- Optional Check: CO?	
Setup Checks	CO2?	
Check the box when task is complete.	Cooling Check	
All Electrical Connections Tight?	Temperature of Supply Air:	
Have hoses been relocated for furnace U/D/H application	n? Temperature of Return Air: Temperature Difference:	
Condensate Drain Connected?	Static Pressure (Ducts) Cooling: Supply	
Condensate Drain Trapped?	Return	
Manual Gas Shut-off Upstream of Furnace/Drip Leg	The Blower Speed Tap used for: Cooling Dealer Comments:	
Gas Valve turned ON?		
Type of Gas: Natural: 🖵 Propane: 🖵		
Filter Type and Size:		
Check in how the Plawer OFF Delay, Jumper Heating Dec	aition	

Check in box the Blower OFF Delay Jumper Heating Position for Fan "Time **OFF**" Setting:

1 8	and 2	2 ar	nd 3	3 ar	nd 4	5 ar	nd 6
	90		120		150		180

START-UP, ADJUSTMENT, AND SAFETY CHECK

General

1. Furnace must have a 115-v power supply properly connected and grounded.

NOTE: Proper polarity must be maintained for 115-v wiring. Control status indicator light flashes code 10 and furnace does not operate if polarity is incorrect.

- Thermostat wire connections at terminals R, W, G, and Y/Y2 must be made at 24-v terminal block on furnace control.
- 3. Natural gas service pressure must not exceed 0.5 psig (14- in. w.c.), but must be no less than 0.16 psig (4.5-in. w.c.).
- 4. Blower door must be in place to complete 115-v electrical circuit to furnace.

UNIT OPERATION HAZARD

Failure to follow this caution may result in intermittent unit operation or performance satisfaction.

These furnaces are equipped with a manual reset limit switch in burner assembly. This switch opens and shuts off power to the gas valve if an overheat condition (flame rollout) occurs in burner assembly. Correct inadequate combustion-air supply or improper venting condition before resetting switch. DO NOT jumper this switch.

Before operating furnace, check flame rollout manual reset switch for continuity. If necessary, press button to reset switch.

EAC-1 terminal is energized whenever blower operates. HUM terminal is only energized when blower the gas valve relay closes during a call for heat.

Prime Condensate Trap with Water


UNIT OPERATION HAZARD

Â

Failure to follow this caution may result in intermittent unit operation or performance satisfaction.

Condensate trap must be PRIMED or proper draining may not occur. The condensate trap has two internal chambers which can ONLY be primed by pouring water into the inducer drain side of condensate trap.

- 1. Remove upper and middle collector box drain plugs opposite of the condensate trap. (See Figure 1)
- 2. Connect field-supplied 1/2-in. (13 mm) OD tube to upper collector box drain connection.
- 3. Insert field-supplied funnel into tube.
- 4. Pour one quart of water into funnel/tube. Water should run through collector box, overfill condensate trap, and flow into open field drain.
- 5. Remove funnel; replace collector box drain plug.
- 6. Connect field-supplied 1/2-in. (13 mm) OD tube to middle collector box drain port.
- 7. Pour one quart of water into funnel/tube. Water should run through collector box, overfill condensate trap, and flow into open field drain.
- 8. Remove funnel and tube from collector box and replace collector box drain plug.

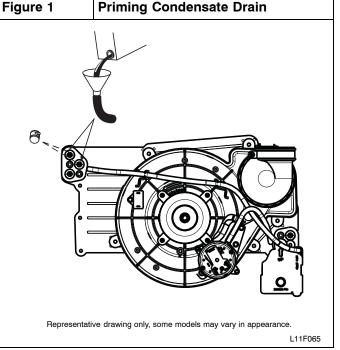

Purge Gas Lines

If not previously done, purge the lines after all connections have been made and check for leaks.

WARNING

FIRE OR EXPLOSION HAZARD

Failure to follow this warning could result in personal injury, death, and/or property damage.

Never purge a gas line into a combustion chamber. Never test for gas leaks with an open flame. Use a commercially available soap solution made specifically for the detection of leaks to check all connections. A fire or explosion may result causing property damage, personal injury or loss of life.

Adjustments

WARNING

FIRE HAZARD

Failure to follow this warning could result in personal injury, death and/or property damage.


DO NOT bottom out gas valve regulator adjusting screw. This can result in unregulated manifold pressure and result in excess overfire and heat exchanger failures.

CAUTION

FURNACE DAMAGE HAZARD

Failure to follow this caution may result in reduced furnace life.

DO NOT redrill orifices. Improper drilling (burrs, out-of-round holes, etc.) can cause excessive burner noise and misdirection of burner flames. This can result in flame impingement of heat exchangers, causing failures. (See **Figure 2**)

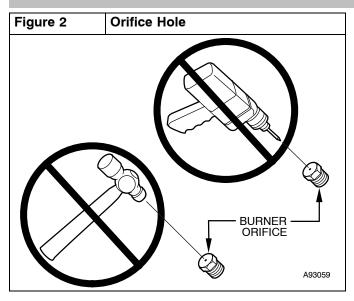

For proper operation and long term reliability the furnace input rate must be within +/- 2 percent of input rate on furnace rating plate.

The gas input rate on rating plate is for installation at altitudes up to 2000 ft. (610 M)

In the U.S.A., the input rating for altitudes above 2000 ft. (610 M) must be reduced by 2 percent for each 1000 ft. (305 M) above sea level refer to Table 1.

In Canada, the input rating must be derated by 5 percent for altitudes of 2000 ft. (610 M) to 4500 ft. (1372 M) above sea level.

To adjust manifold pressure to obtain the proper input rate, first, determine if the furnace has the correct orifice installed. At higher altitudes or different gas heat contents, it may be necessary to change the factory orifice to a different orifice. Tables have been provided in the furnace Service and Technical Manual to match the required orifice to the manifold pressure to the heat content and specific gravity of the gas. To do this:

- a. Obtain average yearly gas heat value (at installed altitude) from local gas supplier.
- b. Obtain average yearly gas specific gravity from local gas supplier.
- c. Find installation altitude range for your installation in the manifold pressure tables in Table 3.
- d. Find closest natural gas heat value and specific gravity in Table 3.
- e. Follow heat value and specific gravity lines to point of intersection to find orifice size and manifold pressure setting for proper operation.
- f. Check and verify burner orifice size in furnace. NEVER ASSUME ORIFICE SIZE. ALWAYS CHECK AND VERIFY.
- g. Replace orifice with correct size, if required by Table 3. Use only factory-supplied orifices. See EXAMPLE.

EXAMPLE: 0 - 2000 ft. (0 - 609.6M) altitude

Heating value = 1050 Btu/cu ft.

Specific gravity = 0.62 Therefore: Orifice No. 44

Manifold pressure: 3.4-in. w.c.

* Furnace is shipped with No. 44 orifices. In this example, all main burner orifices are the correct size and do not need to be changed to obtain proper input rate.

Gas Furnace: (F/G)9MXE

- 1. Adjust manifold pressure to obtain input rate. (See Figure 3)
 - a. Turn gas valve ON/OFF switch to OFF.
 - b. Remove manifold pressure tap plug from gas valve.
 - c. Connect a water column manometer or similar device to manifold pressure tap.
 - d. Turn gas valve ON/OFF switch to ON.
 - e. Manually close blower door switch.
 - f. Jumper R and W thermostat connections on control to start furnace. (See Figure 4)

Table 1 Altitude Derate Multiplier for U.S.A.										
ALTITUDE FT. (M)	PERCENT OF DERATE	DERATE MULTIPLIER FACTOR*								
0–2000 (0–610)	0	1.00								
2001–3000 (610–914)	4–6	0.95								
3001–4000 (914–1219)	6–8	0.93								
4001–5000 (1219–1524)	8–10	0.91								
5001–6000 (1524–1829)	10–12	0.89								
6001–7000 (1829–2134)	12–14	0.87								
7001–8000 (2134–2438)	14–16	0.85								
8001–9000 (2438–2743)	16–18	0.83								
9001–10,000 (2743–3048)	18–20	0.81								


* Derate multiplier factors are based on midpoint altitude for altitude range.

NOTE: For Canadian altitudes of 2000 to 4500 ft. (610 to 1372 M), use USA altitudes of 2001 to 3000 ft. (610 to 914 M)

NOTE: If orifice hole appears damaged or it is suspected to have been redrilled, check orifice hole with a numbered drill bit of correct size. Never redrill an orifice. A burr-free and squarely aligned orifice hole is essential for proper flame characteristics.

g. Remove regulator adjustment cap from gas valve pressure regulator (See Figure 3) and turn adjusting screw (3/16 or smaller flat-tipped screwdriver) counterclockwise (out) to decrease input rate or clockwise (in) to increase input rate.

NOTE: DO NOT set manifold pressure less than 3.2 in. w.c. or more than 3.8 in. w.c. for natural gas. If manifold pressure is outside this range, change main burner orifices to obtain manifold pressure in this range.

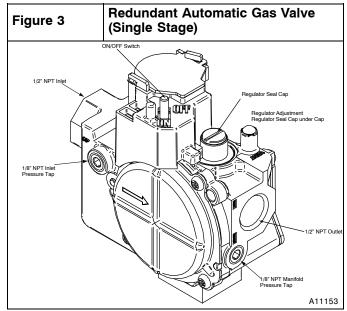

- h. When correct input is obtained, replace cap that conceal gas valve regulator adjustment screw. Main burner flame should be clear blue, almost transparent (See **Figure 13**)
- i. Re-install manifold pressure tap plug to gas valve.
- j. Remove jumper R to W.

WARNING

FIRE HAZARD

<u>, i</u>

Failure to follow this warning could result in personal injury, death, and/or property damage.

Re-install manifold pressure tap plug in gas valve to prevent gas leak.

- 2. Verify natural gas input rate by clocking meter.
 - a. Turn off all other gas appliances and pilots served by the meter.
 - b. Jumper R to W.
 - c. Run furnace for 3 minutes.
 - d. Measure time (in sec) for gas meter to complete 1 revolution and note reading. The 2 or 5 cubic feet dial provides a more accurate measurement of gas flow.
 - e. Refer to Table 2 for cubic ft. of gas per hr.
 - f. Multiply gas rate cu ft./hr by heating value (Btuh/cu ft.) to obtain input. If clocked rate does not match required input from Step 1, increase manifold pressure to increase input or decrease manifold pressure to decrease input. Repeat steps b through e until correct input is achieved. Re-install regulator seal cap on gas valve.

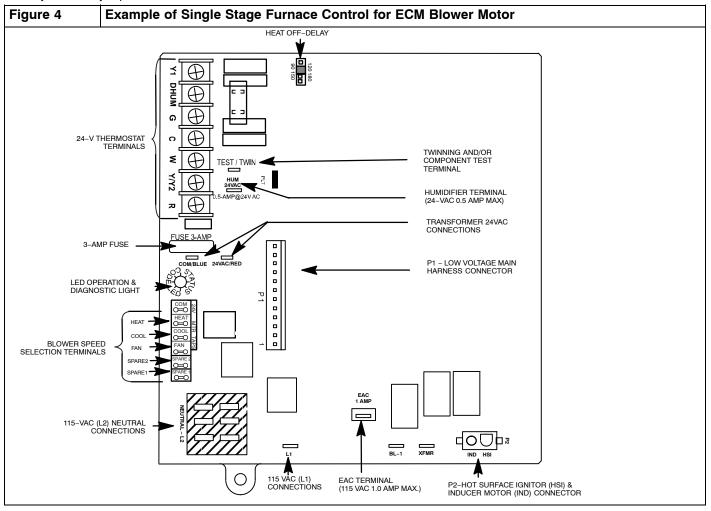


Table 2	Gas Rate (
SECONDS FOR 1 REVOLUTION		ZE OF TEST I		SECONDS FOR 1 REVOLUTION	SIZE OF TEST DIAL				
	1 Cu Ft.	2 Cu Ft.	5 Cu Ft.		1 Cu Ft.	2 Cu Ft.	5 Cu Ft. 360		
10	360	720	1800	50	72	144			
11	327	655	1636	51	71	141	355		
12	300	600	1500	52	69	138	346		
13	277	555	1385	53	68	136	340		
14	257	514	1286	54	67	133	333		
15	240	480	1200	55	65	131	327		
16	225	450	1125	56	64	129	321		
17	212	424	1059	57	63	126	316		
18	200	400	1000	58	62	124	310		
19	189	379	947	59	61	122	305		
20	180	360	900	60	60	120	300		
21	171	343	857	62	58	116	290		
22	164	327	818	64	56	112	281		
23	157	313	783	66	54	109	273		
24	150	300	750	68	53	106	265		
25	144	288	720	70	51	103	257		
26	138	277	692	72	50	100	250		
27	133	267	667	74	48	97	243		
28	129	257	643	76	47	95	237		
29	124	248	621	78	46	92	231		
30	120	240	600	80	45	90	225		
31	116	232	581	82	44	88	220		
32	113	225	563	84	43	86	214		
33	109	218	545	86	42	84	209		
34	106	212	529	88	41	82	205		
35	103	206	514	90	40	80	200		
36	100	200	500	92	39	78	196		
37	97	195	486	94	38	76	192		
38	95	189	474	96	38	75	188		
39	92	185	462	98	37	74	184		
40	90	180	450	100	36	72	180		
41	88	176	439	102	35	71	178		
42	86	172	429	104	35	69	173		
43	84	167	419	106	34	68	170		
44	82	164	409	108	33	67	167		
45	80	160	400	110	33	65	164		
46	78	157	391	112	32	64	161		
47	76	153	383	116	31	62	155		
48	75	150	375	120	30	60	150		
49	73	147	367						

Table 3

Orifice Size and Manifold Pressure (in. w.c.) for Gas Input Rate – Single Stage

	(TABULATED I	DATA BASED ON		IGLE-STAC			1000 FT (3	305M) ABOV	/E SEA LE	VEL)	
1	ALTITUDE	AVG. GAS			SPECIF	IC GRAVITY	OF NATU	JRAL GAS			
	RANGE							0.62			
		AT ALTITUDE	Orifice	Manifold	Orifice	Manifold	Orifice	Manifold	Orifice	Manifold	
	ft (m)	(Btu/cu ft)	No.	Pressure	No.	Pressure	No.	Pressure	No.	Pressure	
		900	43	3.8	42	3.2	42	3.3	42	3.4	
a D	0	925	43	3.6	43	3.7	43	3.8	42	3.2	
ad	(0)	950	43	3.4	43	3.5	43	3.6	43	3.7	
and Canada		975	44	3.7	44	3.8	43	3.4	43	3.6	
р р	to	1000	44	3.5	44	3.6	44	3.8	43	3.4	
. ar		1025	44	3.3	44	3.5	44	3.6	44	3.7	
U.S.A.	2000	1050	44	3.2	44	3.3	44	3.4	44	3.5	
Ľ.	(610)	1075	45	3.7	45	3.8	44	3.3	44	3.4	
	(010)	1100	46	3.7	46	3.8	45	3.8	44	3.2	
	U.S.A.	800	42	3.4	42	3.5	42	3.6	42	3.7	
	2001 (611)	825	43	3.8	42	3.3	42	3.4	42	3.5	
ada		825 850	43	3.6	42	3.3 3.7	42 42	3.4 3.2	42	3.3	
anś	to						42 43				
and Canada	3000 (914)	875	43	3.4	43	3.5		3.7	43	3.8	
an	0	900	44	3.7	44	3.8	43	3.5	43	3.6	
U.S.A.	Canada	925	44	3.5	44	3.6	44	3.8	43	3.4	
U.S	2001 (611)	950	44	3.3	44	3.4	44	3.6	44	3.7	
_	to	975	44	3.2	44	3.3	44	3.4	44	3.5	
	4500 (1372)	1000	44	3.0	44	3.1	44	3.2	44	3.3	
		775	42	3.3	42	3.4	42	3.5	42	3.6	
	3001	800	43	3.8	42	3.2	42	3.3	42	3.4	
л <mark>у</mark>	(915)	825	43	3.6	43	3.7	43	3.8	42	3.2	
U.S.A. Only	to	850	44	3.8	43	3.5	43	3.6	43	3.7	
S.A		875	44	3.6	44	3.7	43	3.4	43	3.5	
Ľ.	4000	900	44	3.4	44	3.5	44	3.7	44	3.8	
	(1219)	925	44	3.2	44	3.4	44	3.5	44	3.6	
		950	44	3.1	44	3.2	44	3.3	44	3.4	
		750	42	3.3	42	3.4	42	3.5	42	3.6	
	4001	775	43	3.7	43	3.8	42	3.3	42	3.4	
È	(1220)	800	43	3.5	43	3.6	43	3.7	43	3.8	
U.S.A. Only		825	44	3.8	43	3.4	43	3.5	43	3.6	
À.	to	850	44	3.5	44	3.7	44	3.8	43	3.4	
Ū.	5000	875	44	3.3	44	3.5	44	3.6	44	3.7	
	(1524)	900	44	3.2	44	3.3	44	3.4	44	3.5	
		925	44	3.0	44	3.1	44	3.2	44	3.3	
		725	42	3.2	42	3.3	42	3.4	42	3.5	
	5001	750	43	3.7	43	3.8	42	3.2	42	3.3	
≥	(1525)	775	43	3.4	43	3.5	43	3.7	43	3.8	
U.S.A. Only	(800	44	3.7	44	3.8	43	3.4	43	3.5	
Ķ	to	825	44	3.5	44	3.6	43 44	3.7	43 44	3.8	
J.S.	6000	850	44	3.3	44	3.4	44	3.5	44	3.6 3.6	
_	(1829)	830 875	44	3.3 3.1	44	3.4 3.2	44 44	3.5 3.3	44	3.6 3.4	
	(1029)	900	44	2.9	44	3.2 3.0	44 44	3.3 3.1	44	3.4 3.2	
	6004	675 700	42	3.4	42	3.5	42	3.6	42	3.8	
~	6001	700	42	3.2	42	3.3	42	3.4	42	3.5	
U.S.A. Only	(1830)	725	43	3.6	43	3.7	43	3.8	42	3.3	
ں خ	to	750	43	3.4	43	3.5	43	3.6	43	3.7	
S.		775	44	3.6	44	3.7	43	3.4	43	3.5	
Ċ	7000	800	44	3.4	44	3.5	44	3.6	44	3.7	
	(2133)	825	44	3.2	44	3.3	44	3.4	44	3.5	
		850	44	3.0	44	3.1	44	3.2	44	3.3	

A11253A

Table 3 (CONT.) Orifice Size and Manifold Pressure (in. w.c.) for Gas Input Rate – Single Stage

	SINGLE-STAGE FURNACE (TABULATED DATA BASED ON 20,000 BTUH PER BURNER, DERATED 2%/1000 FT (305M) ABOVE SEA LEVEL)											
	ALTITUDE AVG. GAS SPECIFIC GRAVITY OF NATURAL GAS									,		
	RANGE	HEAT VALUE	().58	().60	().62	().64		
		AT ALTITUDE	Orifice	Manifold	Orifice	Manifold	Orifice	Manifold	Orifice	Manifold		
	ft (m)	(Btu/cu ft)	No.	Pressure	No.	Pressure	No.	Pressure	No.	Pressure		
		650	42	3.4	42	3.5	42	3.6	42	3.7		
	7001	675	43	3.8	42	3.2	42	3.3	42	3.4		
Only	(2134)	700	43	3.5	43	3.7	43	3.8	42	3.2		
	to	725	44	3.8	43	3.4	43	3.5	43	3.6		
U.S.A.	10	750	44	3.5	44	3.7	44	3.8	43	3.4		
Ū.	8000	775	44	3.3	44	3.4	44	3.5	44	3.7		
	(2438)	800	44	3.1	44	3.2	44	3.3	44	3.4		
		825	44	2.9	44	3.0	44	3.1	44	3.2		
		625	42	3.4	42	3.5	42	3.6	42	3.7		
~	8001	650	43	3.8	42	3.2	42	3.3	42	3.4		
Only	(2439)	675	43	3.5	43	3.6	43	3.7	42	3.2		
A.	to	700	44	3.7	43	3.4	43	3.5	43	3.6		
U.S.A.	10	725	44	3.5	44	3.6	44	3.7	44	3.8		
	9000	750	44	3.3	44	3.4	44	3.5	44	3.6		
	(2743)	775	44	3.0	44	3.2	44	3.3	44	3.4		
	9001	600	42	3.3	42	3.4	42	3.6	42	3.7		
Only	(2744)	625	43	3.7	42	3.2	42	3.3	42	3.4		
	to	650	43	3.5	43	3.6	43	3.7	43	3.8		
U.S.A.	10	675	44	3.7	44	3.8	43	3.4	43	3.5		
Ŭ.	10000	700	44	3.4	44	3.5	44	3.7	44	3.8		
	(3048)	725	44	3.2	44	3.3	44	3.4	44	3.5		

* Orifice numbers shown in **BOLD** are factory-installed.

Adjust Temperature Rise

NOTE: Blower door must be installed when taking temperature rise reading. Leaving blower door off will result in incorrect temperature measurements.

FURNACE DAMAGE HAZARD

Failure to follow this caution may result in:

- Overheating the heat exchangers or condensing flue gases in heat exchanger areas not designed for condensate.
- Shortened furnace life.
- Component damage.

Temperature rise must be within limits specified on furnace rating plate. Recommended operation is at midpoint of rise range or slightly above.

This furnace must operate within the temperature rise ranges specified on the furnace rating plate. Determine the air temperature as follows:

- a. Place duct thermometers in return and supply ducts as close to furnace as possible. Be sure thermometers do not "see" heat exchangers so that radiant heat does not affect thermometer readings. This is particularly important with straight run ducts.
- b. When thermometer readings stabilize, subtract return-air temperature from supply-air temperature to determine temperature rise.

If the temperature rise is outside this range, check the following:

a. Gas input for gas heat operation.

b. Derate for altitude if applicable.

- c. Return and supply ducts for excessive restrictions causing static pressures greater than 0.50-in. w.c.
- d. Adjust temperature rise by adjusting blower speed.
- Increase blower speed to reduce temperature rise.
- Decrease blower speed to increase temperature rise.



ELECTRICAL OPERATION HAZARD

Failure to follow this warning could result in personal injury or death.

Disconnect 115v electrical power before changing speed tap.

(Read following caution before changing taps).

CAUTION

UNIT DAMAGE HAZARD

Z]`

Υ!`

To avoid operating outside the rise range and avoid component damage:

Refer to the Air Delivery Tables to determine which airflows and settings are allowed for proper heating airflow. DO NOT use the highlighted settings for Heating airflow. The highlighted settings are to be used for Cooling ONLY.

Change the blower speed taps as required to maintain proper temperature rise for Heating and Cooling as described above. To change blower motor speed selections for heating mode, remove blower motor lead from control HEAT terminal. (See **Figure 4**) Select desired blower motor speed lead from one of

440 04 4311 03

A11253B

the other motor leads and relocate it to HEAT terminal. Reconnect original lead on SPARE terminal.

Adjust Blower Off Delay (Heat Mode)

The blower off delay has four adjustable settings from 90 sec to 180 sec. (See **Table 4**) The blower off delay jumpers are located on the furnace control (See **Figure 4**) To change the blower off delay setting, move the jumper from one set of pins on the control to the pins used for the desired blower off delay. Factory blower off delay setting is 120 sec.

Table 4	Blower Off Delay Jumper Positions										
PINS	1 AND 2	2 AND 3	3 AND 4	4 AND 5							
Time (in sec.)	90	120	150	180							

Adjust Cooling Airflow


The cooling airflow can be set from the remaining blower speed taps. Refer to the Air Delivery Tables in these instructions.

Adjust Continuous Fan Airflow

The Continuous Fan airflow can be set from the remaining blower speed taps. Refer to the Air Delivery Tables in these instructions.

Adjust Thermostat Heat Anticipator

When using a non-electronic thermostat, the thermostat heat anticipator must be set to match the amp draw of the electrical components in R-W circuit. Accurate amp draw readings can be obtained at the thermostat subbase terminals R and W. **Figure 5** illustrates the easy method of obtaining actual amp draw. The amp reading should be taken after blower motor has started and furnace is heating. Connect ammeter wires as shown in **Figure 5**. The thermostat anticipator should not be in the circuit while measuring current. If thermostat has no subbase, the thermostat must be disconnected from R and W wires during current measurement. See thermostat manufacturer's instructions for adjusting heat anticipator and for varying heating cycle length. For an electronic thermostat, set cycle rate for 3 cycles per hour.

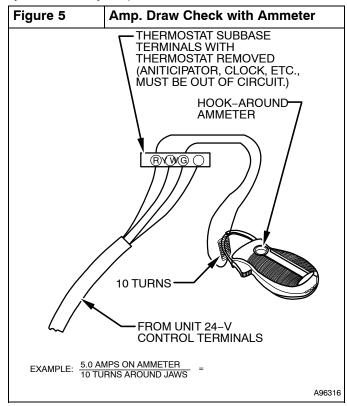

Check Safety Controls

The flame sensor, gas valve, and pressure switch were all checked in the Start-up procedure section as part of normal operation.

1. Check Main Limit Switch

This control shuts off combustion system and energizes air-circulating blower motor, if furnace overheats. By using this method to check limit control, it can be established that limit is functioning properly and will operate if there is a restricted return-air supply or motor failure. If limit control does not function during this test, cause must be determined and corrected.

- a. Run furnace for at least 5 minutes.
- b. Gradually block off return air with a piece of cardboard or sheet metal until the limit trips.
- c. Unblock return air to permit normal circulation.
- d. Burners will re-light when furnace cools down.
- 2. Check Pressure Switch(es)

This control proves operation of the draft inducer blower.

- a. Turn off 115-v power to furnace.
- b. Disconnect inducer motor lead wires from wire harness.
- c. Turn on 115-v power to furnace.
- d. Set thermostat to "call for heat" and wait 1 minute. When low pressure switch is functioning properly, hot surface igniter should **NOT** glow and control diagnostic light flashes a status code 3. If hot surface igniter glows when inducer motor is disconnected, shut down furnace immediately.
- e. Determine reason low pressure switch did not function properly and correct condition.
- f. Turn off 115-v power to furnace.
- g. Reconnect inducer motor wires, replace door, and turn on 115-v power.
- h. Blower will run for 90 seconds before beginning the call for heat again.
- i. Furnace should ignite normally.

Checklist

- 1. Put away tools and instruments. Clean up debris.
- 2. Verify that the jumper is removed from the TEST/TWIN terminal. Verify that there is nothing plugged into the PLT connector.

NOTE: If there is a jumper connector plugged into PLT, remove it and discard. (See **Figure 4**)

- 3. Verify that the Heat Off Delay jumpers are set as desired. (See **Figure 4**)
- 4. Verify that the blower and control ("Main") doors are properly installed.
- 5. Verify that the Status LED glows. If not, check that the power supply is energized and that the blower door is secure. (See **Figure 14**) to interpret diagnostic codes.
- 6. Cycle test furnace with room thermostat to be sure that it operates properly with the room thermostat. Check all modes including Heat, Cool and Fan.
- 7. Check operation of accessories per manufacturer's instructions.
- 8. Review Home Owner's Information with owner.
- 9. Attach entire literature packet to furnace.

Table 5		COOLI	COOLING AIR DELIVERY - CFM (With Filter 1)											
UNIT	RETURN-AIR	SPEED			EXTERNA	L STATIC	PRESSUR	E (IN.W.C.)						
SIZE	CONNECTION	TAPS ^{2,3}	0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1.0		
		Gray	1120	1080	1030	980	925	875	820	760	690	630		
		Yellow	880	845	810	780	740	710	680	640	615	570		
0401410	SIDE/BOTTOM	Blue	695	665	620	575	535	495	455	420	370	280		
		Orange	640	595	540	495	460	420	370	310	260	230		
		Red	570	525	475	425	385	330	255	220	_ ⁶	_ 6		
		Gray	1720	1670	1620	1565	1505	1440	1375	1295	1220	1135		
		Yellow	1325	1285	1255	1220	1185	1145	1115	1075	1040	1000		
0601714	SIDE/BOTTOM	Blue	1010	970	925	875	835	785	745	690	660	620		
		Orange	1160	1115	1080	1045	1000	960	920	875	840	785		
		Red	785	715	655	595	530	490	435	385	340	285		
	SIDE/BOTTOM	Gray	1810	1770	1720	1665	1610	1540	1475	1400	1315	1235		
		Yellow	1535	1500	1475	1435	1405	1370	1340	1310	1245	1160		
0801716		Blue	1380	1340	1305	1270	1240	1200	1165	1130	1090	1050		
		Orange	1180	1130	1095	1060	1015	975	935	895	850	800		
		Red	1100	1045	1010	970	920	885	845	790	745	690		
		Gray	2290	2225	2155	2090	2015	1930	1845	1750	1640	1515		
	DOTTOM	Yellow	1810	1760	1725	1685	1640	1600	1555	1520	1480	1415		
0802120	BOTTOM or TWO-SIDES ^{4, 5}	Blue	1385	1340	1285	1240	1200	1140	1090	1050	995	950		
	TWO-GIDEO	Orange	1560	1520	1475	1430	1385	1335	1295	1240	1200	1150		
		Red	1055	985	910	860	795	750	680	615	565	495		
		Gray	2340	2295	2250	2195	2110	2030	1935	1835	1725	1605		
	DOTTOM	Yellow	1950	1900	1855	1800	1755	1705	1655	1605	1560	1485		
1002120	BOTTOM or TWO-SIDES ^{4, 5}	Blue	1750	1700	1650	1605	1555	1500	1455	1395	1350	1300		
	100-3IDL3 ···	Orange	1570	1520	1460	1410	1350	1300	1240	1195	1140	1095		
		Red	1350	1280	1225	1155	1105	1045	1000	950	895	830		
		Gray	2275	2230	2185	2130	2055	1950	1825	1710	1610	1500		
	DOTTOM	Yellow	1875	1820	1770	1720	1660	1600	1550	1505	1450	1390		
1202422	BOTTOM or TWO-SIDES ^{4, 5}	Blue	2170	2125	2075	2025	1975	1900	1790	1695	1590	1470		
		Orange ³	1475	1420	1350	1280	1215	1165	1105	1050	995	930		
		Red ³	1625	1565	1505	1445	1385	1325	1275	1225	1170	1130		

NOTE:

1. A filter is required for each return-air inlet. Airflow performance includes a 3/4 in. (19 mm) washable filter media such as contained in factory-authorized accessory filter rack. See accessory list. To determine airflow performance without this filter, assume an additional 0.1 in. W.C. available external static pressure.

2. ADJUST THE BLOWER SPEED TAPS AS NECESSARY FOR THE PROPER AIR TEMPERATURE RISE FOR EACH INSTALLATION.

3. Shaded areas indicate that this airflow range is BELOW THE RANGE ALLOWED FOR HEATING OPERATION. THESE AIRFLOW RANGES MAY ONLY BE USED FOR COOLING.

4. Airflows over 1800 CFM require bottom return, two-side return, or bottom and side return. A minimum filter size of 20" x 25" is required.

5. For upflow applications, air entering from one side into both the side of the furnace and a return air base counts as a side and bottom return.

6. The "-" entry indicates an unstable operating condition.

SERVICE AND MAINTENANCE PROCEDURES

A WARNING

FIRE, INJURY OR DEATH HAZARD

Failure to follow this warning could result in personal injury, death and/or property damage.

The ability to properly perform maintenance on this equipment requires certain knowledge, mechanical skills, tools, and equipment. If you do not possess these, do not attempt to perform any service and maintenance on this equipment other than those procedures recommended in the Owner's Manual.

ENVIRONMENTAL HAZARD

Failure to follow this caution may result in environmental pollution.

Remove and recycle all components or materials (i.e. oil, refrigerant, control board, etc.) before unit final disposal.

WARNING

ELECTRICAL SHOCK, FIRE OR EXPLOSION HAZARD

Failure to follow this warning could result in personal injury or death, or property damage.

Before installing, modifying, or servicing system, main electrical disconnect switch must be in the OFF position and install a lockout tag. There may be more than one disconnect switch. Lock out and tag switch with a suitable warning label. Verify proper operation after servicing.

A CAUTION


ELECTRICAL OPERATION HAZARD

Failure to follow this caution may result in improper furnace operation or failure of furnace.

Label all wires prior to disconnection when servicing controls. Wiring errors can cause improper and dangerous operation.

General

These instructions are written as if the furnace is installed in an upflow application. An upflow furnace application is where the blower is located below the combustion and controls section of the furnace, and conditioned air is discharged upward. Since this furnace can be installed in any of the 4 positions shown in **Figure 6**, you must revise your orientation to component location accordingly.

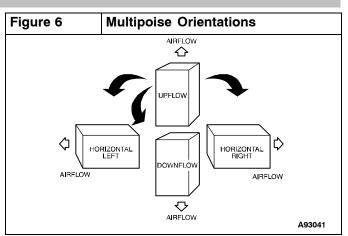

Electrical Controls and Wiring



Failure to follow this warning could result in personal injury or death.

There may be more than one electrical supply to the furnace. Check accessories and cooling unit for additional electrical supplies that must be shut off during furnace servicing. Lock out and tag switch with a suitable warning label.

The electrical ground and polarity for 115–V wiring must be properly maintained. Refer to **Figure 7** for field wiring information and to **Figure 15** for furnace wiring information.

NOTE: If the polarity is not correct, the STATUS LED on the control will flash code 10 and prevent the furnace from heating. The control system also requires an earth ground for proper operation of the control and flame-sensing electrode.

The 24–V circuit contains an automotive–type, 3–amp. fuse located on the control. (See **Figure 4**) Any shorts of the 24–V wiring during installation, service, or maintenance will cause this fuse to blow. If fuse replacement is required, use ONLY a 3–amp. fuse. The control LED display will be off when fuse needs to be replaced.

Troubleshooting


Refer to the service label. (See Figure 14-Service Label)

The Troubleshooting Guide – Flow Chart (See **Figure 16**) can be a useful tool in isolating furnace operation problems. Beginning with the word "Start," answer each question and follow the appropriate arrow to the next item.

The Guide – Flow Chart will help to identify the problem or failed component. After replacing any component, verify correct operation sequence.

Proper instrumentation is required to service electrical controls. The control in this furnace is equipped with a Status Code LED (Light–Emitting Diode) to aid in installation, servicing, and troubleshooting. Status codes can be viewed at the indicator in blower door. The green furnace control LED is either ON heartbeat, off or a code composed of 1 or 2 digits. The first digit is the number of short flashes, the second digit is the number of long flashes.

Figure 7

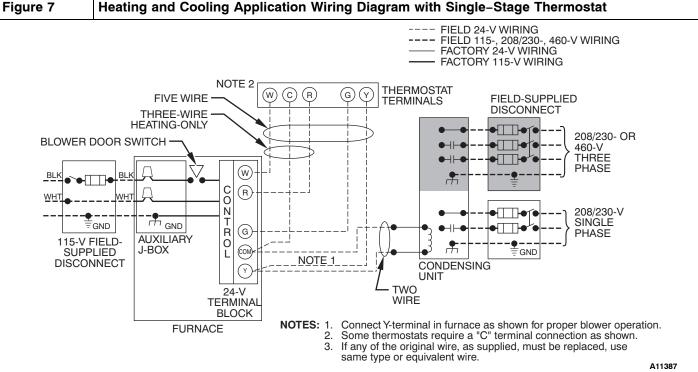

For an explanation of status codes, refer to service label located on blower door or Figure 14, and the troubleshooting guide which can be obtained from your distributor.

Retrieving Stored Fault Codes

NOTE: Fault codes cannot be retrieved if a thermostat signal (24-V on W, Y, G, etc.) is present, or if any delays such as blower off-delays are active.

The stored status codes will NOT be erased from the control memory when 115- or 24-V power is interrupted. See the Service Label (See Figure 14) for more information. The most recent fault code may be retrieved as follows:

- 1. Leave 115-V power connected to furnace.
- 2. Observe the status LED through the blower door (the lower door on upflow applications) indicator. Refer to the Service Label (See Figure 14) to interpret the LED.
- 3. Remove the Main/Control door (the upper door on upflow installations).
- 4. BRIEFLY disconnect and reconnect ONE of the main limit wires.
- 5. The LED will flash the last stored fault code. Refer to the Service Label (See Figure 14) to interpret the LED.
- 6. A component test sequence will follow.
- 7. Reinstall the Main/Control door.

Component Self-Test

NOTE: The furnace control component test allows all components to run for a short time; except the gas valve and humidifier terminal HUM 24 VAC are not energized. The EAC-1 terminal is energized when the blower is energized. This feature helps diagnose a system problem in case of a component failure. The component test feature will not operate if any thermostat signal is present at the control and not until all time delays are completed.

To begin Component Self-Test:

- 1. Remove blower access door.
- 2. Disconnect the thermostat R lead from furnace control.

3. Manually close blower door switch.

Caution must be taken when manually closing this switch for service purposes.

Gas Furnace: (F/G)9MXE

Ą WARNING

ELECTRICAL SHOCK HAZARD

Failure to follow this warning could result in personal injury, or death.

Blower access door switch opens 115-V power to control. No component operation can occur unless switch is closed. Caution must be taken when manually closing this switch for service purposes.

4. For approximately 2 sec, short (jumper) the C terminal on control to the TEST/TWIN 3/16-in. (5 mm) quick-connect terminal on control until the LED goes off. Remove jumper from terminals. (See Figure 4)

NOTE: If TEST/TWIN and C terminals are jumpered longer than 2 sec, LED will flash code 10 and ignore component test reauest.

Component test sequence is as follows:

- a. LED will display previous status code 4 times.
- b. Inducer motor starts and continues to run until Step g of component test sequence.
- c. After 7 seconds the hot surface igniter is energized for 15 sec., then off.
- d. Blower motor operates on Continuous-FAN speed for 10 sec.
- e. Blower motor operates on HEAT speed for 10 sec.
- f. Blower motor operates on COOL speed for 10 sec.
- Inducer motor stops.
- 5. Reconnect R lead to furnace control, remove tape from blower door switch, and re-install blower door.
- 6. Verify furnace shut down by lowering thermostat setting below room temperature.

7. Verify that furnace restarts by raising thermostat setting above room temperature.

Care and Maintenance

WARNING

FIRE OR EXPLOSION HAZARD

Failure to follow this warning could result in personal injury, death and/or property damage.

Never store flammable or combustible materials on, near, or in contact with the furnace, such as:

- Spray or aerosol cans, rags, brooms, dust mops, vacuum cleaners, or other cleaning tools.
- Soap powders, bleaches, waxes or other cleaning compounds, plastic or plastic containers, gasoline, kerosene, cigarette lighter fluid, dry cleaning fluids, or other volatile fluids.
- 3. Paint thinners and other painting compounds, paper bags, or other paper products. Exposure to these materials could lead to corrosion of the heat exchangers.

For continuing high performance and to minimize possible furnace failure, periodic maintenance must be performed on this furnace. Consult your local dealer about proper frequency of maintenance and the availability of a maintenance contract.

WARNING

ELECTRICAL SHOCK AND FIRE HAZARD

Failure to follow this warning could result in personal injury, death, and/or property damage.

Turn off the gas and electrical supplies to the furnace and install lockout tag before performing any maintenance or service. Follow the operating instructions on the label attached to the furnace.

WARNING

CARBON MONOXIDE POISONING AND FIRE HAZARD

Failure to follow this warning could result in personal injury, death and/or property damage.

Never operate furnace without a filter or filtration device installed. Never operate a furnace with filter or filtration device access doors removed.

CUT HAZARD

A

Failure to follow this caution may result in personal injury.

Sheet metal parts may have sharp edges or burrs. Use care and wear appropriate protective clothing, safety glasses and gloves when handling parts, and servicing furnaces.

The minimum maintenance on this furnace is as follows:

- 1. Check and clean air filter each month or more frequently if required. Replace if torn.
- 2. Check blower motor and wheel for cleanliness each heating and cooling season. Clean as necessary.

- 3. Check electrical connections for tightness and controls for proper operation each heating season. Service as necessary.
- 4. Inspect burner compartment before each heating season for rust, corrosion, soot or excessive dust. If necessary, have furnace and burner serviced by a qualified service agency.
- 5. Inspect the vent pipe/vent system before each heating season for water leakage, sagging pipes or broken fittings. Have vent pipes/vent system serviced by a qualified service agency.
- 6. Inspect any accessories attached to the furnace such as a humidifier or electronic air cleaner. Perform any service or maintenance to the accessories as recommended in the accessory instructions.

Cleaning and/or Replacing Air Filter

The air filter type may vary depending on the application or orientation. The filter is external to the furnace casing. There are no provisions for an internal filter with this furnace. See "Filter Arrangement" under the "Installation" section of this manual.

NOTE: If the filter has an airflow direction arrow, the arrow must point toward the blower.

To clean or replace filters, proceed as follows:

4

WARNING

ELECTRICAL SHOCK, FIRE OR EXPLOSION HAZARD

Failure to follow this warning could result in personal injury or death, or property damage.

Before installing, modifying, or servicing system, main electrical disconnect switch must be in the OFF position and install a lockout tag. There may be more than one disconnect switch. Lock out and tag switch with a suitable warning label. Verify proper operation after servicing.

- 1. Turn off electrical supply to furnace.
- 2. Remove filter cabinet door.
- 3. Slide filter out of cabinet.
- 4. If equipped with permanent, washable filter, clean filter by spraying cold tap water through filter in opposite direction of airflow. Rinse filter and let dry. Oiling or coating of the filter is not recommended.
- 5. If equipped with factory specified disposable media filter, replace only with a factory specified media filter of the same size.
- 6. Slide filter into cabinet.
- 7. Replace filter cabinet door.
- 8. Turn on electrical supply to furnace.

Blower Motor and Wheel Maintenance

To ensure long life, economy, and high efficiency, clean accumulated dirt and grease from blower wheel and motor annually.

The inducer and blower motors are pre-lubricated and require no additional lubrication. These motors can be identified by the absence of oil ports on each end of the motor.

The following items should be performed by a qualified service technician. Clean blower motor and wheel as follows:

- 1. Turn off electrical supply to furnace.
- 2. Remove blower door.

Gas Furnace: (F/G)9MXE

- 3. All factory wires can be left connected, but field thermostat and accessory wiring may need to be disconnected depending on their length and routing.
- 4. If the vent and combustion air pipe passes through the blower compartment, it will be necessary to remove the pipes from the blower compartment.

Disconnect the vent and combustion air pipe by:

- a. Loosen the clamps on the vent couplings and combustion air pipe external to the furnace.
- b. Separate the pipes from the couplings and move them aside.
- c. Loosen the clamps on the vent couplings and combustion air pipe located on the blower shelf.
- d. Separate the pipes from the blower compartment and set aside.
- e. Remove the couplings from the pipe adapters and set aside.
- f. After servicing the blower, reverse steps a through e.
- g. Tighten all clamps 15 lb-in.

See Figure 8 for steps 5 through 14.


 Remove screws securing blower assembly to blower shelf and slide blower assembly out of furnace. Detach ground wire and disconnect blower motor harness plugs from blower motor.

NOTE: Blower wheel is fragile. Use care.

- 6. Clean blower wheel and motor by using a vacuum with soft brush attachment. Be careful not to disturb balance weights (clips) on blower wheel vanes. Do not bend wheel or blades as balance will be affected.
- 7. If greasy residue is present on blower wheel, remove wheel from the blower housing and wash it with an appropriate degreaser. To remove wheel:
 - a. Mark blower wheel location on shaft before disassembly to ensure proper reassembly.
 - b. Loosen setscrew holding blower wheel on motor shaft.

NOTE: Mark blower mounting arms and blower housing so each arm is positioned at the same hole location during reassembly.

- c. Mark blower wheel orientation and cutoff plate location to ensure proper reassembly.
- d. Remove screws securing cutoff plate and remove cutoff plate from housing.
- e. Remove bolts holding motor mounts to blower housing and slide motor and mounts out of housing.
- f. Remove blower wheel from housing.
- g. Clean wheel per instructions on degreaser cleaner. Do not get degreaser in motor.
- 8. Reassemble motor and blower wheel by reversing items 7b through 7f. Ensure wheel is positioned for proper rotation.
- 9. Torque motor mounting bolts to 40 +/- 10 lb-in. when reassembling.
- 10. Torque blower wheel set screw to 160 +/- 20 lb-in. when reassembling.
- Verify that blower wheel is centered in blower housing and set screw contacts the flat portion of the motor shaft. Loosen set screw on blower wheel and reposition if necessary.
- 12. Spin the blower wheel by hand to verify that the wheel does not rub on the housing.
- 13. Reinstall blower assembly in furnace.
- 14. Reinstall 2 screws securing blower assembly to blower deck.

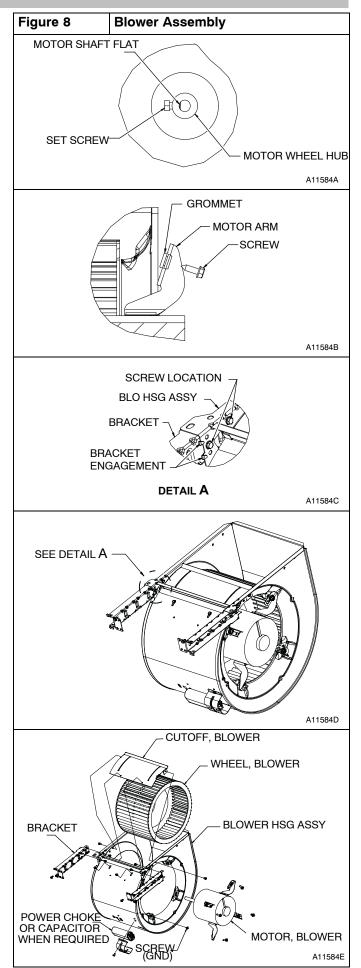

 Reconnect blower leads to furnace control. Refer to furnace wiring diagram, and connect thermostat leads if previously disconnected.

NOTE: Be sure to attach ground wire and reconnect blower harness plugs to blower motor.

WARNING

ELECTRICAL OPERATION HAZARD

Failure to follow this warning could result in personal injury or death.

Blower door switch opens 115–V power to control. No component operation can occur unless switch is closed. Caution must be taken when manually closing this switch for service purposes.

- 16. Downflow or horizontal furnaces with vent pipe through furnace only:
 - a. Install and connect short piece of vent pipe inside furnace to existing vent.
 - b. Connect vent connector to vent elbow.
- 17. Turn on electrical supply. Manually close blower door switch. Use a piece of tape to hold switch closed. Check for proper rotation and speed changes between heating and cooling by jumpering R to G and R to Y/Y2 on furnace control thermostat terminals. If outdoor temperature is below 70°F, turn off circuit breaker to outdoor unit before running furnace in the cooling cycle. Turn outdoor circuit breaker on after completing cooling cycle. (See Figure 4)

NOTE: If R–W/W1 thermostat terminals are jumpered at the time blower door switch is closed, blower will run for 90 sec before beginning a heating cycle.

- a. Perform component self-test as shown at the bottom of the SERVICE label, located on the blower door.
- b. Verify blower is rotating in the correct direction
- If furnace is operating properly, RELEASE BLOWER DOOR SWITCH. Remove any jumpers or reconnect any disconnected thermostat leads. Replace blower door.
- 19. Turn on gas supply and cycle furnace through one complete heating cycle. Verify the furnace temperature rise as shown in Adjustments Section. Adjust temperature rise as shown in Adjustments Section.

Cleaning Burners and Flame Sensor

The following items must be performed by a qualified service technician. If the burners develop an accumulation of light dirt or dust, they may be cleaned by using the following procedure: **NOTE**: Use a back-up wrench on the gas valve to prevent the valve from rotating on the manifold or damaging the mounting to the burner assembly.

WARNING

ELECTRICAL SHOCK AND FIRE HAZARD


Ą

Failure to follow this warning could result in personal injury, death, and/or property damage.

Turn off the gas and electrical supplies to the furnace and install lockout tag before performing any maintenance or service. Follow the operating instructions on the label attached to the furnace.

Refer to Figure 9.

- 1. Disconnect power at external disconnect, fuse or circuit breaker.
- 2. Turn off gas at external shut-off or gas meter.
- 3. Remove control door and set aside.
- 4. Turn electric switch on gas valve to OFF.
- 5. Disconnect the gas pipe from gas valve and remove pipe from the furnace casing.
- 6. Remove individual wires from terminals on gas valve.
- 7. Disconnect Hot Surface Igniter (HSI) wires from HSI.
- 8. Disconnect Flame Sensor wire from Flame Sensor.
- 9. Support the manifold and remove the 4 screws that secure the manifold assembly to the burner assembly and set aside. Note the location of the green/yellow wire and ground terminal.
- 10. Inspect the orifices in the manifold assembly for blockages or obstructions. Remove orifice and clean or replace orifice.
- 11. Remove the four screws that attach the top plate of the casing to the furnace.
- 12. Raise top plate up slightly and prop it up with a small piece of wood or folded cardboard.
- 13. Support the burner assembly and remove the screws that attach the burner assembly to the heat exchanger cell panel.
- 14. Remove wires from both rollout switches.
- 15. Slide one-piece burner out of slots on sides of burner assembly.
- 16. Remove the flame sensor from the burner assembly.
- 17. (Optional) Remove the Hot Surface Igniter (HSI) and bracket from the burner assembly.
- 18. Check igniter resistance. Nominal resistance is 40 to 70 ohms at room temperature and is stable over the life of the igniter.
- 19. Clean burner with a brush and a vacuum.
- 20. Clean the flame sensor with fine steel wool (0000 grade). Do not use sand paper or emery cloth.

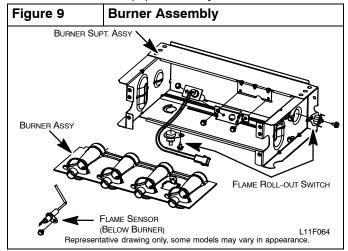


To reinstall burner assembly:

- 1. Install the Hot Surface Igniter (HSI) and bracket in burner assembly.
- 2. Install flame sensor on burner.
- 3. Align the edges of the one-piece burner with the slots in the burner assembly and slide the burners forward until they are fully seated in the burner assembly.
- 4. Align the orifices in the manifold assembly with the support rings on the end of the burner.
- 5. Insert the orifices in the support rings of the burners.

NOTE: If manifold does not fit flush against the burner, do not force the manifold on the burner assembly. The burners are not fully seated forward in the burner assembly. Remove the manifold and check burner positioning in the burner assembly assembly before re-installing the manifold.


- 6. Attach the green/yellow wire and ground terminal to one of the manifold mounting screws.
- 7. Install the remaining manifold mounting screws.
- 8. Check the igniter alignment. See Figure 9, Figure 10 and Figure 11.

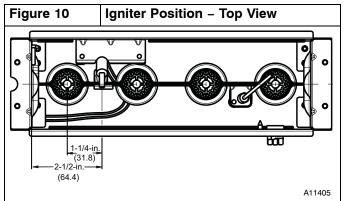

- 9. Attach the wires to the roll-out switches.
- 10. Align the burner assembly with the openings in the primary cell inlet panel and attach the burner assembly to the cell panel.
- 11. Connect the wire for the flame sensor.
- 12. Connect the wire for the Hot Surface Igniter.

NOTE: Use propane-resistant pipe dope to prevent leaks. Do not use Teflon tape.

13. Install the gas pipe to the gas valve.

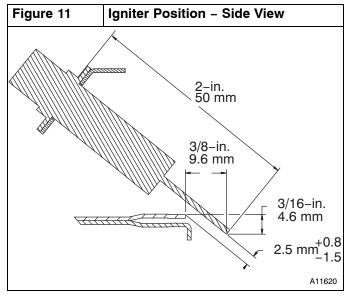

WARNING

FIRE OR EXPLOSION HAZARD

Failure to follow this warning could result in personal injury, death, and/or property damage.

Never purge a gas line into a combustion chamber. Never test for gas leaks with an open flame. Use a commercially available soap solution made specifically for the detection of leaks to check all connections. A fire or explosion may result causing property damage, personal injury or loss of life.

- 14. Check for gas leaks with a commercially available soap solution made specifically for the detection of leaks.
- 15. Turn gas on at electric switch on gas valve and at external shut-off or meter
- 16. Turn power on at external disconnect, fuse or circuit breaker.
- 17. Run the furnace through two complete heating cycles to check for proper operation
- 18. Install control door when complete.

Servicing Hot Surface Igniter

The igniter does **NOT** require annual inspection. Check igniter resistance before removal. Refer to **Figure 9**, **Figure 10** and **Figure 11**.

- 1. Turn off gas and electrical supplies to furnace.
- 2. Remove control door.
- 3. Disconnect igniter wire connection.
- 4. Check igniter resistance. Igniter resistance is affected by temperature. Only check resistance when the igniter is at room temperature.
 - a. Using an ohm meter, check resistance across both igniter leads in connector.
 - b. Cold reading should be between 40 ohms and 70 ohms.
- 5. Remove igniter assembly.
 - a. Using a 1/4-in. driver, remove the two screws securing the igniter mounting bracket to the burner assembly (See **Figure 9**)
 - b. Carefully withdraw the igniter and bracket assembly through the front of the burner assembly without striking the igniter on surrounding parts.
 - c. Inspect igniter for signs of damage or failure.
 - d. If replacement is required, remove the screw that secures the igniter on igniter bracket and remove the igniter.
- 6. To replace igniter and bracket assembly, reverse items 5a through 5d.
- Reconnect igniter harness to the igniter, dressing the igniter wires to ensure there is no tension on the igniter itself. (See Figure 9)
- 8. Turn on gas and electrical supplies to furnace.
- 9. Verify igniter operation by initiating control board self-test feature or by cycling thermostat.
- 10. Replace control door.

Flushing Collector Box and Drainage System

WARNING

ELECTRICAL SHOCK AND FIRE HAZARD

Failure to follow this warning could result in personal injury, death, and/or property damage.

Turn off the gas and electrical supplies to the furnace and install lockout tag before performing any maintenance or service. Follow the operating instructions on the label attached to the furnace.

1. Turn off gas and electrical supplies to furnace.

2. Remove control door.

ΛN

3. Disconnect pressure switch tube from pressure switch port.

NOTE: Ensure the pressure switch tube disconnected from the pressure switch is higher than the collector box opening or water will flow out of tube.

- 4. Remove the collector box plug from the top port on the upper corner of the collector box. (See **Figure 1**)
- 5. Attach a funnel with a flexible tube to port on the collector box.
- 6. Flush inside of collector box with water until discharge water from condensate trap is clean and runs freely.
- 7. Repeat steps 4 through 6 with middle plug on upper corner of collector box.

8. Remove the pressure switch tube from the collector box.

NOTE: Do **NOT** blow into tube with tube connected to the pressure switch.

- 9. Clean pressure switch port on collect box with a small wire. Shake any water out of pressure switch tube.
- 10. Reconnect tube to pressure switch and pressure switch port.
- 11. Remove the relief tube from the port on the collector box and the trap.
- 12. Clean the relief port on collect box and the trap with a small wire. Shake any water out of the tube.
- 13. Reconnect relief tube to trap and collector box ports.

Cleaning Condensate Drain and Trap

NOTE: If the condensate trap is removed, a new gasket between the trap and collector box is required. Verify a condensate trap gasket is included in the service kit or obtain one from your local distributor.

- 1. Disconnect power at external disconnect, fuse or circuit breaker.
- 2. Turn off gas at external shut-off or gas meter.
- 3. Remove control door and set aside.
- 4. Turn electric switch on gas valve to OFF.
- 5. Disconnect external drain from condensate drain elbow or drain extension pipe inside the furnace and set aside.
- 6. Disconnect the condensate trap relief hose from collector box port and condensate trap.

NOTE: If condensate has a heat pad attached to the trap, trace the wires for the pad back to the connection point and disconnect the wires for the heat pad.

- 7. Remove the screw that secures the condensate trap to the collector box, remove the trap and set aside.
- 8. Remove the trap gasket from the collector box if it did not come off when the trap was removed.
- 9. Discard the old trap gasket.
- 10. Rinse condensate trap in warm water until trap is clean.
- 11. Flush condensate drain lines with warm water. Remember to check and clean the relief port on the collector box.

- 12. Shake trap dry.
- 13. Clean port on collector box with a small wire.
- To re-install Condensate Drain and Trap:
 - 1. Remove adhesive backing from condensate trap gasket
 - 2. Install gasket on collector box
 - 3. Align the condensate trap with the drain opening on the collector box and secure the trap with the screw
 - 4. Attach the relief hose to the relief port on the condensate trap and collector box.
 - 5. Secure tubing to prevent any sags or traps in the tubing.
 - 6. Connect condensate drain elbow or drain extension elbow to the condensate trap
 - 7. Connect the leads of the condensate heat pad (if used)
 - 8. Connect external drain piping to the condensate drain elbow or drain extension pipe.
 - 9. Turn gas on at electric switch on gas valve and at external shut-off or meter
 - 10. Turn power on at external disconnect, fuse or circuit breaker.
 - 11. Run the furnace through two complete heating cycles to check for proper operation
 - 12. Install control door when complete.

Checking Heat Pad Operation (If Applicable)

In applications where the ambient temperature around the furnace is 32°F or lower, freeze protection measures are required. If this application is where heat tape has been applied, check to ensure it will operate when low temperatures are present.

NOTE: The Heat Pad, when used, should be wrapped around the condensate drain trap. There is no need to use heat tape within the furnace casing. Most heat tapes are temperature activated, and it is not practical to verify the actual heating of the tape. Check the following:

- 1. Check for signs of physical damage to heat tape such as nicks, cuts, abrasions, gnawing by animals, etc.
- 2. Check for discolored heat tape insulation. If any damage or discolored insulation is evident, replace heat tape.
- 3. Check that heat tape power supply circuit is on.

Cleaning Heat Exchangers

The following items must be performed by a qualified service technician.


Primary Heat Exchangers

If the heat exchangers get an accumulation of light dirt or dust on the inside, they may be cleaned by the following procedure: **NOTE**: If the heat exchangers get a heavy accumulation of soot and carbon, both the primary and secondary heat exchangers should be replaced rather than trying to clean them thoroughly due to their intricate design. A build-up of soot and carbon indicates that a problem exists which needs to be corrected, such as improper adjustment of manifold pressure, insufficient or poor quality combustion air, improper vent termination, incorrect size or damaged manifold orifice(s), improper gas, or a restricted heat exchanger (primary or secondary). Action must be taken to correct the problem.

- 1. Turn off gas and electrical supplies to furnace.
- 2. Remove control door.
- 3. Disconnect wires or connectors to flame rollout switch, gas valve, igniter, and flame sensor.
- 4. Using backup wrench, disconnect gas supply pipe from furnace gas control valve.
- 5. Remove two screws attaching top filler plate and rotate upwards to gain access to screws attaching burner assembly to cell panel.
- 6. Remove screws attaching burner assembly to cell panel. (See Figure 9)


NOTE: Burner cover, manifold, gas valve, and burner assembly should be removed as one assembly.

 Clean heat exchanger openings with a vacuum and a soft brush. (See Figure 12)

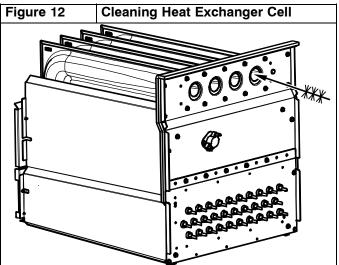

NOTE: After cleaning, inspect the heat exchangers to ensure they are free of all foreign objects that may restrict flow of combustion products.

- 8. Reverse items 6 through 1 for reassembly.
- 9. Refer to furnace wiring diagram and reconnect wires to flame rollout switch, gas valve, igniter, and flame sensor.
- 10. Turn on gas and electrical supplies to furnace.
- 11. Check furnace operation through two complete heat operating cycles. Look at burners. Burner flames should be clear blue, almost transparent. (See **Figure 13**)

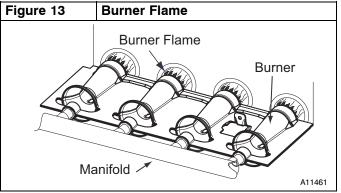

12. Check for gas leaks.

FIRE OR EXPLOSION HAZARD

Failure to follow this warning could result in personal injury, death, and/or property damage.

Never purge a gas line into a combustion chamber. Never test for gas leaks with an open flame. Use a commercially available soap solution made specifically for the detection of leaks to check all connections. A fire or explosion may result causing property damage, personal injury or loss of life.

13. Replace main furnace door.

Secondary Heat Exchangers

Â

The condensing side (inside) of the secondary heat exchanger CANNOT be serviced or inspected without complete removal of the heat exchanger assembly. Detailed information on heat exchanger removal can be obtained from your Distributor.

Winterization



UNIT AND PROPERTY DAMAGE HAZARD

Failure to follow this caution may result in unit component or property damage.

If the furnace is installed in an unconditioned space where the ambient temperatures may be 32° F (0° C) or lower, freeze protection measures must be taken to prevent property or product damage.

Since the furnace uses a condensing heat exchanger, some water will accumulate in the unit as a result of the heat transfer process. Therefore, once it has been operated, it cannot be turned off and left off for an extended period of time when temperatures will reach $32^{\circ}F$ (0°C) or lower unless winterized. Follow these procedures to winterize your furnace:

CAUTION

UNIT COMPONENT DAMAGE HAZARD

Failure to follow this caution may result in damage to the furnace and other property damage.

Do not use ethylene glycol (automotive antifreeze coolant or equivalent). Failure of plastic components may occur.

- 1. Obtain propylene glycol (RV/swimming pool antifreeze or equivalent).
- 2. Turn off gas and electrical supplies to your furnace.
- 3. Remove furnace control door.
- Remove the top unused rubber plug from the port on the collector box opposite the condensate trap. (See Figure 1)
- 5. Connect a field supplied 3/8-in. (9.5-mm) ID tube to the open port on the collector box
- 6. Insert a field supplied funnel into the tube.
- 7. Pour 1 quart of anti-freeze solution into the funnel/tube. Antifreeze should run through the collector box, overfill condensate trap and flow to an open drain.
- 8. Replace the rubber plug in the port on the collector box.
- 9. Remove the middle unused rubber plug from the port on the collector box opposite the condensate trap. See **Figure 1**)
- 10. Repeat Steps 5 through 8.
- 11. If a condensate pump is used, check with pump manufacturer to verify pump is safe for use with antifreeze used. Allow pump to start and pump anti-freeze to open drain.
- 12. Replace main door.
- 13. When furnace is re-started, flush condensate pump with clear water to check for proper operation before re-starting furnace.
- 14. Propylene glycol need not be removed before re-starting furnace.


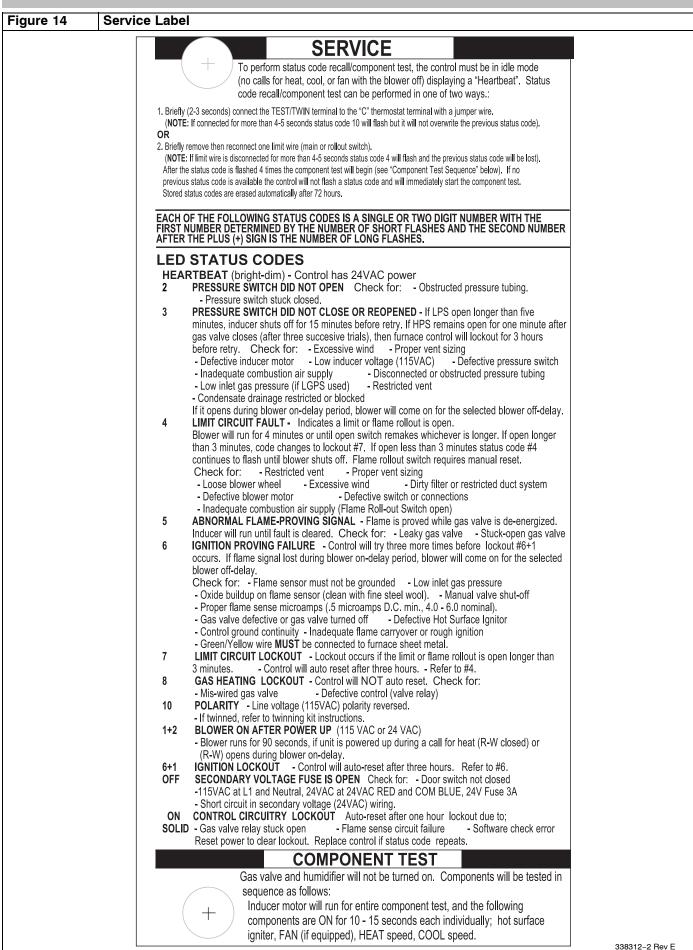



Figure 15

Wiring Diagram

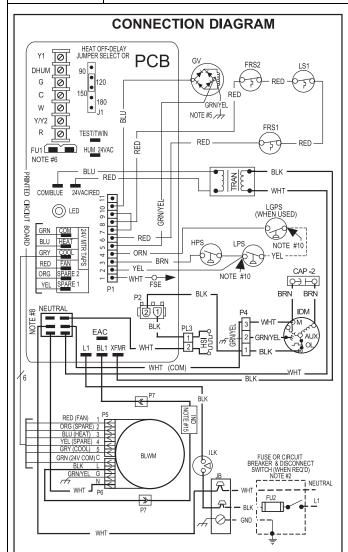

NOTES:


- 1. If any of the original equipment wire is replaced use wire rated for 105°C.
- 2. Use only copper wire between the disconnect switch and the furnace junction box (JB).
- 3. This wire must be connected to furnace sheet metal for control to prove flame.
- 4. Symbols are electrical representation only.
- Solid lines inside PCB are printed circuit board conductors and are not included in legend.
- Replace only with a 3 amp fuse.
- Inducer (IDM) motor contains internal auto-reset thermal overload switches (OL).
- 8. L2 connections are interchangeable within the L2 connector block.
- Blower motor speed selections are for average conditions, see installation instructions for details on optimum speed selection.
- 10. Factory connected when LGPS is not used.
- Ignition-lockout will occur after four consecutive unsuccessful trials-forignition. Control will auto-reset after three hours.
- Blower-on delay: gas heating 25 seconds, cooling or heat pump 2 seconds.
 Blower-off delay: gas heating selections are 90, 120, 150 or 180 seconds,
- cooling or heat pump 90 seconds or 5 seconds when DHUM is active. 14. BLWM is locked - rotor overload protected by redundant electronic control
- BLWM Is locked rotor overload protected by redundant electronic contr circuits.
 Inductor (When Used).

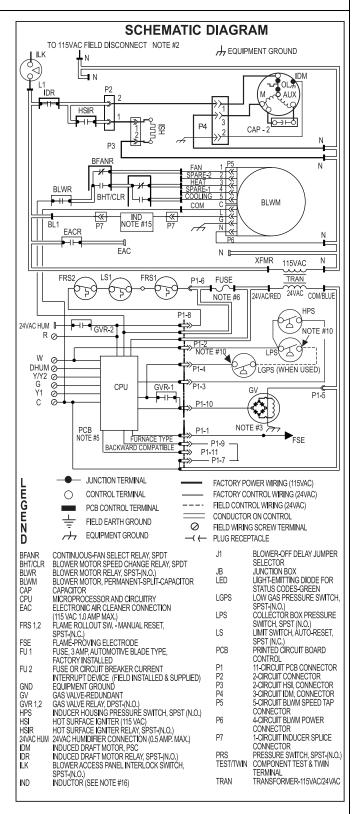


338312-2 Rev E

Figure 16

Troubleshooting Guide – Flow Chart

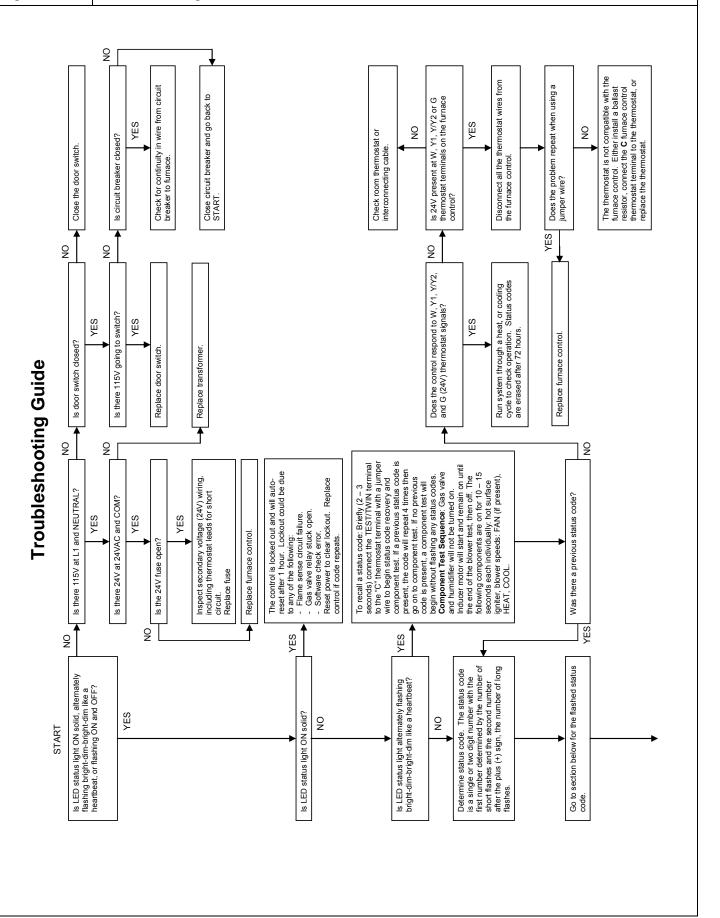

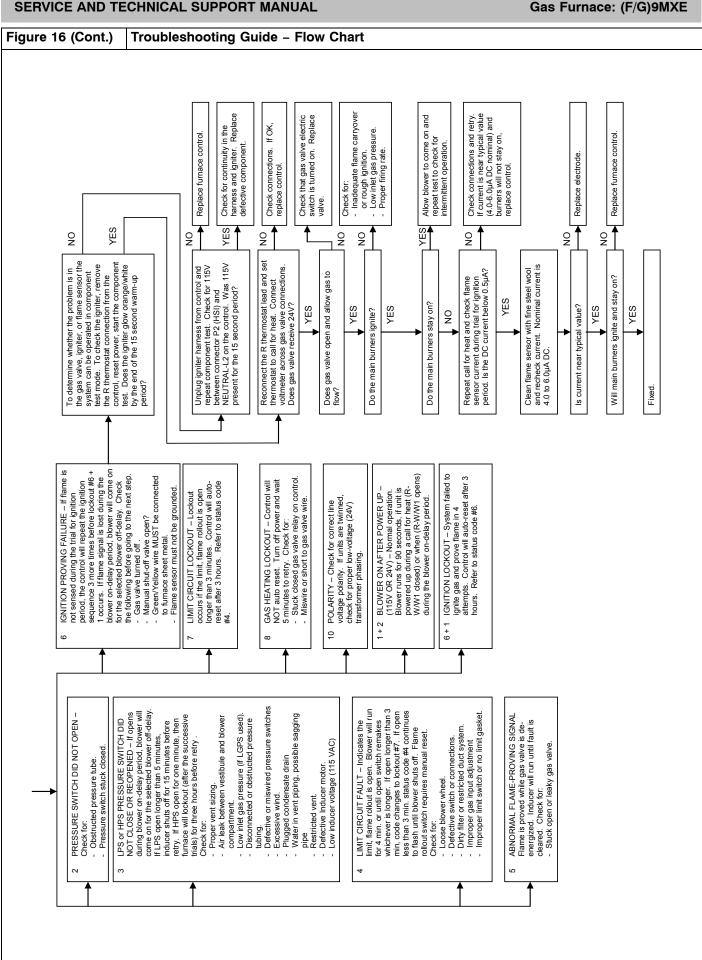

SEQUENCE OF OPERATION

NOTE: Furnace control must be grounded for proper operation or control will lock out. Control is grounded through green/yellow wire routed to gas valve and manifold bracket screw. Using the schematic diagram in **Figure 15**, follow the sequence of operation through the different modes. Read and follow the wiring diagram very carefully.

NOTE: If a power interruption occurs during a call for heat (W), the control will start a 90-second blower-only ON period two seconds after power is restored, if the thermostat is still calling for gas heating. The GREEN LED light will flash code 1+2 during the 90-second period, after which the LED will be flashing a heartbeat, as long as no faults are detected. After the 90-second period, the furnace will respond to the thermostat normally.

The blower door must be installed for power to be conducted through the blower door interlock switch ILK to the furnace control CPU, transformer TRAN, inducer motor IDM, blower motor BLWM, hot-surface igniter HSI, and gas valve GV.

1. Heating

(See **Figure 17** – **Figure 23** for thermostat connections.) The wall thermostat "calls for heat," closing the R-to-W circuit. The furnace control performs a self-check, verifies the pressure switch contacts LPS and HPS are open, and starts the inducer motor IDM.

- a. **Inducer Prepurge Period** As the inducer motor IDM comes up to speed the low pressure switch contacts LPS close to begin a 15 second prepurge period. The high pressure switch contacts HPS are ignored until one minute after the gas valve closes.
- b. **Igniter Warm–Up** At the end of the prepurge period, the Hot–Surface igniter HSI is energized for a 17–second igniter warm–up period.
- c. **Trial-for-Ignition Sequence** When the igniter warm-up period is completed, the main gas valve relay contacts GVR close to energize the gas valve GV, the gas valve opens, and 24 vac power is supplied for a field-installed humidifier at the HUM 24VAC terminal. The gas valve GV permits gas flow to the burners where it is ignited by the HSI. Five seconds after the GVR closes, a 2-second flame proving period begins. The HSI igniter will remain energized until the flame is sensed or until the 2-second flame proving period begins.
- d. Flame-Proving- When the burner flame is proved at the flame-proving sensor electrode FSE, the furnace control CPU begins the blower-ON delay period and continues to hold the gas valve GV open. If the burner flame is not proved within two seconds, the control CPU will close the gas valve GV, and the control CPU will repeat the ignition sequence for up to three more Trials-For-Ignition before going to Ignition-Lockout. Lockout will be reset automatically after three hours or by momentarily interrupting 115 vac power to the furnace, or by interrupting 24 vac power at 24VAC or COM to the furnace control CPU (not at W, G, R, etc.).

If flame is proved when flame should not be present, the furnace control CPU will lock out of Gas–Heating mode and operate the inducer motor IDM until flame is no longer proved.

e. **Blower-On Delay**– If the burner flame is proven, the blower motor is energized on HEAT speed 25 seconds after the gas valve GV is energized.

Simultaneously, the electronic air cleaner terminal EAC 1 AMP is energized and remains energized as long as the blower motor BLWM is energized.

f. **Heat-Off Delay**– When the thermostat is satisfied, the R-to–W circuit is opened, de–energizing the gas valve GV, stopping gas flow to the burners, and de–energizing the humidifier terminal HUM 24 VAC. The inducer motor IDM will remain energized for a 15–second post–purge period. The blower motor BLWM and air cleaner terminal EAC 1 AMP will remain energized for 90, 120, 150, or 180 seconds (depending on the heat–OFF delay selection). The furnace control CPU is factory–set for a 120–second heat–OFF delay.

2. Cooling Mode

The thermostat "calls for cooling."

a. Single-Speed Cooling

(See Figure 17 – Figure 23 for thermostat connections) The thermostat closes the R-to-G-and-Y circuits. The R-to-Y circuit starts the outdoor unit, and the furnace control R-to-G-and-Y/Y2 circuits start the furnace blower motor BLWM on COOL speed.

The electronic air cleaner terminal EAC 1 AMP is energized with 115 vac when the blower motor BLWM is operating. When the thermostat is satisfied, R-to-G-and-Y circuits are opened. The outdoor unit will stop, and the furnace blower motor BLWM will continue operating on the COOL speed for an additional 90 seconds. Jumper Y/Y2 to DHUM to reduce the cooling off-delay to 5 seconds. (See **Figure 4**)

b. Two-Speed Cooling

(See Figure 17 – Figure 23 for thermostat connections.)

The thermostat closes the R-to-G-and-Y1 circuits for low-cooling or closes the R-to-G-and-Y1-and-Y2 circuits for high-cooling. The R-to-Y1 circuit starts the outdoor unit on low-cooling speed, and the furnace control R-to-G-and-Y1 circuit starts the furnace blower motor BLWM on low-cool speed (same speed as FAN). The R-to-Y1-and-Y2 circuits start the outdoor unit on high-cooling speed, and the furnace control R-to-G-to-Y1 and Y/Y2 circuits start the furnace blower motor BLWM on COOL speed.

The electronic air cleaner terminal EAC 1 AMP is energized with 115 vac whenever the blower motor BLWM is operating.

When the thermostat is satisfied, the R-to-G-and-Y1or R-to-G-and-Y1 and Y2 circuits are opened. The outdoor unit stops, and the furnace blower BLWM and electronic air cleaner terminal EAC 1 AMP will remain energized for an additional 90 seconds. Jumper Y1 to DHUM to reduce the cooling off-delay to 5 seconds. (See **Figure 4**)

3. Dehumidify Mode

(See **Figure 17** – **Figure 23** for humidity sensing thermostat connections.)

The dehumidification output, H on the humidity sensing thermostat should be connected to the furnace control thermostat terminal DHUM. When there is a dehumidify demand, the H input is activated, which means 24 vac signal is removed from the DHUM input terminal. In other words, the DHUM input logic is reversed. The DHUM input is turned ON when no dehumidify demand exists.

Activation/Deactivation

Once 24 vac is detected by the furnace control on the DHUM input, the furnace control operates in dehumidify mode. If the DHUM input is low for more than 48 hours, the furnace control reverts back to non-humidity sensing thermostat mode.

The cooling operation described in item 2. above also applies to operation with a humidity sensing thermostat. The exceptions are listed below:

- a. When the R-to-G-and-Y1 circuit is closed and there is a demand for dehumidification, the furnace blower motor BLWM will continue running at low-cool speed (same speed as FAN).
- b. When the R-to-G-and-Y/Y2 circuit is closed and there is a demand for dehumidification, the furnace blower motor BLWM will drop the blower speed from COOL to HEAT for a maximum of 10 minutes before reverting back to COOL speed. If there is still a demand for dehumidification after 20 minutes, the furnace control CPU will drop the blower speed back to HEAT speed. This alternating 10- minute cycle will continue as long as there is a call for cooling.
- c. When the "call for cooling" is satisfied and there is a demand for dehumidification, the cooling blower–OFF delay is decreased from 90 seconds to 5 seconds.

4. Continuous Blower Mode

When the R-to-G circuit is closed by the thermostat, the blower motor BLWM will operate on continuous-blower speed (same speed as FAN). Terminal EAC 1 AMP is energized as long as the blower motor BLWM is energized. During a call for heat, the blower BLWM will stop during igniter warm-up (17 seconds), ignition (7 seconds), and blower-on delay (25 seconds), allowing the furnace heat exchangers to heat up more quickly, then restarts at the end of the blower-on delay period at HEAT speed.

In heating, the furnace control CPU will hold the blower motor BLWM at HEAT speed during the selected heat-off delay period before reverting to continuous-blower speed. When the thermostat "calls for low-cooling," the blower motor BLWM will remain operating at continuous blower speed.

When the thermostat "calls for high-cooling", the blower motor BLWM will operate at COOL speed. When the thermostat is satisfied, the blower motor BLWM will operate an additional 90 seconds on COOL speed before reverting back to continuous-blower speed.

When the R-to-G circuit is opened, the blower motor BLWM will continue operating for an additional 5 seconds, if no other function requires blower motor BLWM operation.

5. Heat pump

(See Figure 17 - Figure 23 for thermostat connections.)


Gas Furnace: (F/G)9MXE

When installed with a heat pump, the furnace control automatically changes the timing sequence to avoid long blower off times during demand defrost cycles. When the R-to-W-and-Y1 or R-to-W-and-Y1-and-G circuits are energized the furnace control CPU will switch to or turn on the blower motor BLWM at HEAT speed, and begin a heating cycle. The blower motor BLWM will remain on until the end of the prepurge period, then shut off for 24 seconds then come back on at HEAT speed. When the W input signal disappears, the furnace control begins a normal inducer post-purge period and the blower remains running at HEAT speed for the selected blower-OFF delay period then switches to low-cool FAN). speed (same speed as If the R-to-W-and-Y1-and-G signals disappear at the same time, the blower motor BLWM will remain on for the selected blower-OFF delay period. If the R-to-W-and-Y1 signals disappear, leaving the G signal, the blower motor BLWM will remain on for the selected blower-OFF delay period then switch to continuous-blower speed. When the R-to-W-and-Y/Y2, R-to-W-and-Y/Y2-and-G, R-to-W-and-Y1-and-Y/Y2, R-to-Wor and-Y1-and-Y/Y2-and-G circuits are energized the furnace control CPU will switch to or turn on the blower motor BLWM at HEAT speed, and begin a heating cycle. The blower motor BLWM will remain on until the end of the prepurge period, then shut off for 24 seconds then come back on at HEAT speed. When the W input signal disappears, the furnace control begins a normal inducer post-purge period and the blower switches to COOL speed after a 3 second delay. lf the R-to-W-and-Y/Y2-and-G or R-to-W-and-Y1-and -Y/Y2-and-G signals disappear at the same time, the blower motor BLWM will remain on for the selected blower-OFF delay period. If the R-to-W-and-Y/Y2 or R-to-W-and-Y1-and-Y/Y2 signals disappear, leaving the G signal, the blower motor BLWM will remain on for the selected blower-OFF delay period then switch to continuous blower speed.

See Component Self Test

Refer to page 13 for instructions.



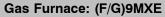

TWO-STAGE HEAT PUMP

Y1

W2

Y2

R

С

·L

0

SINGLE-STAGE

HEAT PUMP

W2


Y

R

С


L

Ο

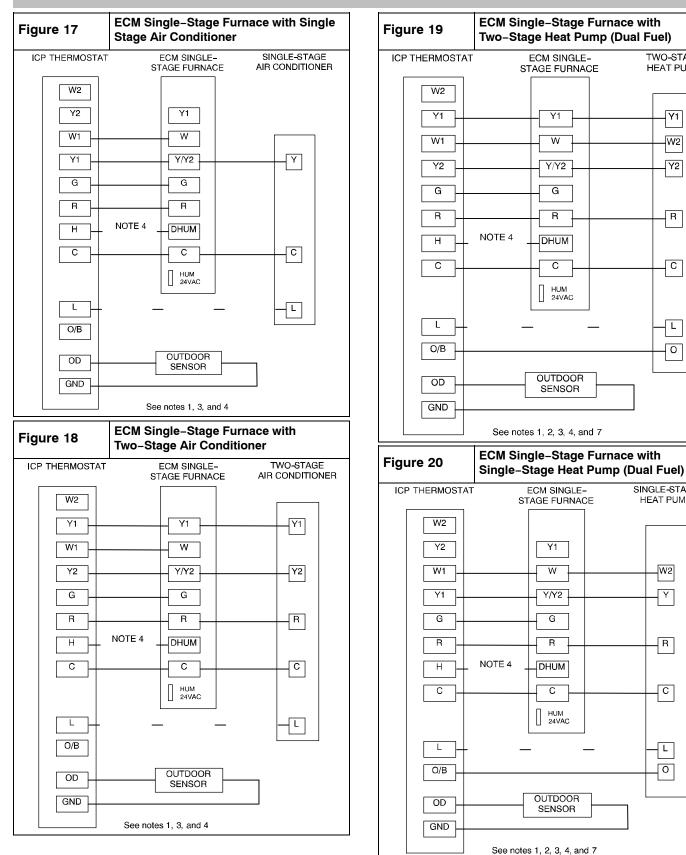

ECM Single-Stage Furnace and Figure 21 **Humidifier Only** HUMIDITY SENSING ECM SINGLE-STAGE THERMOSTAT FURNACE С С HUM 24VAC н \cap HUMIDIFIER Ο М 115 VAC See note 6 AC with ECM Single-Stage Furnace, Figure 22 Humidifier and Dehumidification ECM SINGLE-STAGE FURNACE HUMIDITY SENSING THERMOSTAT С С н DHUM SPDT RELAY HUMIDIFIER \sim М 115 VAC See notes 5 and 6

Gas Furnace: (F/G)9MXE

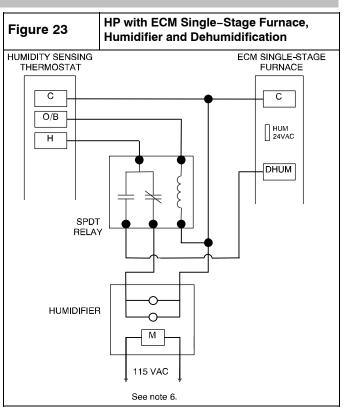

NOTES FOR Figure 17 – Figure 23

- 1. Refer to outdoor equipment Installation Instructions for additional information and setup procedure.
- 2. Outdoor Air Temperature Sensor must be attached in all dual fuel application.
- 3. Refer to ICP thermostat Installation Instructions for additional information and setup procedure.
- 4. When using a Humidity Sensing Thermostat, set DEHUMIDIFY OPTIONS to H DE-ENRGZD FOR DEHUM
- 5. HUM 24VAC terminal is 24 VAC and is energized when the low pressure switch closes during a call for heat.
- 6. When connecting 115 VAC to humidifier use a separate 115 VAC supply.
- 7. When using a humidifier on a HP installation, connect humidifier to hot water.

PARTS REPLACEMENT INFORMATION GUIDE

Control door Blower door Top filler plate Bottom filler plate Door Knob Assembly

Electrical group

Control box Junction box Limit switch(es) Circuit board Door switch Transformer 3–Amp fuse Flame Rollout Switch Main Wiring Harness Blower Motor Harness (when used)

Filter Group

Filter(s)

Blower group

Cut-off Plate Blower housing Blower motor Blower wheel Capacitor (when used) Capacitor strap (when used) Power choke (where used)

WARNING

FIRE, EXPLOSION, ELECTRICAL SHOCK AND CARBON MONOXIDE POISONING HAZARD

Failure to follow this warning could result in dangerous operation, personal injury, death or property damage.

Improper installation, adjustment, alteration, service, maintenance, or use can cause carbon monoxide poisoning, explosion, fire, electrical shock, or other conditions which may cause personal injury or property damage. Consult a qualified installer, service agency, local gas supplier, or your distributor or branch for information or assistance. The qualified installer or agency must use only factory-authorized and listed kits or accessories when modifying this product.

Have available the product/model number and the serial number located on the unit rating plate to ensure correct replacement parts.

TO OBTAIN INFORMATION ON PARTS: Consult your installing dealer or the classified section of your local telephone directory under the "Heating Equipment" or "Air Conditioning Contractors and Systems" headings for dealer listing by brand name.

Gas Control Group

Manifold Burner Orifice Flame sensor Hot surface igniter Gas valve

Heat exchanger group

Primary Heat Exchanger assembly Primary Heat Exchanger cell panel Secondary Heat Exchanger assembly Coupling box Containment Plate Tubing Gaskets

Inducer group

Pressure switch(es) Inducer assembly Inducer Inducer motor Motor Module (when used) Inducer motor capacitor (when used) Collector box Condensate trap Condensate trap elbow Gaskets

PRODUCT NOMENCLATURE										
DIGIT POSITION	1	2	3	4	5	6, 7, 8	9, 10	11, 12	13	14
	G	9	М	Х	Е	060	17	14	Α	1
G = Mainline Look 1										
F = Mainline Look 2										
N = Entry										
9 = 90% - 100%	EFFIC	CIENCY								
M = Multiposition			,							
H = Horizontal										
U = Upflow										
D = Downflow		FE	ATURE							
A = Modulating Variabl	e Speed ECM			•						
V = Variable Speed										
X = ECM										
S = Single-stage										
T = Two-stage			FE	ATURE						
B = Base AFUE Efficie	ncy				•					
E = Extra AFUE Efficie	ency									
C = Communicating										
D = Dual Certified 2-pi	ipe or 1–pipe									
R = 2-pipe only										
S = Single-stage										
T = Two-stage										
N = Standard										
L = Low Nox				FE	ATURE					
040 = 40,000 BTU/hr										
060 = 60,000 BTU/hr										
080 = 80,000 BTU/hr										
100 = 100,000 BTU/hr										
120 = 120,000 BTU/hr					INPU	T HEAT				
14 = 14–3/16"							,			
17 = 17–1/2"										
21 = 21"										
24 = 24-1/2"					C	ABINET	WIDTH			
10 = 1000 CFM (max)								,		
14 = 1400 CFM (max)										
16 = 1600 CFM (max)										
20 = 2000 CFM (max)										
22 = 2200 CFM (max)						COOL	ING AIF	RFLOW		
SALES (MAJOR) REV	ISION DIGIT									
ENGINEERING (MINC		DIGIT								,

International Comfort Products, LLC

Consumer Relations Department P.O. Box 128 Lewisburg, TN 37091, USA 931–270–4100