S0532FY

4

NONE

1-17-86

9

0542FY

FIGURE NUMBER

DIMENSIONS

DATA

Q Q Q

OB

SUPERSEDED

WE CAN ASSUME NO RESPONSIBILITY FOR USE OF






LOCATION

COMPACT FIXTURE SUPPORTS FOR SIPHON JET WATER CLOSETS WITH VERTICAL CENTER LINE FITTINGS

FLOOR MOUNT FRAME FOR NO-HUB SYSTEMS

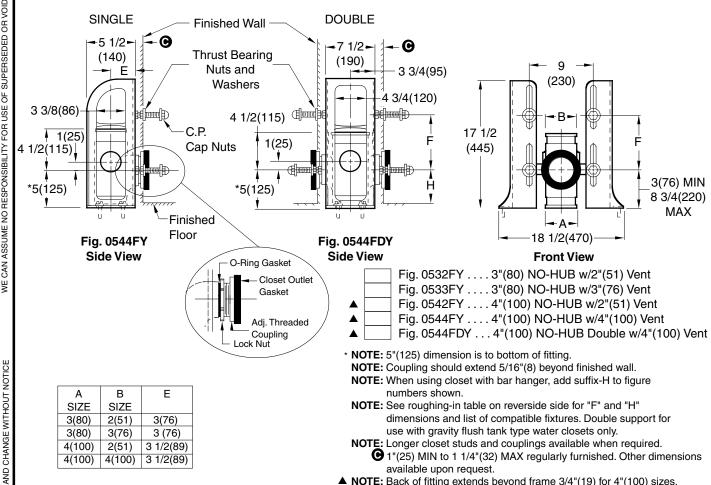

Ε SIZE SIZE 3(80)2(51)3(76)3(80)3(76) 3 (76) 4(100) 2(51) 3 1/2(89) 4(100) 4(100) 3 1/2(89)

NOTE: See roughing-in table on reverside side for "F" and "H" dimensions and list of compatible fixtures. Double support for use with gravity flush tank type water closets only.

NOTE: Longer closet studs and couplings available when required.

1"(25) MIN to 1 1/4"(32) MAX regularly furnished. Other dimensions available upon request.

▲ NOTE: Back of fitting extends beyond frame 3/4"(19) for 4"(100) sizes. Recommend use with 2 x 8 studs only.

INSTALLATION INSTRUCTIONS

- The center of the stack should be located by the "E" dimension shown on the table. "E" dimension for 0544FDY is 3 3/4(95). To determine the height of the stack in relation to the finished floor, subtract the "H" dimension from the 5"(125) dimension.

The fitting should now be coupled into the stack.

Assemble the faceplates temporarily to the fitting, mark the location of the bolt holes in the slab, and then secure faceplates to the floor.

E. Faceplates are fastened to the arms of the adaptor by means of the fixture studs, nuts and washers provided. Thread locknut on male thread of adjustable coupling approximately 1"(25) and push "O"-Ring against locknut.

- Apply No. 90 Smith Seal to male threads on coupling. Install coupling and adjust it to extend 5/16"(8) beyond finished wall. Thread
- Assemble the bearing nuts and washers to the fixture supporting studs. The fixture studs should extend 2 1/4"(51) beyond finished wall.

Adjust bearing nuts so that washers extend 1/16"(2) beyond finished wall.

- J. After wall is exected, remove any plaster grout touching the fixture studs, bearing nuts washers and coupling.
- K. Place gasket in closet recess and set closet on studs protruding from wall making sure that closet outlet is centered on coupling.
- Place fiber washers on studs. Apply the two bottom and top left cap nuts, tighten securely. Apply the top right cap nut hand tight and snug up 1/4 turn with wrench.

NOTE: When installing closet with bar hanger support follow the same instructions as above, except that the hanger plate should be mounted on the top fixture studs. Adjust the top bearing nuts so that the face of the hanger extends 1/16"(2) beyond the finished wall, then lock in place with hex nuts. **NOTE:** Dimensions shown in parentheses are in millimeters.

NOTE: SEE REVERSE SIDE FOR ROUGH-IN TABLE.

GFED	8-26-05 05/21/01	Revised Note & Removed Note Revised Note Deleted 2" x 4" Added Millimeters	RN TBW JJ EMB	CL CL BS	WEIGHT POUNDS	VOLUME CUBIC FEET	FIGURE NUMBER 0532FY, 0533FY,
REV.	DATE	DESCRIPTION	BY	CKD. BY			0542FY, 0544FY

S0500BS

4

SUPERSEDED OR VOID DATA

WE CAN ASSUME NO RESPONSIBILITY FOR USE OF

1-24-86

онескер ву:

0500 SERIES

FIGURE NUMBER





LOCATION

ROUGH-IN TABLE FOR RESIDENTIAL WATER CLOSETS

DIMENSION "H" ROUGH-IN HEIGHTS

FIXTURE MFG.	FIXTURE MFG. NAME		F	н	
AM. STD.	GLENWALL	2093.100	7 1/2 (190)	4 1/8 (105)	
CRANE	REXMONT	3-217	7 1/2 (190)	4 (100)	
ELJER	WALFORD	091-7925, 7926, 7928, 7933	7 1/2 (190)	6 3/4 (170)	

NOTE: The rough-in dimensions listed on this drawing are based on current information available to Jay R. Smith by the fixture manufacturers. We recommend that you verify these dimensions with the fixture manufacturer. We will not accept responsibility for rough-in dimension changes by the fixture manufacturer.

DIMENSIONS ARE SUBJECT TO MANUFACTURERS TOLERANCE AND CHANGE WITHOUT NOTICE		1.07.00	a Added NOTE to BS	. DN		par	ITE: Dimension rentheses are in	n millimeters.
	D C B A	1-27-06 8-26-05 8-1-96 7-20-93	Added NOTE to BS Revised Table Added Millimeters Submittal Update	RN TBW EMB EMB	CL CL BS BS	WEIGHT POUNDS	VOLUME CUBIC FEET	FIGURE NUMBER 0500 SERIES
	REV.	DATE	DESCRIPTION	BY	CKD. BY			