
FOR OTHER JAY R. SMITH **ENGINEERED PLUMBING PRODUCTS**

FIXTURE SUPPORT • ROOF DRAINS FLOOR DRAIN • CLEANOUTS INTERCEPTORS • HYDROTROLS

CONTACT YOUR LOCAL REPRESENTATIVE OR WRITE TO THE FACTORY

PARTS LIST WITH MAINTENANCE INSTRUCTIONS

FOR FIG. 5510, 5511, 5560*, 5561*, 5610 & 5611
*TWO HYDRANT PARTS REPAIR KITS REQUIRED FOR "TWIN TEMP" HYDRANTS (FIG. 5560 or 5561)

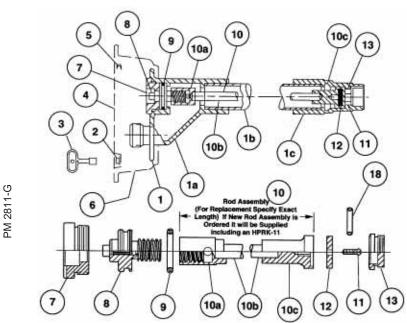

MAINTENANCE INSTRUCTIONS:

- Shut off water supply
 Remove face nut.
- 3. Pull stemout for complete access to all working parts.
 4. Check all working parts for replacement.
- 5. Replace complete repaired stem assembly and face nut.

NOTE: To remove seat (#13) use a 3/8" square rod, 6" longer than rod assembly.

	PARTS LIST		
No.	Description	No.	Description
1	Head/Casing Assembly	8	Operating Screw
1a	Head	9	Operating Screw "O" Ring
1b	Casing	10	Operating Rod Assembly
1c	Valve Housing	10a	Coupling
2	Locking Device*	10b	Rod
3	Key	10c	Plunger
4	Cover*	11	Washer Screw
5	Hydrant Cover Pins (2)*	12	Washer Neoprene
6	Box*	13	Removable Seat
7	Face Nut	18	Plunger "O" Ring
*FIG 5610, 5611 LESS BOX MEMBER OF:			

*FIG 5610, 5611 LESS BOX



SMITH MFG. CO. DIVISION OF SMITH INDUSTRIES, INC.
POST OFFICE BOX 3237
MONTGOMERY, ALABAMA 36109-0237 (USA)
TEL: 334-277-8520 FAX: 334-272-7396 www.jrsmith.com





TO REPAIR 5610, 5511, 5560°, 5561°, 5610, 5611, 5560°, 5561°, 5610, 5611, 5600°, 5611, 5600°, 5611, 5600°, 5611, 5600°, 5611, 5600°, 5611, 5600°, 561





HYDRAUT PARTS REPAIR KIT

HPRK-11 CONTENTS

	PART NO.	QUANTITY	DESCRIPTION
1 2811-G	3	1	KEY
	8	1	OPERATING SCREW
PM	9	1	OPERATING SCREW-"O" RING
	•11	1	WASHER SCREW
	•12	1	NEOPRENE WASHER
	13	1	SEAT
	•18	1	PLUNGER "O" RING INSTRUCTIONS

•NOTE: Parts #11 and #12 are required where the plunger is tapped for washer screw. Part # 18 is required where the plunger is grooved for an "O" ring. Use appropriate part, disregard part(s) not required.



