


Florestone Saflor® Molded Receptors Installation Instructions

1. Examine sub-floor shower area for movement and/or squeaks. Fix any problems encountered.
2. Integral drain requires minimum 5" diameter by 2¼" deep recess in sub-floor for adequate clearance.
3. Level and plumb pan on sub-floor. Shim or use mortar if needed to compensate for out of level sub-floor.
4. Install Wedge-Lok® seal. Use soapy water to lubricate.
5. Secure tiling flange to stud with large head nail or screw driven into place above the tiling flange. *(Do not nail or screw into tiling flange. May cause tiling flange to crack or break.)*
6. Pour water into shower pan to test for proper drainage upon connection of wastepipe prior to finishing walls.


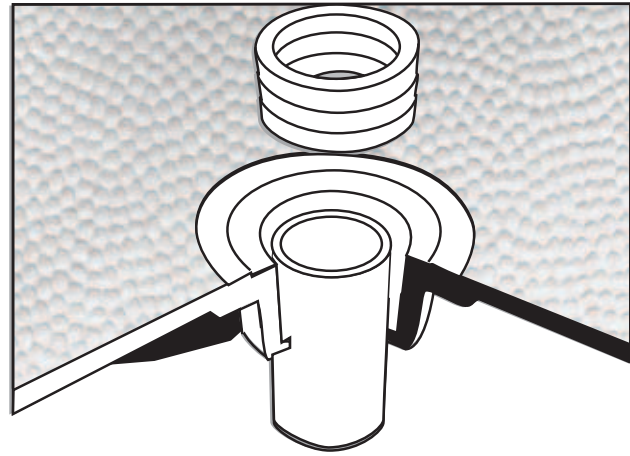


Exclusive Wedge-Lok® Seal

Florestone Saflor Shower Receptors come with an integral drain molded into the receptor, eliminating the need for a separate drain. The exclusive seal is easily installed without special tools. No caulking, no mess, no places to leak. Drain will also accept conventional lead joint.

2" I.P.S. **Wedge-Lok®** Seal fits plastic and steel only. For copper waste, specify **Josam Jiffy-Joint™** or equal. For cast iron, **Josam Jiffy-Joint™** or equal may be required because of OD variance. Specify for copper or cast iron pipe.

Bottom

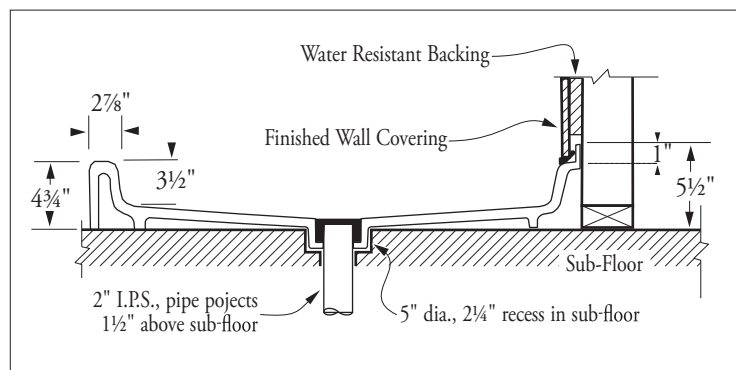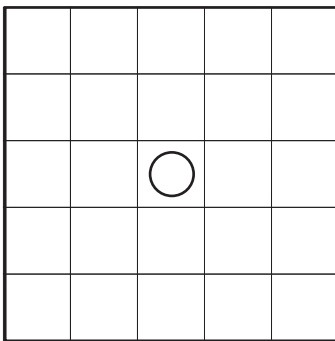

FLORESTONE PRODUCTS CO., INC.

2851 Falcon Drive • Madera, CA 93637

T. 559.661.4171 • T. 800.446.8827

F. 559.661.2070 • florestone.com