


REFERENCE DRAWING

| | |
|-------------------|--------------|
| TANK INSTALLATION | 9935-011-001 |
|-------------------|--------------|

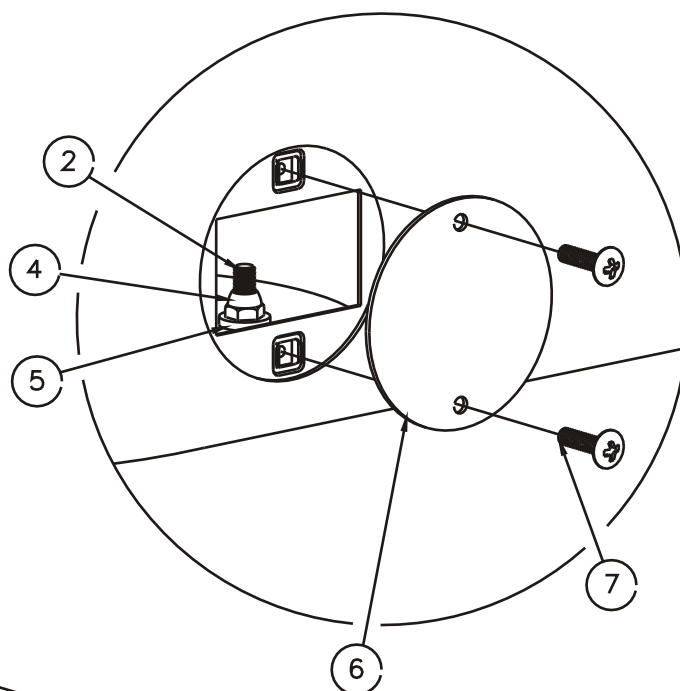


INSTALLATION INSTRUCTIONS INSTALLING TOILET BOWL TO CLOSET FLANGE.

NOTE: Installation of toilet waste connection is comparable to china units.

- A- Center line of closet flange waste connection ① should be 12" from finished wall and flush with finished floor.
- B- Clean any construction debris out of floor flange, then install the mounting bolts ② into the side slots of floor flange.
- C- Place wax ring ③ centered on top of floor flange ①, pressing firmly into place.

- D- Remove access plates ⑥ from toilet housing both sides, exposing mounting holes for toilet. Lift toilet bowl and set onto wax ring ③, making sure the mounting bolts ② go thru mounting holes in base of toilet housing. apply pressure evenly all around toilet bowl to ensure proper seal.
- E- Assure toilet is perpendicular to wall, adjust if necessary. Install nuts ④ and washers ⑤, tighten firmly and replace access plate ⑥ with mounting screws ⑦.
- F- For further instructions see drawing number 9935-011-001.

| | | | |
|---|---|---|--|
| NEO-METRO P.O. BOX 3527 • CITY OF INDUSTRY, CA 91744 USA 800-591-9050 • 626-855-4854 • www.neo-metro.com | TITLE METRO-URBAN EXPOSED TANK ON FLOOR TOILET - CAT. # 8950-3 | | |
| | MANUFACTURE DATE OCTOBER 1999 TO PRESENT | DATE ISSUED 10/05/99 | DRAWING NUMBER 9935-010-001 |
| | | DATE REVISED | |

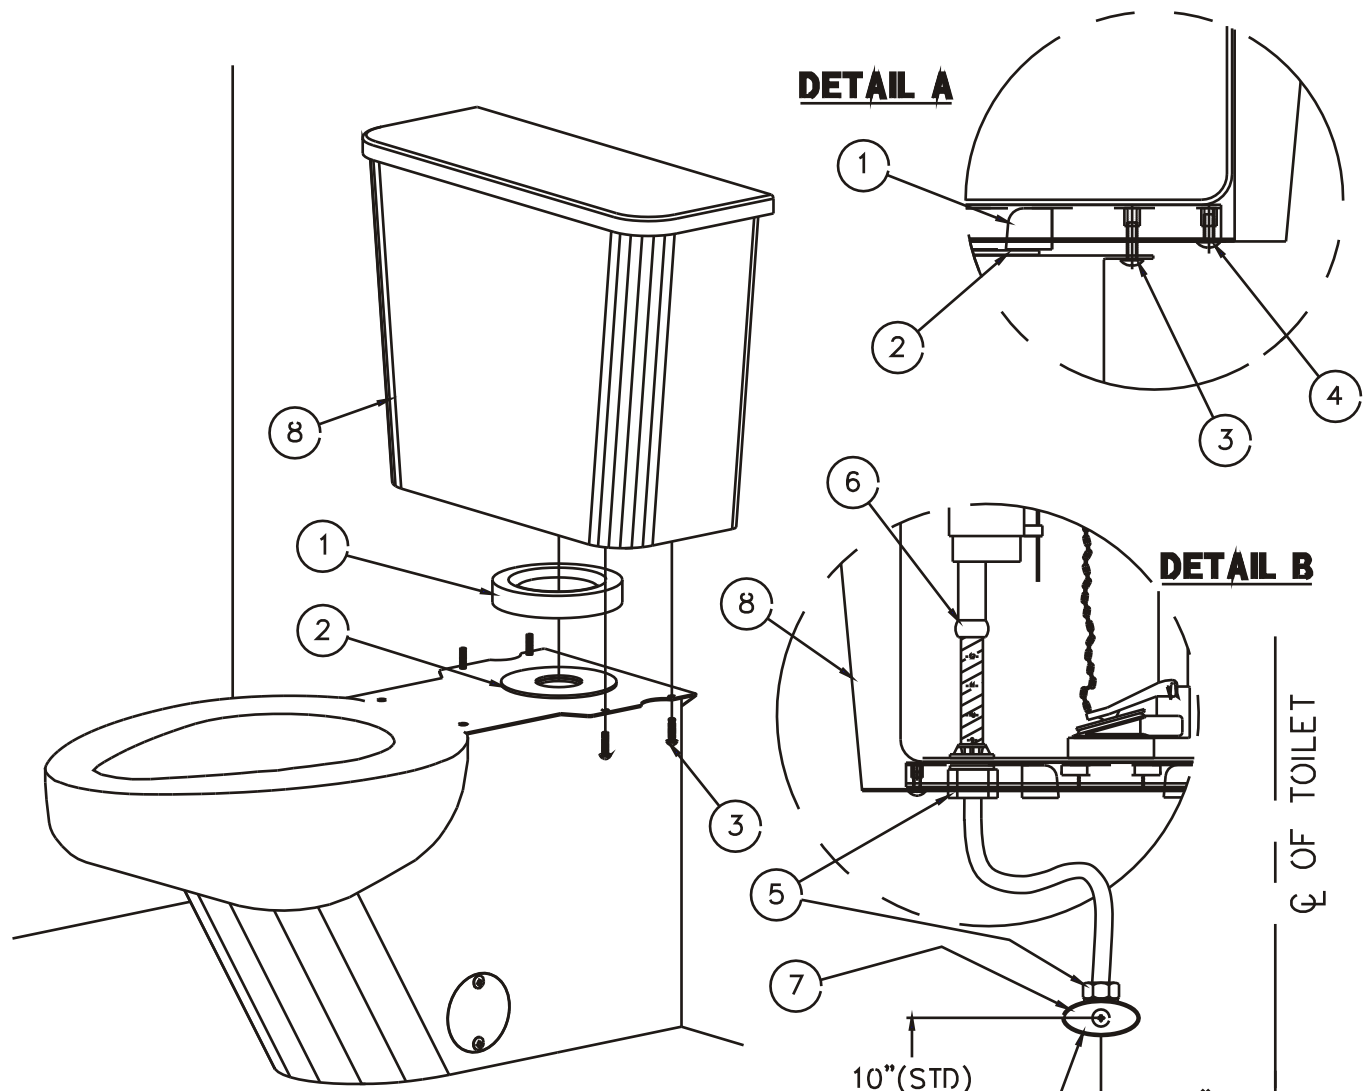

INSTALLATION INSTRUCTIONS INSTALLING FLUSH TANK TO TOILET BOWL

- A- For toilet bowl installation see drawing number 9935-010-001.
- B- Place rubber gasket ① on center of flush inlet ② making sure rounded inner edge is on top.
- C- Set cistern tank ⑧ on top of rubber gasket ①, making sure screws ③ line up with anchoring points ④ on both sides. (See Detail A)
- D- Tighten screws ③ evenly all around until rubber gasket ① makes watertight seal (see Detail A), and tank is level and does not wobble.

- E- After thoroughly flushing the supply line make up supply connection ⑤ to refill valve ⑥ (see Detail B), tighten 1/4 turn beyond hand tight, do not over tighten.
- F- Turn on water supply ⑦ and check for water leaks.

NOTE: See appropriate Fluidmaster, Inc.® installation instructions included for proper supply seal application, and flush time adjustments.

| | | | |
|---|---|--|--|
| NEO-METRO P.O. BOX 3527 • CITY OF INDUSTRY, CA 91744 USA 800-591-9050 • 626-855-4854 • www.neo-metro.com | TITLE METRO-URBAN EXPOSED TANK ON FLOOR TOILET - CAT. # 8950-3 | | |
| MANUFACTURE DATE OCTOBER 1999 TO PRESENT | DATE ISSUED 10/05/99 | DRAWING NUMBER 9935-011-001 | |
| | DATE REVISED 03/07/03 | | |