




**INSTALLATION INSTRUCTIONS FOR
Single Hole Bar Faucets
Product #'s: K8108, K8158,
K8160, K8161 & K8190**

FORM:LIT-INS-810-704


Step #1

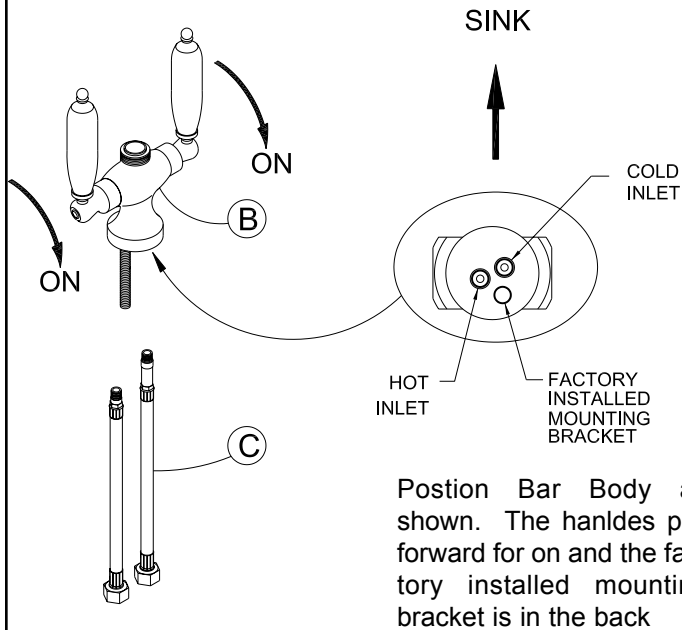

Position Bar Body as shown. The handles pull forward for on and the factory installed mounting bracket is in the back

Attach Hot and Cold Flexible Supply Hoses (C) to the bottom of the Bar Faucet Body (B).

Step #2

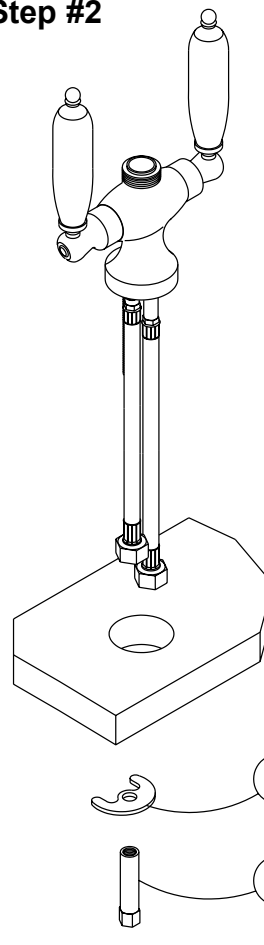


Position the Bar Body over the mounting hole as shown. (Note: The Handles pull forward to turn on.) The Mounting Bracket must be in the back.) Feed the Bar Supply Hoses (C) through the mounting hole on the counter.

From below the deck, install the Brass Washer (D) and Locknut (E) onto the Mounting Bracket. Before final tightening, adjust the Bar Faucet so it is centered and covers the mounting hole. Tighten Locknut (E).


Do not over tighten.

Step #3

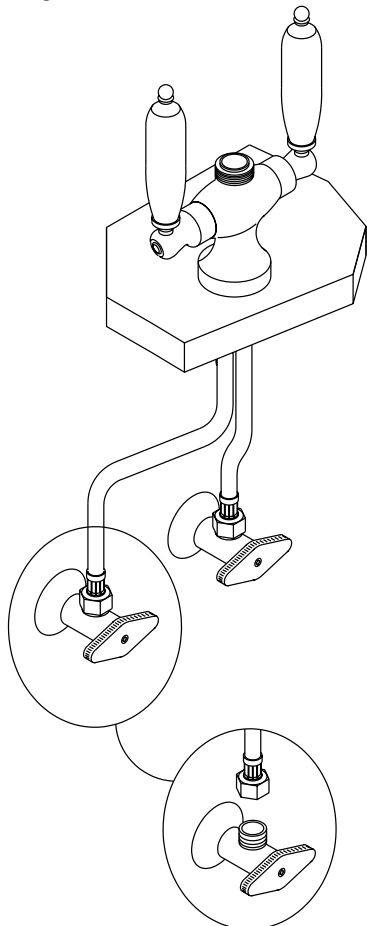

Attach the Hot and Cold Supply Hoses to the angle supply valves (Not supplied).

Step #4


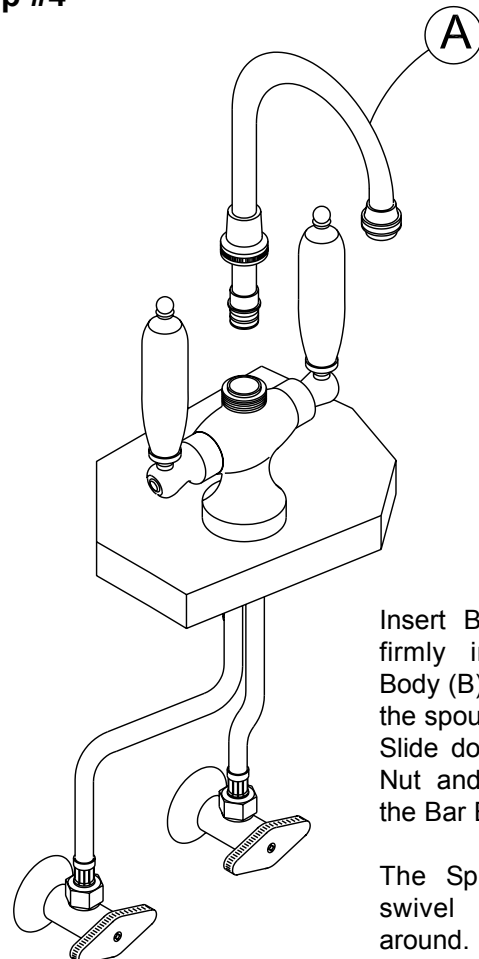


Insert Bar Spout (A) firmly into the Bar Body (B), making sure the spout bottoms out. Slide down the Spout Nut and tighten it to the Bar Body.

The Spout will now swivel completely around.

Phylrich

**Parts Breakout for
K8108, K8158, K8160, K8161, K8190**

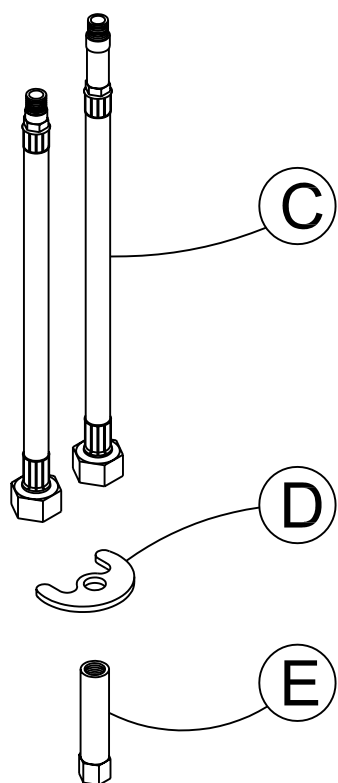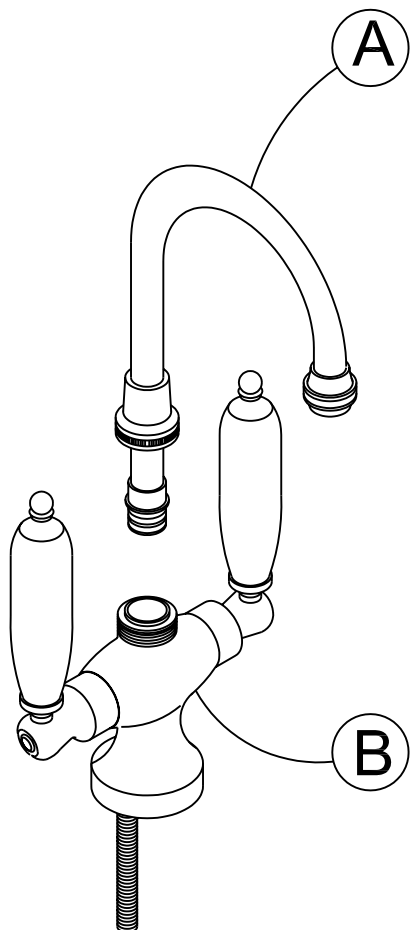

Final View

