


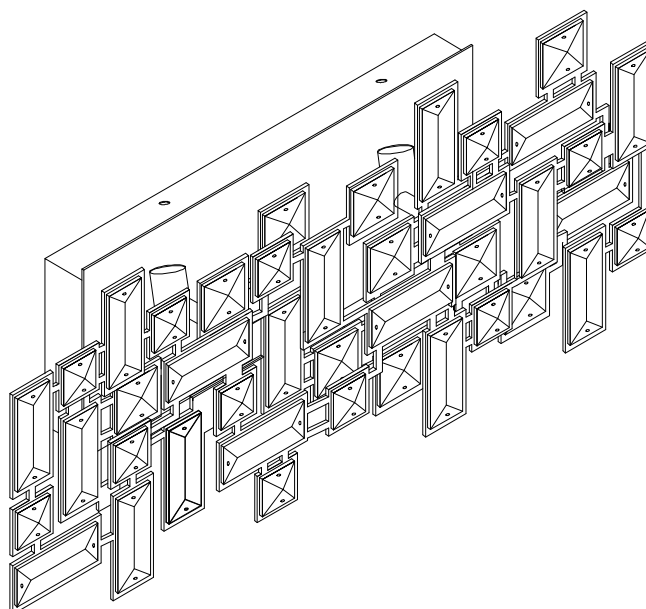

PRODUCT NAME: Paradigm wall sconce
ITEM NUMBER: 39817/39818/39819BCPC

Please consult your electrician for hanging fixture and wiring.




WARNING: Xenon bulbs get very hot and may burn you. Always make sure bulbs are off for a minimum of 10 minutes before handling. Fixture may be dimmed using an electronic low voltage dimmer.

Bulb(included): 40W G9 Bulbs


**PRODUCTS ARE NOT INENDED
FOR COMMERCIAL USE.**

**MADE IN CHINA
Page 1 of (2)**

IMPORTANT: Turn off the power at the main fuse or circuit breaker box before starting installation

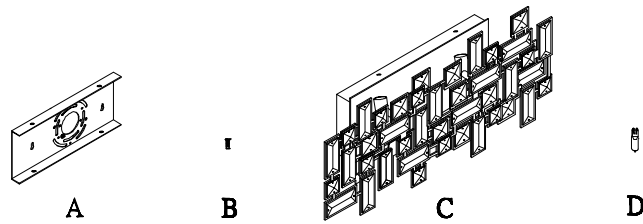


Locate all hardware & components before discarding packaging

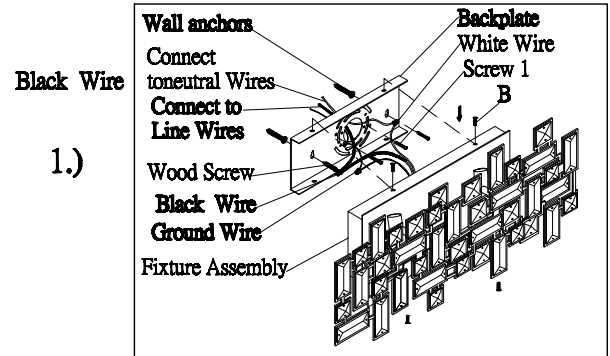


Step 1. Remove mounting bracket (A) from fixture and install it to electrical box. Wire fixture to wires in outlet box. Green wire is for ground.

2.)

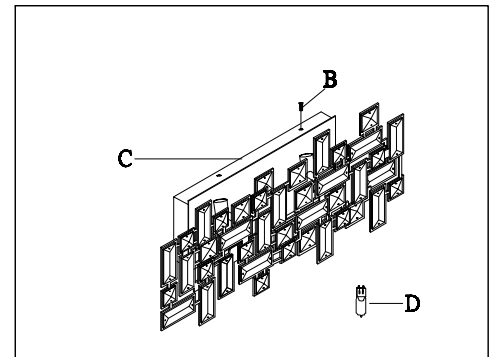

Step 2. Install fixture (C) to wall by tightening machine screws (B) so that back-plate meets the wall. Insert G9 bulbs (D) provided.

Diagram:
Replacement crystal

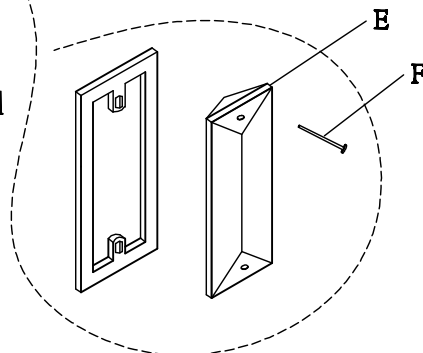

Cleaning & Care:

Clean with soft cloth and a mild detergent.
Do not use abrasive cleaner.