


### INSTALLATION INSTRUCTIONS

#### FOR RECESSED AND CORNER, INSTALLATIONS OF K-9852 AND K-9861 SHOWER RECEPTORS

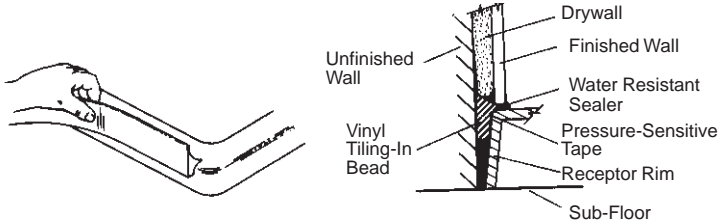

#### VINYL TILING-IN BEAD INSTRUCTIONS

1. There is enough vinyl bead supplied for either the K-9852 (60" x 36") or K-9861 (48" x 36") receptor. Some cutting will be required.
2. The vinyl bead takes the place of the tiling-in flange on the side(s) of the receptor and is necessary to prevent water from seeping into the framing. The installation kit contains a 7' vinyl bead and a 12' strip of pressure-sensitive sealing tape.
3. Apply bead just before installing receptor into position. Clean all dust, grease, and foreign material from receptor rim.
4. Temporarily position bead for measuring and proper installation (see illustration) without using sealing tape. Bead should start 3/4" back from front corner and extend along the rim all the way to the integral tiling-in flange at the rear of the receptor.  
**CAUTION: Do not apply vinyl tile bead or pressure-sensitive tape in temperatures below 40° F.**
5. Cut the same length(s) of pressure-sensitive tape, also starting 3/4" from front edge of rim. Remove paper backing and carefully apply tape to the receptor as shown.
6. Start vinyl bead 3/4" in from end of rim. Position bead properly on the receptor as illustrated. Press bead firmly against sealing tape for proper sealing. Repeat procedure while working towards opposite end.
7. After bead is in place, start at the area where it was first applied and rub bead firmly in place with heel of hand to ensure continuous seal.
8. The receptor is now ready for installation, leveling, framing, and application of wall material. Please refer to the installation instructions included with the receptor for additional instructions.