


# INSTALLATION INSTRUCTIONS T018.50X

# **EDGEMERE**™ TUB AND SHOWER

Thank you for selecting American Standard... the benchmark of fine quality for over 100 years.

To ensure that your installation proceeds smoothly-please read these instructions carefully before you begin.

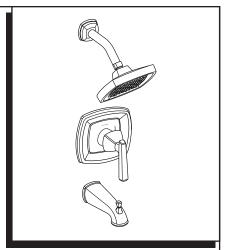

Certified to comply with ANSI A112.18.1M

#### **RECOMMENDED TOOLS**












Adjustable Wrench Channel Locks


#### **ROUGHING-IN DIMENSIONS**


To assure proper positioning in relation to wall.
 Note roughing-in dimensions.

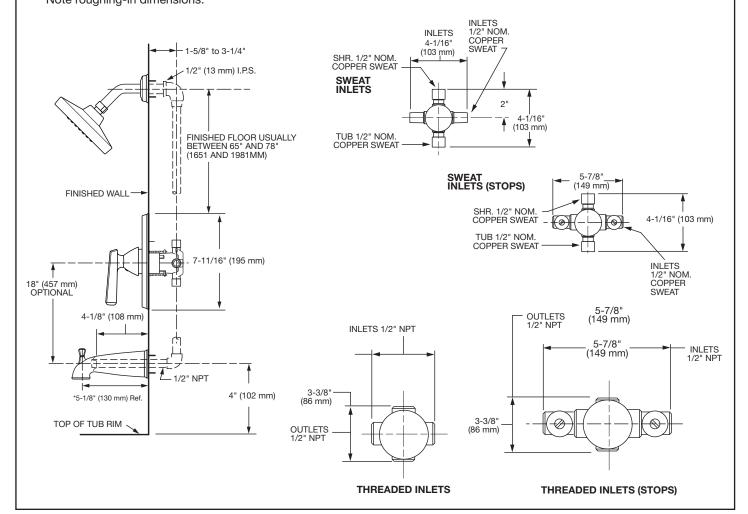

# **INSTALL VALVE TRIM**

- Figure 1. Remove plaster guard from valve. Push CAP (1) over VALVE CARTRIDGE (2) until seated against stop.
- Figure 2. Push ESCUTCHEON (3) onto CAP (1) and attach to valve body with LONG SCREWS (4). Mount DECORATIVE PLATE (5) to ESCUTCHEON (3) by aligning three PINS (6) on back side of DECORATIVE PLATE (5).

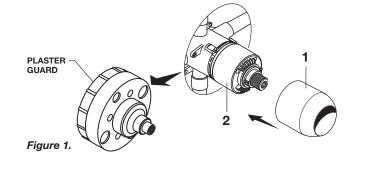


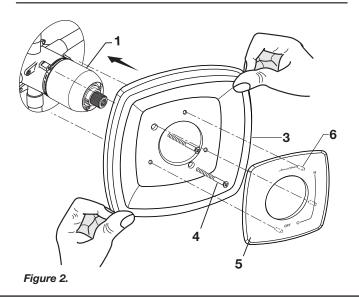

Protect finish on SHOWER HEAD

### **INSTALL TUB SPOUT, SHOWER HEAD,** SHOWER ARM WITH FLANGE

- Remove pipe cap and plug from shower and tub rough piping.
- Slip DECORATIVE PLATE (5), then slip TUB SPOUT (1) onto tub nipple and tighten with 2.5 mm Hex Wrench. **CAUTION: Protect finish on TUB SPOUT when** installing.
- Install SHOWER ESCUTCHEON (2) onto SHOWER ARM (3). Apply sealant or Teflon tape to threads on both ends of SHOWER ARM (3) and thread longer leg of SHOWER ARM (3) into shower elbow.
- Thread SHOWER HEAD (4) onto SHOWER ARM (3). **CAUTION: Protect finish on SHOWER HEAD and** ARM when installing.

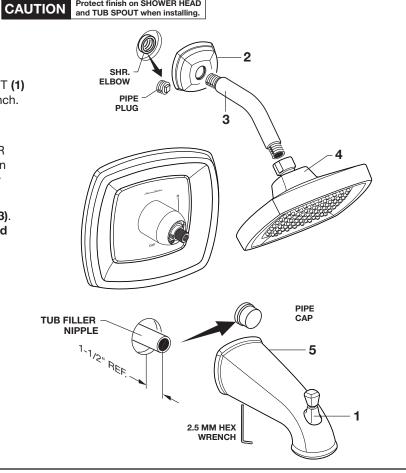


M965807 (3/17)

#### **ADJUST HOT LIMIT STOP**


#### **HOT LIMIT SAFETY STOP ADJUSTMENT**

- By restricting HANDLE rotation and limiting the amount of hot water allowed to mix with the cold, the HOT LIMIT STOP (1) reduces risk of accidental scalding. To set the maximum hot water temperature of your faucet, all you need to do is adjust the setting on the HOT LIMIT STOP (1).
- Turn CARTRIDGE STEM (2) to the OFF position (coldest setting) before making adjustment to HOT LIMIT STOP (1). Use a flat blade screwdriver to pry free the HOT LIMIT STOP (1). Pull forward and rotate counterclockwise to limit hot water temperature. Use ARROW (3) on CARTRIDGE (4) and NUMBERS (5) on HOT LIMIT STOP (1) for indication.

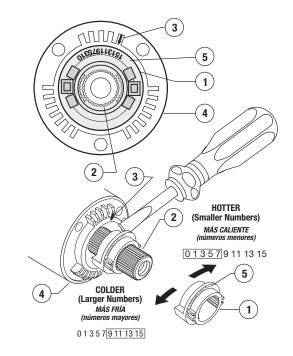


# 4 HANDLE INSTALLATION

• Install HANDLE (1) by pushing it onto CARTRIDGE STEM (2) and tightening SET SCREW (3) from below with 2.5 mm Hex Wrench supplied.

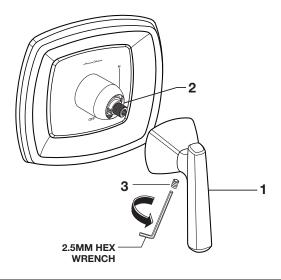

# 5 SERVICE

- If faucet drips, operate handle several times from "off" to "on". Do not apply excessive force.
- Clogged CARTRIDGE (4) inlets may cause reduced flow in "full on" hot or cold. To clean inlets, first turn off water supply, then:
- Remove HANDLE (1), CAP (2) and CARTRIDGE (4).
   Clean inlets and MANIFOLD (5).
- Reassemble CARTRIDGE (4), alternately tightening SCREWS (3).
- Replace CAP (2) and HANDLE (1). Check flow.

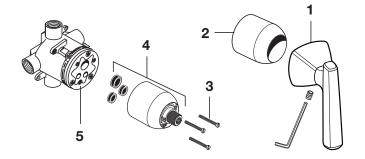

### 6 CARE INSTRUCTIONS:

DO: SIMPLY RINSE THE PRODUCT CLEAN WITH CLEAR WATER. DRY WITH A SOFT COTTON FLANNEL CLOTH. DO NOT: DO NOT CLEAN THE PRODUCT WITH SOAPS, ACID, POLISH, ABRASIVES, HARSH CLEANERS, OR A CLOTH WITH A COARSE SURFACE.

# American Standard

# **EDGEMERE**™ TUB AND SHOWER


MODEL NUMBER


T018.50X

, [

Replace the "YYY" with appropriate finish code

CHROME	002
BRUSHED NICKEL	295
LEGACY BRONZE	278

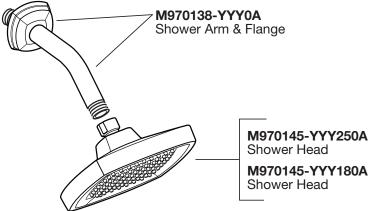

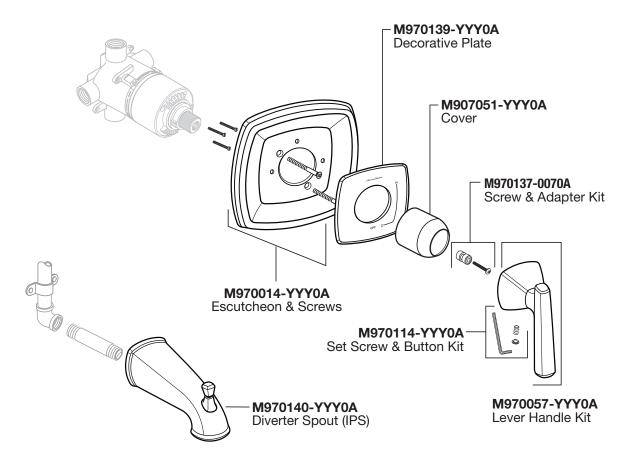

NOTE: TO AVOID SHOWER RISE OR OTHER RELATED ISSUES, DO NOT USE **PEX** CONNECTIONS ON ANY OF THE OUTLETS.

NOTEZ: POUR ÉVITER L'AUGMENTATION DE DOUCHE OU D'AUTRES ÉDITIONS LIÉES,

N'UTILISER PAS DE CONNEXIONS PEX SUR N'IMPORTE LAQUELLE DES LES ISSUES. HOT LINE FOR HELP

For toll-free information and answers to your questions, call: 1 (800) 442-1902

Mon. - Fri. 8:00 a.m. to 8:00 p.m. EST Saturday 10:00 a.m. to 4:00 p.m. EST

IN CANADA 1-800-387-0369 (TORONTO 1-905-306-1093) Weekdays 8:00 a.m. to 7:00 p.m. EST IN MEXICO 01-800-839-1200



PART OF LIXIL