


STONE FOREST VESSEL INSTALLATION

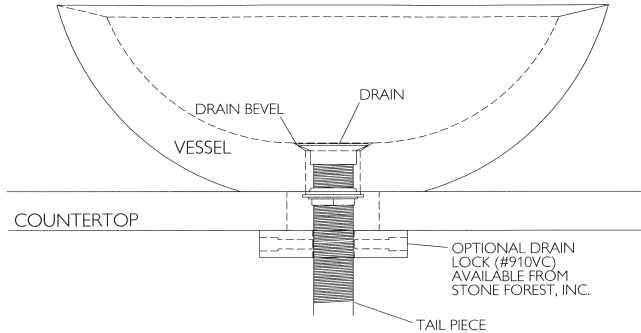

- A 3" hole in counter material is needed.
- Secure the vessel to the countertop using a bead of DAP or Henkel's, or construction adhesive, formulated for marble and granite.
- A drain lock is available from Stone Forest if needed. This collar can be fastened to the drain pipe and used to anchor the vessel to the counter material.

- Required drain use 9054D Grid Drain or 9058D Lift and Turn Drain. This can be supplied by Stone Forest at your request in select finishes.

- Do not use pop-up drains.

- Fasten drain to vessel per drain instructions.

Do not overtighten the drain nut.

Hand tighten only. Overtightening can stress the stone and cause the sink to fracture. Fractures/leaks caused by overtightening will not be covered by the Stone Forest Warranty. Hercules STA-PUT, DAP Qwik Seal or Henkels PolySeam Seal can be used between the drain bevel and drain. **Do not use plumbers putty.**