
INSTALLATION INSTRUCTIONS KITCHEN FAUCET WITH **PULLDOWN SPRAY**

/P&RT BRASS

Model No's: 1500-5113. 1500-5223,

1400-5113

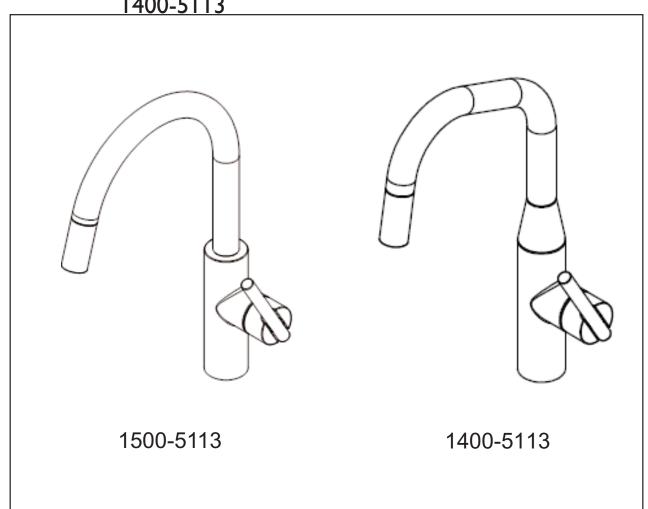


Congratulations on the purchase of your Newport Brass product, an excellent choice, that will give you years of quality service and enhance the look and style of your home.

Recommended Installation by a Professional Plumbing Contractor

Note: The use of petroleum base plumbers putty on our products will nullify the warranty. We recommend the use of clear silicone sealing materials.

If mounting faucet to stainless steel rim, an under-mount support, (e.g. wood, appropriate size \times 1/2"

thick), should be utilized.

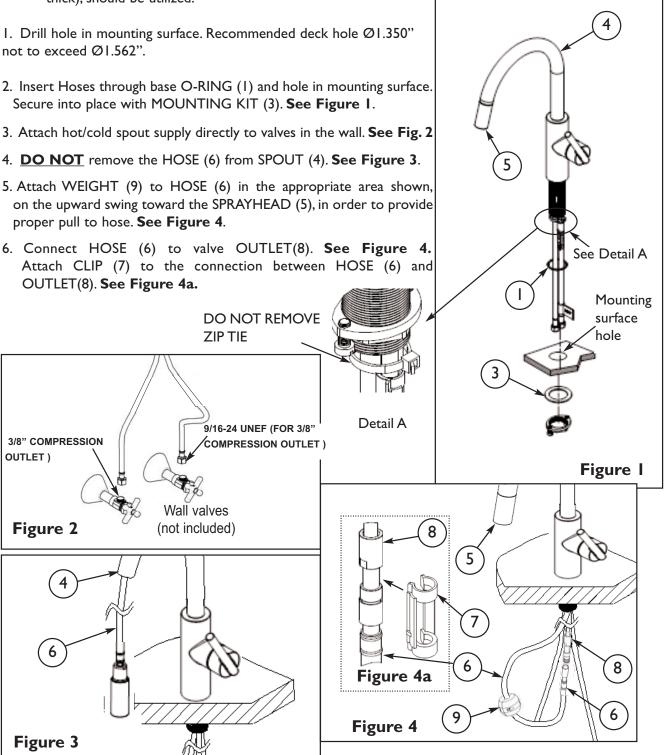

- 8. With faucet in the OFF position, open water supply valves. Inspect connections under sink for leaks. **DO**NOT turn faucet on yet.
- 9. Pull SPRAYHEAD (5) out from SPOUT (4). While holding HOSE (6), detach SPRAYHEAD (5). Aiming HOSE (6) into sink, turn on faucet to center position (mixed) and flush for one minute to remove debris from lines.
- Turn OFF faucet and reattach SPRAYHEAD (5) to HOSE (6).
 See Figure 5.
- 11. Check the SPRAYHEAD (5) by operating the trigger from aerator to spray.

