



SKU(s): 940005

# EDISON FREESTANDING FAUCET INSTALLATION

## BEFORE YOU BEGIN

We recommend consulting a professional if you are unfamiliar with installing plumbing fixtures. Signature Hardware accepts no liability for any damage to the plumbing, floor, walls, tub, or for personal injury during installation.

Observe all local plumbing and building codes.

Unpack and inspect the faucet for shipping damage. If any damage is found, contact our Customer Relations team at 1-866-855-2284.

## GETTING STARTED

- Ensure that you have gathered all the required materials that are needed for the installation.
- For these instructions, it is assumed that the floor has been finished and the water supply has been prepared.

## TOOLS AND MATERIALS:



Plumbers  
Tape



Thread  
Sealant



Drill



Adjustable  
Wrench



Level



Hex Wrench







# EDISON FREESTANDING FAUCET INSTALLATION

## INSTALLATION


1. If not already attached, connect the provided braided water lines to the faucet body. Apply thread sealant or plumber's tape to the threads before tightening. Hand tighten the connections firmly.

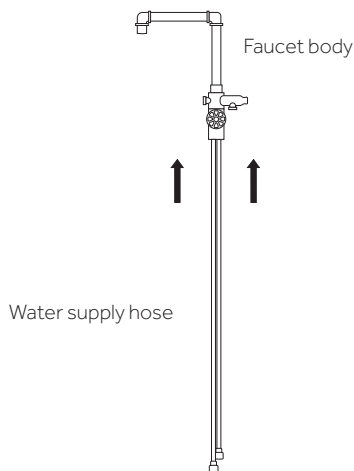


2. Feed the water lines through the faucet's riser pipe and connect the riser pipe to the faucet body, as shown. Set aside.

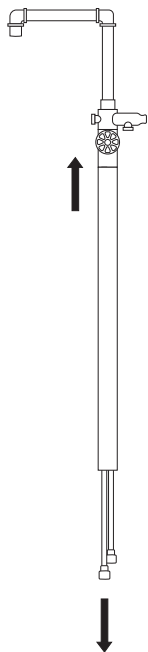

3. Position the base plate on the floor at the desired installation location. Attach the base plate to the floor using the provided hardware.

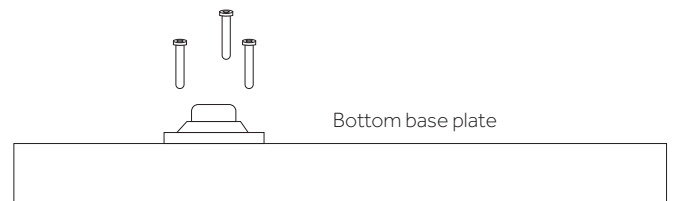


4. Connect the braided water lines to the main water supply below the floor. Ensure that you are connecting the hot and cold lines appropriately. Apply thread sealant or plumber's tape to the threads before attaching. Hand tighten firmly, then finish tightening using an adjustable wrench. Be careful not to overtighten.

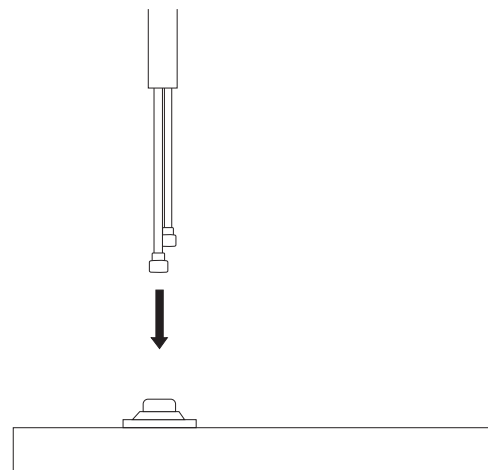




# EDISON FREESTANDING FAUCET INSTALLATION


5. Briefly turn on the main water supply to ensure that there are no leaks at the connections. Once you have determined that there are no leaks, turn the water supply back off and continue with the installation.

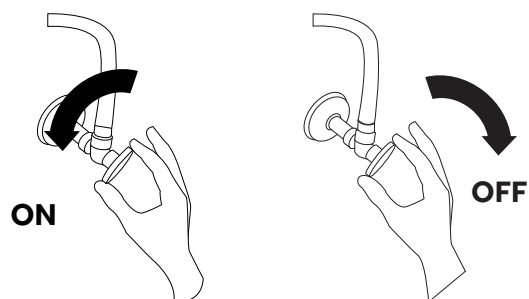

6. Insert the faucet into the installed base plate. Position the faucet as desired, then secure it by tightening the three set screws on the base plate.

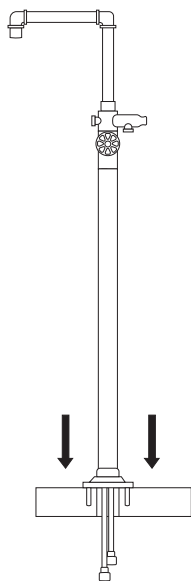

7. Finish your installation by attaching the hand shower to the faucet using the flexible shower hose. Tighten each connection firmly.

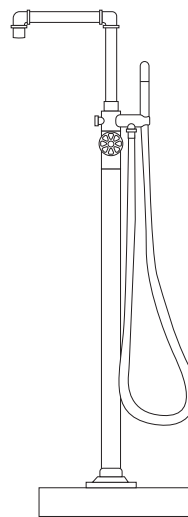

8. Once installation is complete, turn on the main water supply. Remove the aerator from the spout and turn the faucet on. Allow the water to flow for 60 seconds to remove any dust or loose sediment within the water lines. Check for any leaks, and that hot and cold water are running appropriately. Divert the water to the hand shower and allow the water to flow through the hose for approximately 60 seconds.

