

Installation & Assembly Instructions

B132

For Silhouette Sconces 217910F

Page 1 of 4

CAUTION: FAILURE TO INSTALL THIS FIXTURE PROPERLY MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH AND PROPERTY DAMAGE. We recommend installation by a licensed electrician. This product must be installed in accordance with applicable installation code(s), by a person familiar with the construction and operation of the product and the hazards involved.*

Caution: Do not exceed maximum wattage noted on fixture. Use only recommended bulbs with fixture.

For fixtures requiring assembly, please refer to assembly instructions before installation.

Please Note: This fixture is designed to be mounted on a standard wall surface and may not be suitable for all applications. If installing in a non-wood frame application, we recommend consulting a qualified builder or electrician.

Prepare to Install (Figure 1 & 1A)

Component Parts


- A Fixture
- B Screws (4)
- P Front Plate
- Q Allen Screws (4)

CAUTION: BE SURE POWER IS OFF AT THE MAIN BREAKER BOX PRIOR TO INSTALLATION.


1. Carefully unpack the fixture from the carton.
2. Remove the four Allen screws (Q) attaching the front plate (P) to the fixture (A).

Note: There are magnets located in the center standoffs which might come loose when the front plate is removed. If this happens the magnets can be reattached by adding a little super glue and pushing back into the standoff. See Figure 1A.

3. Remove four screws (B) from front of fixture to release wall mounting bracket and discard screws.

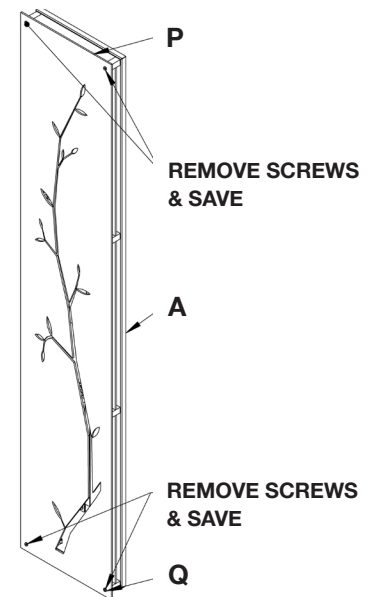

(Figure 1)

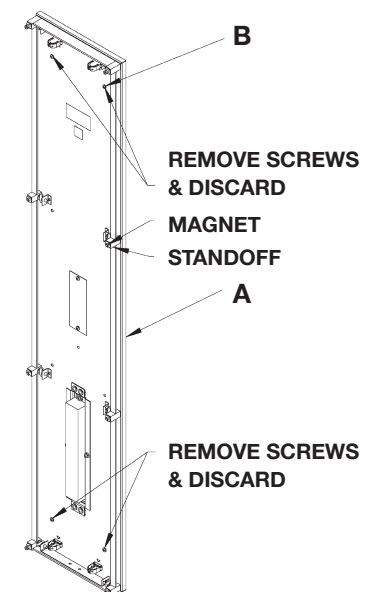

(Figure 1A)

(Continued)

If you need further assistance, or find that you are missing any parts, please contact the dealer from which you purchased this product. We hope you enjoy your fixture!

* Hubbardton Forge will not be liable for injury or damage caused by improper installation, lamping or use of this fixture.

Installation & Assembly Instructions

B132

For Silhouette Sconces 217910F

Page 2 of 4

Install Wall Mounting Bracket (Figure 2)

Component Parts


- C Wall Mounting Bracket
- D Lag Screw (4)
- E Anchors (2)
- F #10 Screws (2)

1. Place the wall mounting bracket (C) over the electrical box using the center hole provided being sure to hold it plum and level. With a pencil, mark the location of all mounting holes in the wall mount bracket on the wall behind.

IMPORTANT: Wall mounting bracket must be secured to a solid framing member in at least four locations. Do not depend on dry wall anchors alone to support this fixture. If in doubt, contact a qualified electrician.

Set aside the wall mounting bracket and drill 1/4" holes in the center locations marked on the wall. For holes using anchors, place the tapered end of the anchors (E) into the holes and gently tap them flush to the wall using a light weight hammer.

2. Thread the wires in the electrical box through the hole in the wall mounting bracket (C) while moving the bracket into position. Using the 1" #10 screws (F), screw the bracket securely to the wall. Be careful not to over-tighten or strip the anchors.
3. Using four lag screws (D) attach wall mounting bracket (C) to a structural member in the wall. We've supplied lag screws with your fixture; however, different materials and/or construction methods may require different fasteners. If in doubt, contact a qualified electrician. Do not attach wall mounting bracket directly to outlet box.

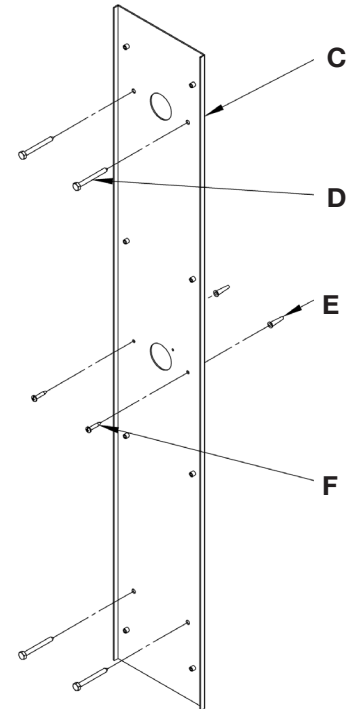

(Figure 2)

(Continued)

If you need further assistance, or find that you are missing any parts, please contact the dealer from which you purchased this product. We hope you enjoy your fixture!

*Hubbardton Forge will not be liable for injury or damage caused by improper installation, lamping or use of this fixture.

Installation & Assembly Instructions

B132

For Silhouette Sconces 217910F

Page 2 of 4

Install Fixture (Figure 3)

Component Parts


- A Fixture
- C Wall Mounting Bracket
- G #8 Black Screw (10)
- H Ground Screw
- I Cupped Washer
- J Wireway Cover
- K Threaded Standoff

CAUTION: BE SURE POWER IS OFF AT THE MAIN BREAKER BOX PRIOR TO INSTALLATION.

1. Remove the wireway cover (J) and save for later installation.
2. Hold the fixture (A) close to the wall mounting bracket (C) and ground the mounting bracket using the green ground screw (H) and cupped washer (I) to secure a pigtail lead to the bracket.
3. Pull the four supply wires and ground wires through the front wireway area.
4. Place the fixture (A) over the bracket so the holes in the top and bottom match the threaded standoffs (K) protruding from the wall mounting bracket (C). Secure the fixture by threading the #8 black screws (G) through the holes in the fixture (A) and into the wall mounting bracket (C).
5. Using suitable wire connectors (not provided), connect fixture wires to supply wires (white to white, black to black, and bare copper or green to bare copper or green).

CAUTION: MAKE SURE WIRE CONNECTORS ARE TWISTED ON SECURELY, AND NO BARE WIRES ARE EXPOSED.

6. Carefully tuck all wires behind the fixture assembly and inside the wall mount bracket.
7. Install the wireway cover (J) and secure with #8 black screws (G).
8. Install light bulbs.
9. Refer to diffuser and front mounting instructions below to complete installation.

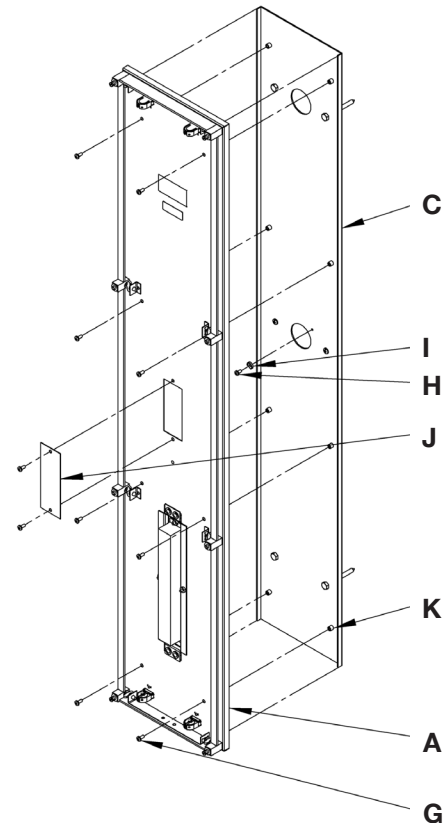

(Figure 3)

(Continued)

If you need further assistance, or find that you are missing any parts, please contact the dealer from which you purchased this product. We hope you enjoy your fixture!

* Hubbardton Forge will not be liable for injury or damage caused by improper installation, lamping or use of this fixture.

Installation & Assembly Instructions

B132

For Silhouette Sconces 217910F

Page 4 of 4

Install Side Diffuser Glass (Figure 4)

Component Parts

- L Diffuser (2)
- M Diffuser Clip (8)
- N Support Blocks (8)


1. Install diffuser (L) so it rests between support blocks (N) and diffuser clip (M).

Install Front Glass & Plate (Figure 5)


Component Parts

- A Fixture
- O Acrylic Panel
- P Front Plate
- Q Screw (4)

1. Remove the four screws (Q) from the front of fixture (A).
2. Remove protective covering from acrylic panel (O).
3. Slip screw (Q) through front plate (P) and acrylic panel (O).
4. Thread screw (Q) into fixture (A) until snug against front plate (P).
5. Restore electricity at main breaker box.

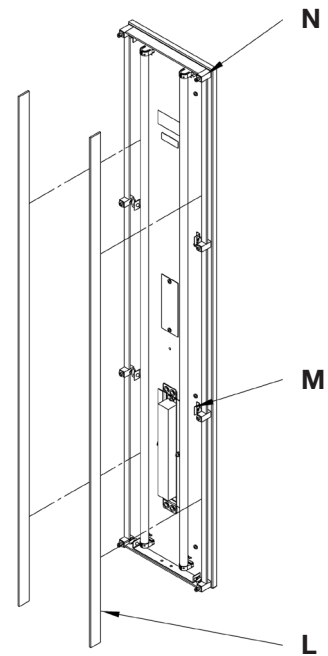

(Figure 4)

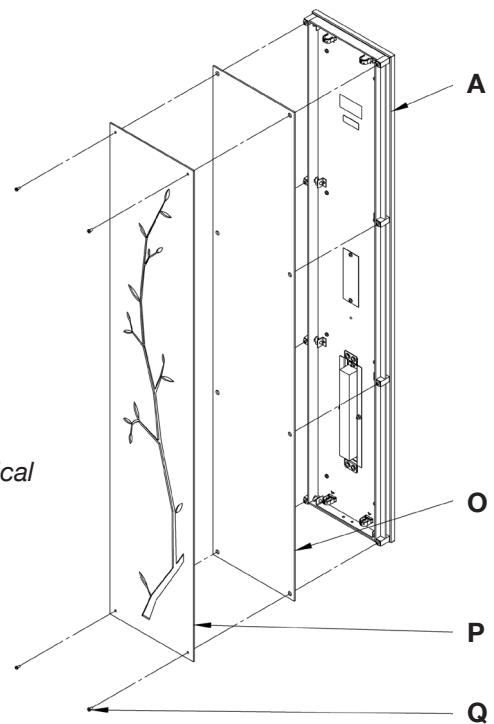

(Figure 5)

This illustration represents a typical fixture and may not match every style.

If you need further assistance, or find that you are missing any parts, please contact the dealer from which you purchased this product. We hope you enjoy your fixture!

***Hubbardton Forge will not be liable for injury or damage caused by improper installation, lamping or use of this fixture.**