Q U O I Z E L 6 CORPORATE PARKWAY GOOSE CREEK, SC. 29445 www. quoizel. com

Quoizel, Inc. 6 Corporate Parkway Goose Creek, SC 29445

Customer Service Phone 631.273.2700 Fax 631.231.7102 www.quoizel.com

Assembly Instruction Sheet #IS-TF1558TWT For Style TF1558TWT

Tools Required: None

Bulb Recommended: (2) Medium Base Bulbs 75W Maximum

Estimated Assembly Time: 15-20 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.



Warnings and Cautions


Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Do not subject glass parts to any shock while in operation or shattering may result.

Package Contents

Part	Description	Quantity
Α	4"L Stem with Hex Nut	1 pc.
В	Base	1 pc.
С	4"L Spacer Tube	1 pc.
D	Finial	1 pc.
E	Check Ring	1 pc.
F	Shade	1 pc.

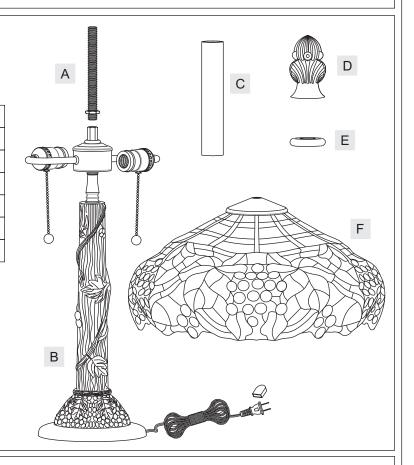


Thank you for purchasing a Quoizel product.


Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700 or visit us on-line at www.quoizel.com

© 2013 Quoizel Inc.

April 2013



FINISH: WESTERN BRONZE

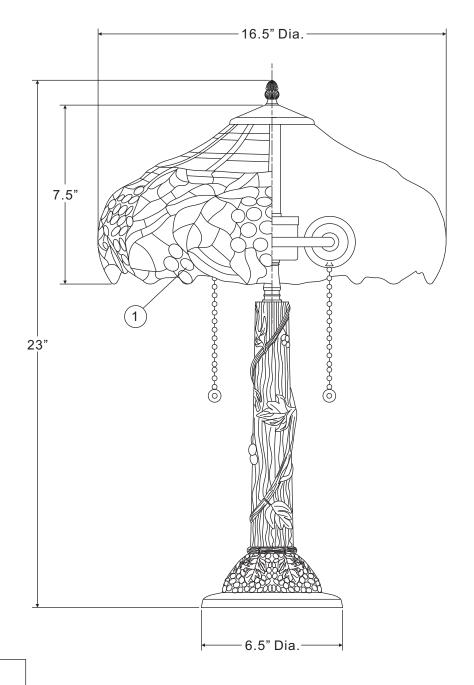



(2)75W Medium Base Bulbs (Not Supplied)

NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/2"


N	O. PART NUMBE	NO. PART NUMBER REPLACEMENT PART DESCRIPTION	REQ.		
	1 G3546SH	1 G3546SH TIFFANY SHADE 16.5"D	1		
2of4					



Assembly Instruction Sheet #IS-TF1558TWT For Style TF1558TWT


STEP 1 - Install Stem with Hex Nut

A. Thread the Hex Nut end of Stem (A) into the Hex Coupling on the top center of the Base (B). By using pliers, thread the Hex Nut against the Hex Coupling and hand tighten until snug.

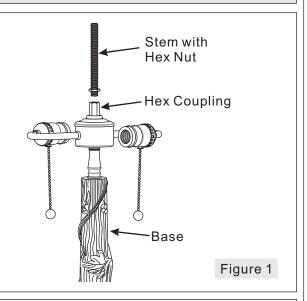

STEP 2 - Install the Shade

A. Place Spacer Tube (C), Check Ring (E) and Shade (F) over the Stem (A) as shown. Secure by threading the Finial (D) onto the Stem (A). Hand tighten until snug.

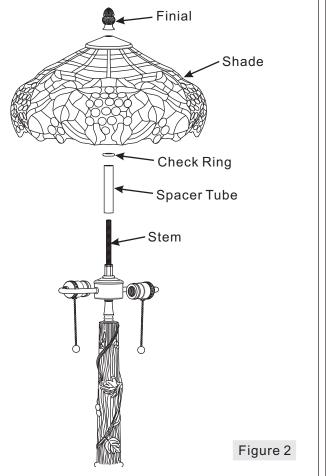

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700

or visit us on-line at www.quoizel.com

© 2013 Quoizel Inc.

April 2013




Assembly Instruction Sheet #IS-TF1558TWT For Style TF1558TWT

STEP 3 - Install Bulb

- A. This fixture uses standard bulbs with medium screw bases. Maximum 75 watts.
- B. Insert bulb and screw snugly into place.

Your fixture is now assembled and ready to use. Enjoy!

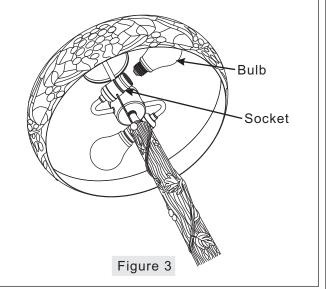

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700

or visit us on-line at www.quoizel.com

© 2013 Quoizel Inc.

April 2013