

# Assembly Instruction Sheet #IS-TFX1885Y\_R1

## For Style TFX1885Y

**Tools Required:** Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

**Bulb Recommended:** (1) C7 Candelabra Base Bulb 7W Maximum

**Estimated Assembly Time:** 20-30 minutes

**Preparation:** Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

### ⚠ Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Do not subject glass parts to any shock while in operation or shattering may result.


### ⚠ Care of Tiffany Style Shade

A new tiffany lamp shade has an oil film applied to the shade that protects the tiffany shade from scratches during shipment. If the oil applied is too heavy you can remove the excess oil film with a paper towel. Gently wipe away the excess oil.


For general cleaning of tiffany shades use a gentle lemon oil-based furniture polish applied to a soft cloth and wipe gently.

If a white powder appears on the soldered joints of the tiffany shade this is a normal oxidation process. Use a small amount of lemon oil or mineral oil applied directly to oxidized areas and the soldered area will return to like new.

### Package Contents

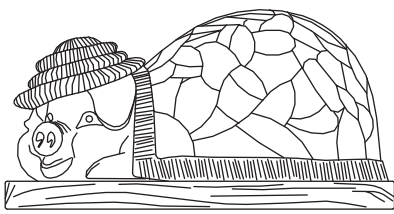



A Pig x 1

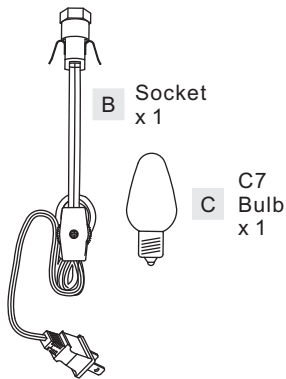

B Socket x 1

C C7 Bulb x 1


TFX1885Y  
FINISH: VINTAGE BRONZE

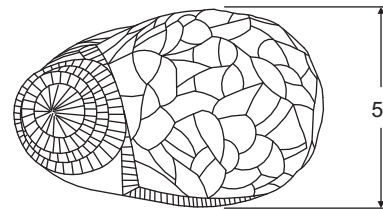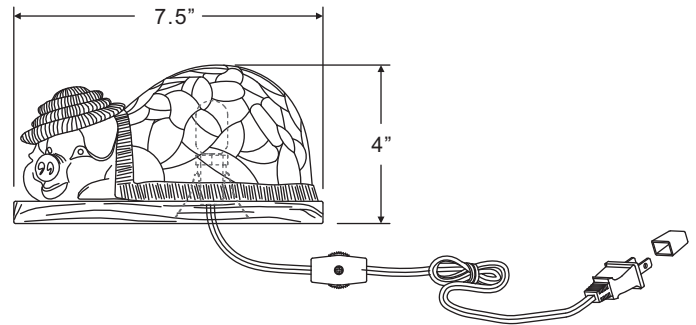

NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/2"


### STEP 1 - Install Bulb

- A. This fixture uses C7 bulb (C) with candelabra screw bases. Maximum 7 watts.
- B. Insert the bulb (C) and screw into Socket (B).

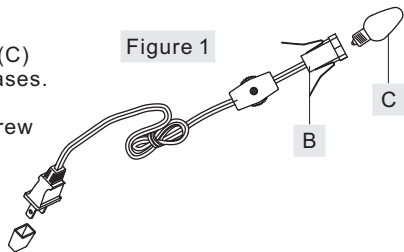

### STEP 2 - Install the Socket

- A. Insert the Socket (B) with C7 Bulb (C) inside of the mounting hole on the Pig (A) and secure with the Spring Tabs on the Socket (B) catching the mounting hole on the Pig (A).
- B. Place the supply wire into the slot on the Pig (A).

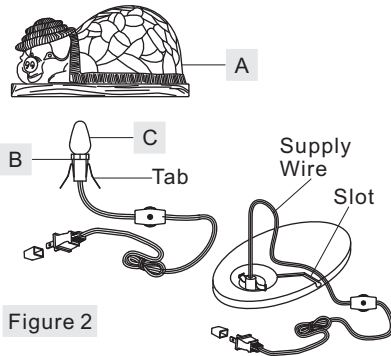

Your fixture is now assembled and ready to use. Enjoy!

Thank you for purchasing a Quoizel product.  
Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700  
or visit us on-line at [www.quoizel.com](http://www.quoizel.com)