

Cabinet Savers Size Information and Installation Instructions

Cabinet Savers Size Ordering Instructions

Existing Cabinets:

Measure cabinet's inside dimensions, order from the chart below based on the Cabinet Savers Actual Size.

Note: the Depth of the Cabinet Savers can be adjusted by trimming the front lip with a utility knife.

New Cabinets:

Order based on Cabinet Size from the chart below.


Note: new cabinets are sized to the outside dimensions.

| Cabinet Size | Cabinet Savers Actual Size | Liquid Capacity |
|--------------|-----------------------------|----------------------|
| 18" x 16" | 16½"W x 14½" to 16"D x 1¾"H | 1 Quart of Liquid |
| 24" x 18" | 22"W x 16 to 17½"D x 1¾"H | 1.3 Quarts of Liquid |
| 24" x 21" | 22"W x 19½ to 20½"D x 1¾"H | 1.6 Quarts of Liquid |
| 30" x 21" | 28"W x 19½ to 20½"D x 1¾"H | 2.8 Quarts of Liquid |
| 36" x 21" | 34"W x 19½ to 20½"D x 1¾"H | 3.6 Quarts of Liquid |
| 24" x 24" | 22"W x 22 to 23¾"D x 1¾"H | 2.3 Quarts of Liquid |
| 27" x 24" | 25"W x 22 to 23¾"D x 1¾"H | 2.6 Quarts of Liquid |
| 30" x 24" | 28"W x 22 to 23¾"D x 1¾"H | 3.1 Quarts of Liquid |
| 33" x 24" | 31"W x 22 to 23¾"D x 1¾"H | 3.4 Quarts of Liquid |
| 36" x 24" | 34"W x 22 to 23¾"D x 1¾"H | 4.1 Quarts of Liquid |

****All Sides are 1.75" high except front lip****

Measurements and Install Info

Measure Inside Width

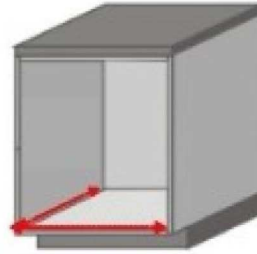


Measure Depth: Inside Back To Front

Install Info:



Trim Off Front Excess

Install Info:

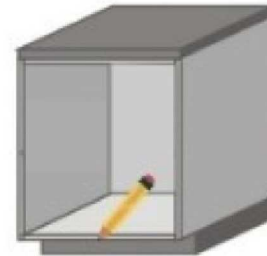

Mark drain hole position on cabinet, drill 3/8" hole for drain cone. Cut tip off drain cone.

Then slide the Cabinet Savers into the cabinet with the drain cone in the hole.