



POLE SOCKETS

FOR USE IN CLOSETS TO HOLD POLE.

INSTALLATION INSTRUCTIONS

TOOLS REQUIRED: Drill, 1/16" drill bit, Phillips screwdriver, awl or pencil.

1. Measure distance from wall to wall, subtract approximately 1/4" and cut pole. (This will allow pole to fit onto sockets.)
2. Position full rim socket (A) on wall at desired height. (See illustration 1) Mark, drill pilot hole and secure.
3. Direct pole into socket (A) and position socket (B) so pole will be level. Mark, drill pilot hole and secure.

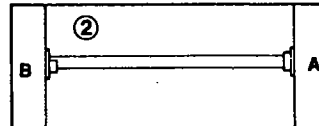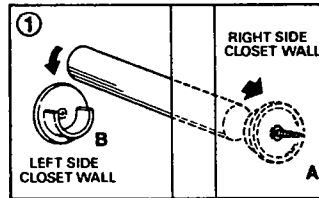

NOTE: Illustration 2 shows view of pole and sockets secured in level position.

ASK FOR OTHER FINE HARDWARE BY H.B. IVES



WINDOW LOCKS



DOOR STOPS



COAT & HAT HOOKS



DOOR BOLTS



POLE SOCKETS C586P

MADE IN U.S.A.