




Classic Simply Solder W&O Installation

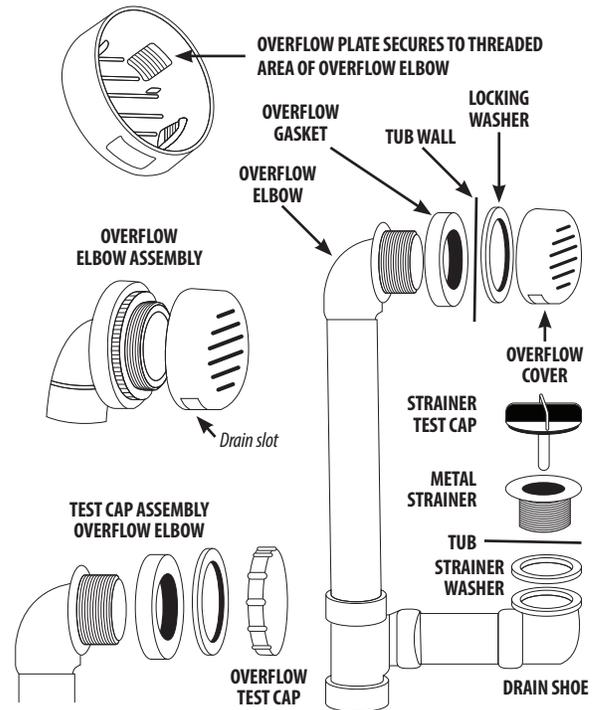

Classic Simply Solder W&O Installation Instructions

- 1) Adjust height of overflow pipe and waste arm and solder in place.
- 2) Put the overflow gasket onto the threaded area of the overflow elbow. Insert through tub opening from the back of the tub. For marble tubs, use included thin overflow gasket.
- 3) To secure overflow elbow to the tub, screw the locking washer onto the threaded area of the overflow elbow. Hand tighten locking washer to the inside of the tub wall.
- 4) Place overflow cover plate over the overflow elbow with the drain slot facing down. Secure to the overflow elbow by pushing until flush against tub wall.
- 5) Apply silicone or plumbers putty under lip of metal strainer to create a watertight seal. Check installation instructions if using plumbers putty with ABS fittings to ensure compatibility.
- 6) Install strainer washer underneath the tub wall on top of drain shoe and screw metal strainer down from the top side of the tub.
- 7) Install drain stopper choice (Push eN Lift, Lift & Turn, Touch Toe) into metal strainer.
- 8) Should it be necessary to remove overflow cover plate from the overflow elbow, gently grip outer edge of overflow cover plate and unscrew counter clockwise. For additional protection: Insert enclosed screw into hole at the bottom of the overflow cover plate. Gently screw into bottom of overflow elbow. Do not over tighten. This will lock the overflow cover plate onto the overflow elbow.

Testing Instructions

- A) If test is required, be certain "O" ring is in place on the inside of the overflow test cap. Screw overflow test cap onto threaded overflow elbow. Hand tighten only.
- B) Screw strainer test cap into metal strainer. Hand tighten only.
- C) After the test is complete, remove the two test caps and install overflow cover plate and stopper.

Item #	Product Description	Model #	Case Qty
Standard Length (6-1/16- to 7-1/2-inch length by 12-9/16- to 15-3/16-inch height)			
61446	Classic Full Kit Simply Solder 20 GA Standard Length with Push eN Lift Stopper - CP	ABA14407CLSHF	12
64538	Classic Full Kit Simply Solder 17 GA Standard Length with Push eN Lift Stopper - CP	ABA1440717CLSHF	12
64576	Classic Full Kit Simply Solder 20 GA Standard Length with Turn Top Stopper - CP	ABA14357CLSHF	12
61445	Classic Full Kit Simply Solder 17 GA Standard Length with Turn Top Stopper - CP	ABA1435717GACLSHF	12
64591	Classic Full Kit Simply Solder 20 GA Standard Length with Touch Toe Stopper - CP	ABA14217CSCLSHF	12
64598	Classic Full Kit Simply Solder 17 GA Standard Length with Touch Toe Stopper - CP	ABA14217CS17CLSHF	12
Extra Long (11-1/6- to 12-1/2-inch length by 20-9/16- to 23-3/16-inch height)			
61143	Classic Full Kit Simply Solder 20 GA Extra Long with Push eN Lift Stopper - CP	ABA14408CLSHF	9
61718	Classic Full Kit Simply Solder 17 GA Extra Long with Push eN Lift Stopper - CP	ABA1440817CLSHF	9
64587	Classic Full Kit Simply Solder 17 GA Extra Long with Turn Top Stopper - CP	ABA1435817CLSHF	9
64612	Classic Full Kit Simply Solder 17 GA Extra Long with Touch Toe Stopper - CP	ABA14218CS17CLSHF	9

Components		
Item #	Product Description	Case Qty
53056	Touch Toe CS Stopper 3/8" Chrome	1
58975	Test Stopper for Strainer	1
59601	Overflow Test Cap ABS - Classic	1
59902	Classic High Flow Overflow Plate - Chrome	1
59900	Round Locking Washer - Classic	1
59998	Thin Sponge Overflow Gasket - Classic	1
59516	Sponge Overflow Gasket - Classic	1