

Features

- Premium material construction.
- Intended for use with Rite-Temp[®] or HiFlow Rite-Temp[®] valves.
- Traditional lever handle.
- Includes 5-1/4" (133 mm) diverter bath spout with 1/2" NPT connection.

Required Accessories

K- 304-K Pressure-balancing Valve Less Stops or

K- 304-KS Pressure-balancing Valve With Stops or

K- 304-CS Pressure-balancing Valve With Stops $\ensuremath{\textit{or}}$

K- 304-CX Pressure-balancing Valve Less Stops $\ensuremath{\textit{or}}$

K- 304-PS Pressure-balancing Valve With Stops or

K- 304-PX Pressure-balancing Valve Less Steps or

K- 304-US Pressure-balancing Valve With Stops or

K- 304-UX Pressure-balancing Valve Less Stops $\ensuremath{\textit{or}}$

K- 2971-KS 3/4" Pressure-balancing Valve

Recommended Accessories

88526 Thin Wall Trim Kit

Optional Accessories

GP1025388 Deep Roughing-in Kit for Forte® and Bancroft®



Bath and Shower Trim

Forté[®]

K-T10274-4A






Codes/Standards ASME A112.18.1/CSA B125.1 ASSE 1016

KOHLER[®] Faucet Lifetime Limited Warranty See website for detailed warranty information.



KOHLER. Faucets

Forté® Bath and Shower Trim K-T10274-4A

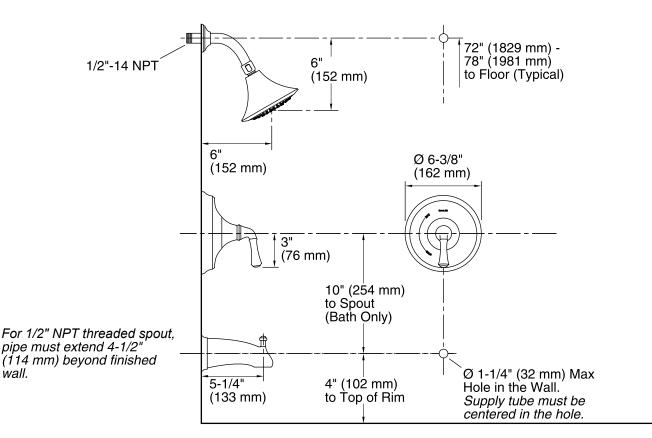

Technical Information

All product dimensions are nominal.

Notes

NOTICE: Risk of product damage. Long screws, for installing trim, can damage the K-2971-KS valve. Consult the trim installation guide to verify if the thin wall installation kit (88526) is needed.

Install this product according to the installation guide.

Install the Rite-Temp® valve according to the valve installation guide.

Avoid cross-flow conditions. Do not install a shut-off device on either valve outlet.

Cap the shower outlet if the deck-mounted spout, diverter, or handshower is connected to the spout outlet.

If installing a K-304 valve, install straight pipe or tube drop of 7" (178 mm) to 18" (457 mm) with single elbow between the valve and the wall-mount spout.

