

Installer's Guide

Heat Pump Snow Legs Kit

BAYLEGS002 & BAYLEGS003

⚠ WARNING: HAZARDOUS VOLTAGE - DISCONNECT POWER BEFORE SERVICING

ALL phases of this installation must comply with NATIONAL, STATE AND LOCAL CODES


IMPORTANT — This Document is **customer property** and is to remain with this unit. Please return to service information pack upon completion of work.

INSPECTION:

Check carefully for any shipping damage. This must be reported to and claims made against the transportation company immediately. Any missing parts should be reported to your supplier at once and replaced with authorized parts only.

INSTALLATION:


1. Installation of Heat Pump Snow Legs must be made prior to connecting refrigerant lines and/or electrical power to unit.
2. The BAYLEGS002 kit contains (4) 6" mounting legs. Before placing each leg under unit, remove protective mylar exposing adhesive pad. Locate one snow leg under each corner as illustrated in Figures 1 and 3; do this at all four corners of the Heat Pump.
3. If BAYLEGS003 (4" extension kit) is used, remove cap from base of BAYLEGS002, insert 4" extension into base and place cap on top of 4" extension, as illustrated in Figure 2. This needs to be performed before Step 2. Additional BAYLEGS003 (4" extension kits) may be added to achieve desired heights up to 14" maximum.

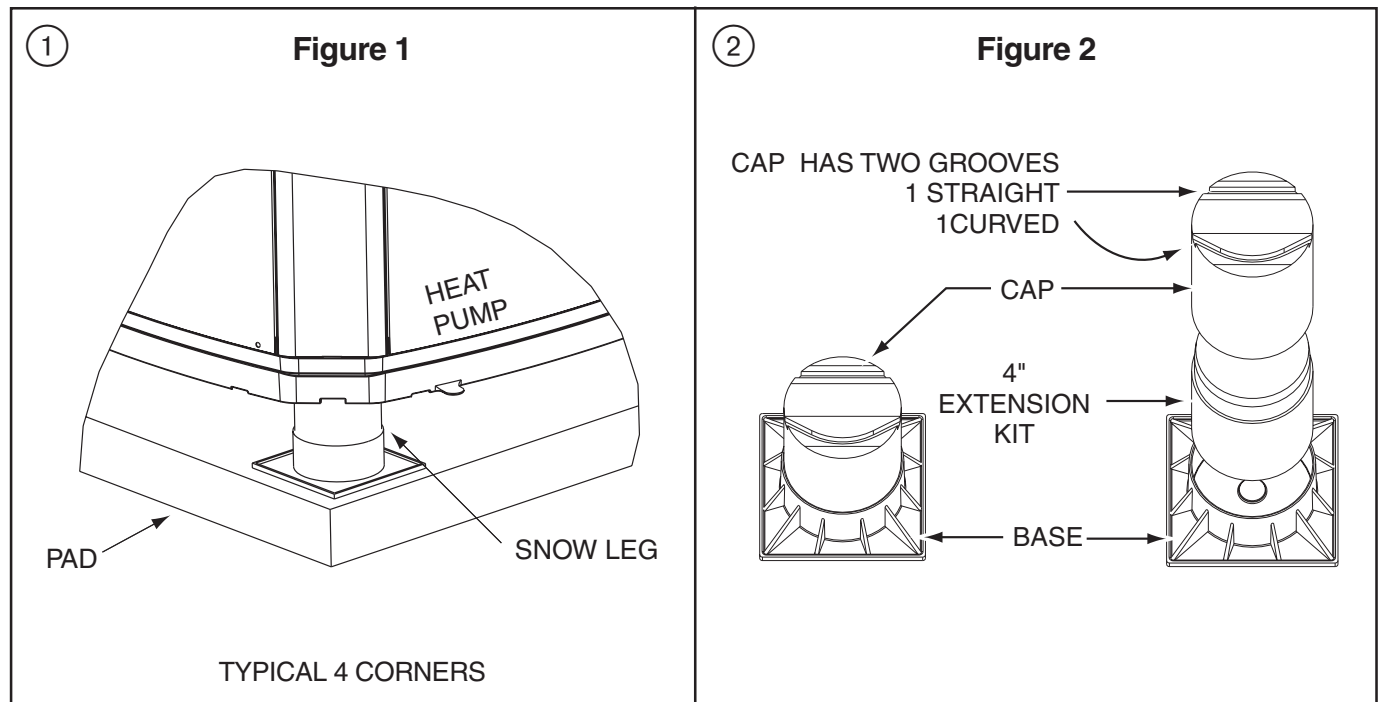

Installer's Guide

3

Figure 3

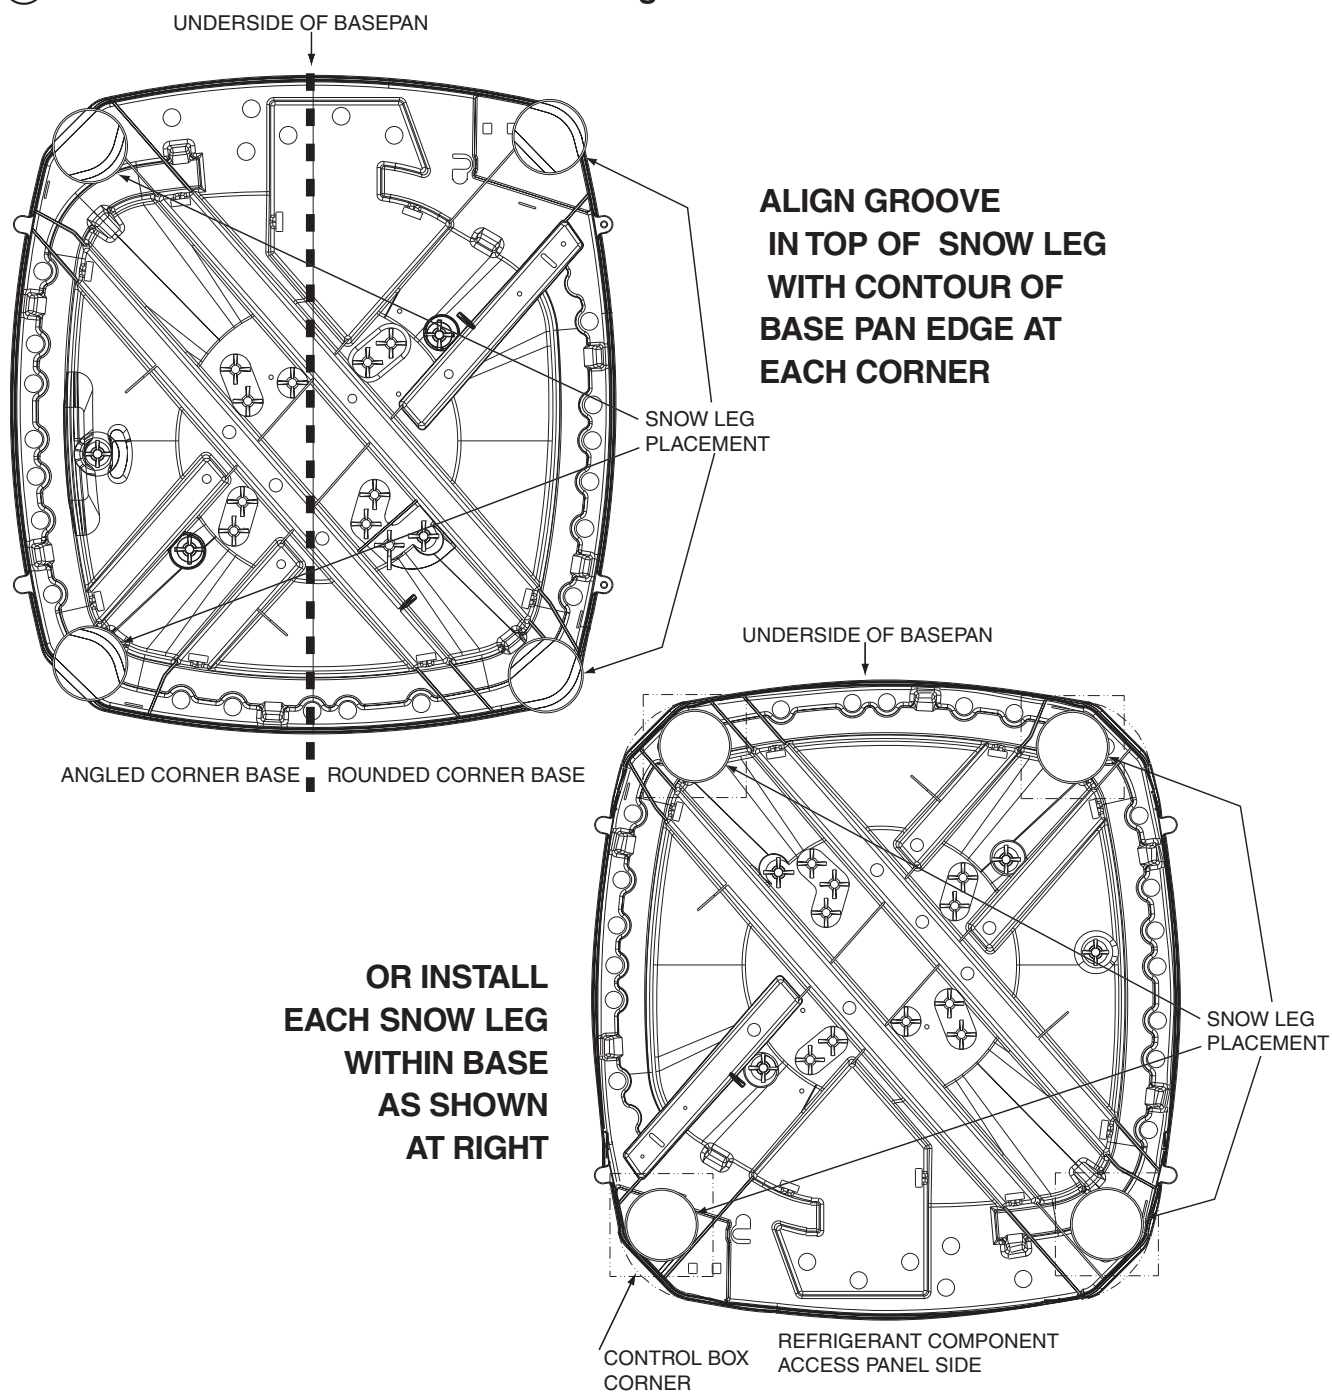

Literature Order Number	LEGS-IN-1B	
File Number	SV-UN-ACC-LEGS-IN-1B	2/03
Supersedes	LEGS-IN-1A	7/02
Stocking Location	PI Louisville & Webb/Mason-Houston	P.I.

The Trane Company
A business of
American Standard Companies

For more information contact
your local dealer (distributor)

Since the manufacturer has a policy of continuous product and product data improvement, it reserves the right to change design and specifications without notice.